

FETCH TV

To program the Flipper remote for a Fetch TV box you will need to use the “Learning” function for a Set Top Box (STB). In this process, you will teach the Flipper remote the channel change commands from the Fetch remote.

It’s a simple process that will only take a couple of minutes when done correctly.

It is best to read through the steps below before proceeding, as the Flipper remote will exit learning mode after about 30 seconds of inactivity.

TIPS:

Avoid bright rooms when programming Flipper.

When pressing the buttons on the FETCH remote, please press and release them quickly.

1: Put the Flipper in Learning Mode

- a) Place the Flipper Remote and the Fetch Remote on a table so that they are pointing towards each other (see image below).
- b) On the Flipper remote, Press and hold the **STB** and **ON/OFF** buttons until the red LED comes on. Then release both buttons. The Red LED will start flashing slowly.

2: Program the Flipper Channel Buttons


- a) On the Flipper remote, press and release the **CHANNEL DOWN**. The red LED will stay on solid.
- b) On the Fetch remote, press the **CHANNEL DOWN** button. The red LED will start to flash again.
- c) On the Flipper remote, press and release the **CHANNEL UP** button. The red LED will stay on solid.
- d) On the Fetch remote, press the **CHANNEL UP** button. The red LED will start to flash again.

3: Exit Learning Mode

- a) On the Flipper remote, press and release the **STB** button. The red LED will turn off.
- b) The Flipper remote will now control the Fetch TV channels up and down.

NOTE

For Fetch TV, only the Fetch channel changing will be controlled by the Flipper remote. For the TV Volume, Power and Mute functions, these will be operated on the TV directly.

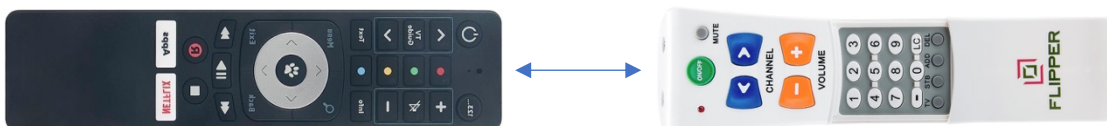

5 – 10 cm apart.

Ensure the environment is not too brightly lit