

## FOXTEL SET UP GUIDE

To program the Flipper remote for a FOXTEL iQ4 or iQ5 please follow the steps below. If you have an older iQ1, iQ2 or iQ3 Box, skip PART A and go straight to PART B.

It is best to read through the steps below before proceeding, as the Flipper remote will exit learning mode after about 30 seconds of inactivity.

### **TIPS:**

- Avoid bright rooms when programming Flipper.
- When pressing the buttons on the FOXTEL remote, please press and release them quickly.
- This guide assumes the Flipper is already controlling the TV's Power, Volume & Mute functions.

### **PART A: TURN OFF BLUETOOTH**

The Foxtel remote uses Bluetooth by default. However, Flipper uses Infrared (not Bluetooth). So, the first step is to switch the FOXTEL box to Infrared mode. To do this:

On the FOXTEL remote, PRESS and HOLD both the FOXTEL Button and the SELECT Button. As soon as the LED on the remote flashes, quickly release both buttons.

After a few moments the Bluetooth light on the front of the FOXTEL box will turn off. If it doesn't, try again and release the buttons quicker. You'll know if you have been successful as the light on the Foxtel remote will be RED when you press a button (rather than Blue).

**IMPORTANT:** If you remove the batteries from the Foxtel remote, it will default back to Bluetooth, and you will need to repeat the process above for the Flipper to work correctly.

### **PART B: PROGRAM THE CHANNEL BUTTONS**

#### **1: Put the Flipper in Learning Mode**

 
- a) Place the Flipper & FOXTEL Remote on a table so that they are pointing towards each other.
- b) On the Flipper, press and hold the **STB** and **ON/OFF** buttons until the red LED comes on. Then release both buttons. The Red LED will start flashing slowly.

#### **2: Program the Flipper Channel Buttons**

- a) On the Flipper, press and release the **CHANNEL DOWN**. The red LED will stay on solid.
- b) On the FOXTEL remote, press the **CHANNEL DOWN** button. The red LED will start to flash again.
- c) On the Flipper, press and release the **CHANNEL UP** button. The red LED will stay on solid.
- d) On the FOXTEL remote, press the **CHANNEL UP** button. The red LED will start to flash again.

#### **3: Exit Learning Mode**

- a) On the Flipper, press and release the **STB** button. The red LED will turn off.
- b) The Flipper will now control the FOXTEL TV channels up and down.

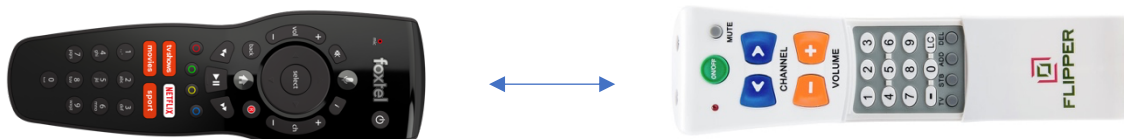

5 – 10 cm apart.

Ensure the environment is not too brightly lit