

OTHER TV Brands (Hisense, TCL, Kogan etc...)

Some less-traditional TV brands will need to be programmed using the Flippers' Learning function instead of entering a code from the list. In this process, you teach the Flipper remote the appropriate commands from the original TV remote.

It is best to read through the steps below before proceeding as the Flipper remote will exit learning mode after 30 seconds of inactivity.

It's a simple process that will only take a few minutes when done correctly.

STEP 1: Put the Flipper Remote in TV Learning Mode

- a) Place the two remotes on a table so that they are pointing towards each other (see image below).
- b) On the Flipper remote, Press and hold the **TV** and **ON/OFF** buttons until the red LED comes on. Then release both buttons. The Red LED will start flashing slowly.

STEP 2: Program the Flipper ON/OFF, VOLUME, MUTE Buttons

- a) On the Flipper remote, press and release the **VOLUME DOWN**. The red LED will stay on solid.
- b) On the TV remote, press the **VOLUME DOWN** button. The red LED will start to flash again.
- c) On the Flipper remote, press and release the **VOLUME UP** button. The red LED will stay on solid.
- d) On the TV remote, press the **VOLUME UP** button. The red LED will start to flash again.
- e) On the Flipper remote, press and release the **MUTE** button. The red LED will stay on solid.
- f) On the TV remote, press the **MUTE** button. The red LED will start to flash again.
- g) On the Flipper remote, press and release the **ON/OFF** button. The red LED will stay on solid.
- h) On the TV remote, press the **ON/OFF** button. The red LED will start to flash again.

STEP 3: Exit Learning Mode

- a) On the Flipper remote, press and release the **TV** button. The red LED will turn off.

STEP 4: Put the Flipper Remote in STB Learning Mode

- a) Keep the two remotes pointing at each other as previously...
- b) On the Flipper remote, Press and hold the **STB** and **ON/OFF** buttons until the red LED comes on. Then release both buttons. The Red LED will start flashing slowly.


STEP 5: Program the Flipper CHANNEL UP/DOWN Buttons

- a) On the Flipper remote, press and release the **CHANNEL DOWN**. The red LED will stay on solid.
- b) On the TV remote, press the **CHANNEL DOWN** button. The red LED will start to flash again.
- c) On the Flipper remote, press and release the **CHANNEL UP** button. The red LED will stay on solid.
- d) On the TV remote, press the **CHANNEL UP** button. The red LED will start to flash again.

STEP 6: Exit Learning Mode

- a) On the Flipper remote, press and release the **STB** button. The red LED will turn off.

The process is now complete. Test the Flipper remote with the TV and if any issues try again making sure the remotes are correctly pointing at each other and the lights are flashing as described at each step.

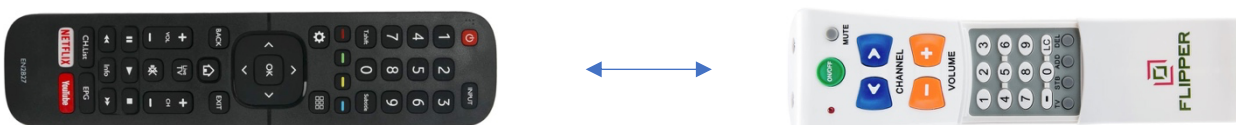

5 – 10 cm apart.

Ensure the environment is not too brightly lit.