

True Wireless Earbuds

User Manual





V20220623



PACKAGE LIST





Wireless Earbud * 2 Magnetic Charging Case * 1



User Manual * 1



Type-C Charging Cable * 1

IMPORTANT NOTES

- 1 Register your product on **tranya.com** to get an EXTRA three-month warranty for free.
- 2 Before using the F1 wireless earbuds, please charge both the case and earbuds.
- 3 If both earbuds don't sync together, please reset the earbuds.
- 4 If the earbuds don't charge, please clean the charging slot on the case and the contact surface on the earbuds.

 




6 If the sound becomes low without control, please use tweezers to take out/remove the net inside the earbuds.









BUTTON CONTROL

Play/Pause



Press one time(L/R)

Previous/Next track



Press 3 times(L/R)

Volume down/up



Press twice(L/R) Press and hold for

1 second (L/R)

Activate Siri/other voice control software

Answer/End a call



Press one time(L/R)

Reject a call



Press and hold for 1 second(L/R)

Game Mode

POWER ON



Press 4 times(L/R)

POWER OFF





Automatically

Manually (Long press and hold EACH earbud for 4 seconds)

Note: When the charging case is at low battery or out of power, the earbuds will not automatically power on/off, please turn them on/off manually.

WEARING





1 Put the earbuds into your ears.

Rotate the earbuds to auricle side to fit snugly.

Automatically

Manually (Long press and hold BOTH earbuds for 4 seconds)

CONNECT THE EARBUDS



Power on the earbuds

in your phone.

CHARGING

Power display

and turn on the Bluetooth



 


Select "F1" and confirm.

Right Earbud Power

Charging Case Power

Charging the Case



 


b. Charge it with the included Type-C cable.

 


Fully charged: Number 100% is on.

Charging: Last number is flashing.



Charging: White indicator is on; Power display lights up for 10s. Fully charged: White indicator is off.



HOW TO RESET THE EARBUDS

If your earbuds stop syncing with each other, please follow the below steps to reset the earbuds:

Remove both earbuds from the charging case, then turn them off;





8 seconds, until the red LEDs start flashing;





3 The earbuds will sync together and enter the pairing mode automatically.

FAQ

Q: Why does signal interruption occur in some places, such as along the railway and the airport?

A: There are usually lots of underground cable lines along the places mentioned above, which might cause electonmagnetic interference and result in the siganal interruption.

Q: My earbuds don't charge, what can I do?

A: Please try to follow the below steps: Clean the charging slot





10

FAQ

Manufacture:

Q: Why my earbuds don't power on/off automatically?

A: The earbuds would not power off automatically when the case is at low battery or out of power. Please recharge the case. And you can long press for four seconds to power on and long press for four seconds to power off the earbuds.

Q: Will the Bluetooth mouse cause the signal interference?

A: Perhaps. When your Bluetooth mouse and earbuds are connected to the same device, it might happen.

Name: CHANDASUNG TECH (SHENZHEN) CO.,LTD Address: Rm 802,Building B, Zhonghengsheng High-tech Zone, No.3 Xinyu Road Xinqiao Street, Bao'an District, Shenzhen, China.



REP







tranya.com

For any assistance, email us:



support@tranya.com



