

PACKAGE LIST



 
Wireless Earbud * 2
Magnetic Charging Case * 1



User Manual * 1



Ear Tips * 3 (S/M/L)





Type-C Charging Cable * 1

IMPORTANT NOTES


- 1 Register your product on tranya.com to get an EXTRA three-month warranty for free.
- 2 Before using the T10 Pro wireless earbuds, please charge both the case and earbuds.
- 3 We provide three pairs of rubber eartips (including the set installed on the earbuds), please choose the best fit for you.



  - 4 If both earbuds don't sync together, please reset the earbuds.
- 5 If the earbuds don't charge, please clean the charging slot on the case and the contact surface on the earbuds.



 - 6 If the sound becomes low without control, please use tweezers to take out/remove the net inside the earbuds.



TOUCH CONTROL

Play/Pause



Tap one time (L/R)

Previous/Next track



Tap three times (L/R)

Volume down/up



Tap twice (L/R)

Activate Siri/other voice control software



Press and hold for 1 second (L/R)

Reject/End a call



Press and hold for 1 second (L/R)

Answer a call



Tap one time (L/R)

Game Mode on/off

(Automatically Game mode off when power off)



Tap 4 times (L/R)

Normal Mode/
Bass Boosted Mode

 


Tap 5 times (L/R)

SWITCH SOUND EFFECTS

Two different sound effects on the T10 Pro: Normal Mode and Bass Boosted Mode. The Normal Mode is for those who prefer a sound with bright vocal and crisp treble. The Bass Boosted Mode is for those who prefer a warm, heavy bass.

POWER ON




Automatically




Manually

(Long press and hold BOTH earbuds for 4 seconds)

 POWER OFF



Automatically

 


Manually


(Long press and hold EACH earbuds for 4 seconds)

Note: When the charging case is at low battery or out of power, the earbuds will not automatically power on/off, please turn them on/off manually.

 WEARING

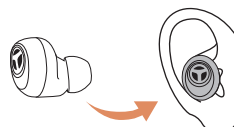


 Step 1 Put the earbuds into your ears.



Step 2 Rotate the earbuds to auricle side to fit snugly.

 CONNECT THE EARBUDS




Step 1 Power on the earbuds and turn on the Bluetooth in your phone.




Step 2 Select "Tranya T10 Pro" and confirm.

CHARGING

 
1 Charging the Earbuds

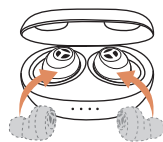

2 Charging the Case

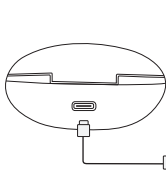 

 a. Charge it with the included Type-C cable.

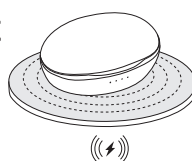

b. Charge it with a wireless charging pad (Not included).



HOW TO RESET THE EARBUDS

If your earbuds stop syncing with each other, please follow below steps to reset the earbuds:

- 1 Remove the two earbuds from the charging case, then turn them off.



①



②

- 2 Make sure the earbuds are off, then keep your fingers in the touch area up to 8 seconds, until the red LEDs start flashing.



③ 8-10"

- 3 The earbuds will sync together and enter the pairing mode automatically.

FAQ

Q: Why does signal interruption occur in some places, such as along the railway and the airport?

A: There are usually lots of underground cable lines along the places mentioned above, which might cause electromagnetic interference and result in the signal interruption.

Q: My earbuds don't charge, what can I do?

A: Please try to follow below steps:

1. Clean the charging slot on charging case.
2. Clean the charging connector on earbuds.



FAQ

Q: Why my earbuds don't power on/off automatically?

A: The earbuds would not power off automatically when the case is at low battery or out of power. Please recharge the case. And you can long press for four seconds to power on and long press for four seconds to power off the earbuds.

Q: Will the Bluetooth mouse cause the signal interference?

A: Perhaps. When your Bluetooth mouse and earbuds are connected to the same device, it might happen.