 



PACKAGE LIST

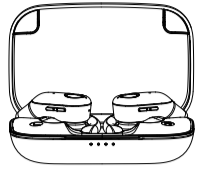


Wireless Earbud * 2
Magnetic Charging Case * 1



 User Manual * 1





Ear Tips * 6 (S/M/L)

 



Type-C Charging Cable * 1

IMPORTANT NOTES

  
- 1 Register your product on tranya.com to get an EXTRA three-month warranty for free.
- 2 Before using the T40 wireless earbuds, please charge both the case and earbuds.
- 3 Six pairs of rubber eartips. The translucent eartips are better used for deep bass mode since they are softer, and the black ones are suitable for normal mode. Please choose the best for you.

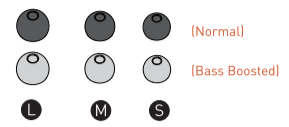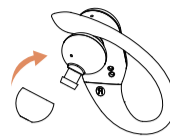

  - 4 If both earbuds don't sync together, please reset the earbuds.
- 5 If the earbuds don't charge, please clean the charging slot on the case and the contact surface on the earbuds.

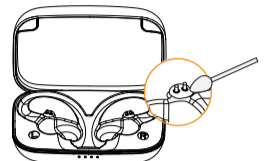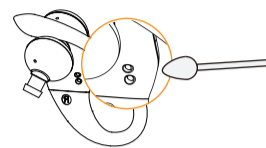

 - 6 If the sound becomes low without control, please use tweezers to take out/remove the net inside the earbuds.




PHYSICAL BUTTON CONTROL

Play/Pause



Press 1 time (L/R)

 Next/Previous track



Press and hold for 1 second (L/R)

Volume up/down



Press 1 time (L/R)

Activate Siri/Other voice control software



Press twice (L/R)

Reject/End a call



Press and hold for 1 second (L/R)

Answer a call



Press 1 time (L/R)

Game Mode on/off
(Automatically Game mode off when power off)



Press 3 times (L/R)

Normal Mode/
Bass Boosted Mode

 


Press 5 times (L/R)


SWITCH SOUND EFFECTS

Two different sound effects on the T40: Normal Mode and Bass Boosted Mode. The Normal Mode is for those who prefer a sound with bright vocal and crisp treble. The Bass Boosted Mode is for those who prefer a warm, heavy bass.

POWER ON

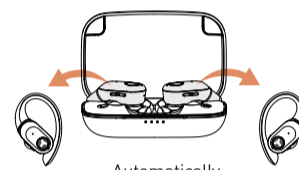


Automatically

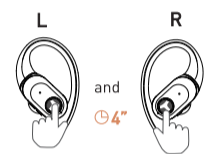 


Manually

(Long press and hold BOTH earbuds for 4 seconds)

 POWER OFF

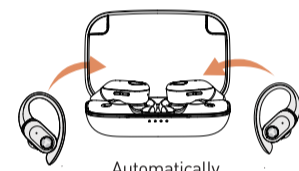

Automatically

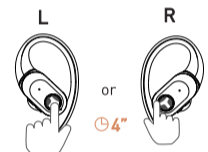 


Manually

(Long press and hold EACH earbuds for 4 seconds)

Note: When the charging case is at low battery or out of power, the earbuds will not automatically power on/off, please turn them on/off manually.

 WEARING

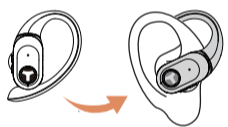

Step 1 Put the earbuds into your ears.



Step 2 Rotate the earbuds till the end of the ear hook is inserted behind the ear.

CONNECT THE EARBUDS



Step 1 Power on the earbuds and turn on the Bluetooth in your phone.



 
Step 2 Select "Tranya T40" and confirm.

CHARGING

1 Charging the Earbuds



2 Charging the Case





<25%
25%-50%
50%-75%
100%


HOW TO RESET THE EARBUDS

If your earbuds stop syncing with each other, please follow below steps to reset the earbuds:

  - 1 Pick up both earbuds and turn them off.

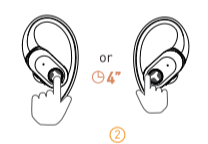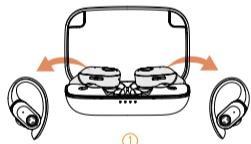

 - 2 Press and hold BOTH earbuds up to 6-8s until the red lights blink.

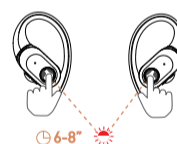

- 3 The earbuds will sync together and enter the pairing mode automatically.

FAQ

Q: Why does signal interruption occur in some places, such as along the railway and the airport?

A: There are usually lots of underground cable lines along the places mentioned above, which might cause electromagnetic interference and result in the signal interruption.

 
 
FAQ

Q: My earbuds don't charge, what can I do?

A: Please try to follow below steps:

1. Clean the charging slot on charging case.

2. Clean the charging connector on earbuds.

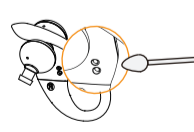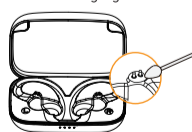

Q: Why my earbuds don't power on/off automatically?

A: The earbuds would not power off automatically when the case is at low battery or out of power. Please recharge the case. And you can long press for four seconds to power on and long press for four seconds to power off the earbuds.

Q: Will the Bluetooth mouse cause the signal interference?

A: Perhaps. When your Bluetooth mouse and earbuds are connected to the same device, it might happen.



For more information, please visit:

tranya.com

For any assistance, email us:

support@tranya.com

Made in China
FC CE RoHS