

# Spreader Light

Part#: 791X-FF-KKKK

## INSTALLATION INSTRUCTIONS

### PARTS/TOOLS NEEDED:

				
Spreader Light	Mounting Screws (not provided)	Jigsaw (not provided)	Power Drill (not provided)	Marine Grade Connectors (not provided)

### IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- It is recommended that fuse protection be added to the positive (+) input.

### OPERATING INSTRUCTIONS

- Turn power on and then off again to toggle through the different colors and brightness levels. Brightness/color levels will be as follows:

Color Option	Cycle Order
6300K	30% white / full white
Blue/6300K	20% blue / full blue / 40% white / full white
Red/6300K	20% red / full red / 40% white / full white

### 1. Surface Mount Version:

- Determine the installation location for your light and cut a 3-7/8" W x 1-3/8" H hole.
- Mark the screw holes and pre-drill.
- Wire the light using the wiring diagram below and test before finishing the install.
- Screw the light in place.
- Snap bezel onto light.




### 2. Surface Mount Version:

- Determine the installation location for your light and mark the screw holes.
- Install screws and drill a hole for the wiring.
- Wire the light using the wiring diagram below and test before finishing the install.
- Rotate the light onto the screws



### 3. Wire the light following the wiring diagram.

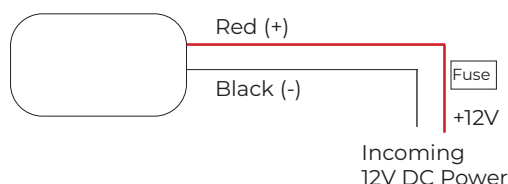

3030 Corporate Grove Dr.  
Hudsonville, MI 49426  
Phone: 616.396.1355  
[itc-us.com](http://itc-us.com)

For warranty information please visit [www.itc-us.com/warranty-return-policy](http://www.itc-us.com/warranty-return-policy)  
DOC #: 710-00200 · Rev A · 11/04/21