





# Air Flow Vents

## INSTALLATION INSTRUCTIONS

Part#: 81931 - 81938

### PARTS / TOOLS NEEDED:

			
Air Flow Vent	Hole Saw Bit	Power Drill	Jigsaw or Coping Saw

### Safety Instructions

- To avoid a hazard to children, account for all parts and destroy all packing materials.

1. Determine the installation location, drill hole a hole using a holesaw or jigsaw based on the vent type being installed (see chart below).
2. Insert the air flow vent in the hole and snap into place. Installation is complete.



3. Use the chart below to determine the hole size for your vent.

Part Number	Vent Diameter	Cut-Out Dimension
81931-B/81931	4.25"	4"
81932-W	3.25"	3"
81933-W	4.25"	4"
81932SS-HP	3.25"	3"
81933SS-HP	4.25"	4"
81934/81934-W	3.25"	3"
81935-SS/81935-W	4.25"	4"
81938-W/81938-B	15"W x 4.625"H	14" x 2.625", 3.5" Radius



3030 Corporate Grove Dr.  
Hudsonville, MI 49426  
Phone: 616.396.1355  
[itc-us.com](http://itc-us.com)

For warranty information please visit [www.itc-us.com/warranty-return-policy](http://www.itc-us.com/warranty-return-policy)  
Rev B · 06/27/25