 



## Fence Mount Table Base Installation Instructions

The Fence Mount Table Base is designed to work on formed open pontoon fences/rails or the pontoon door. Use the flat filler piece as fill when using two-sided flat fence/rail. The mount is intended to be installed and left in place; the table top can be removed as needed. Comes assembled.

### Fence Mount Table Base Parts Unassembled

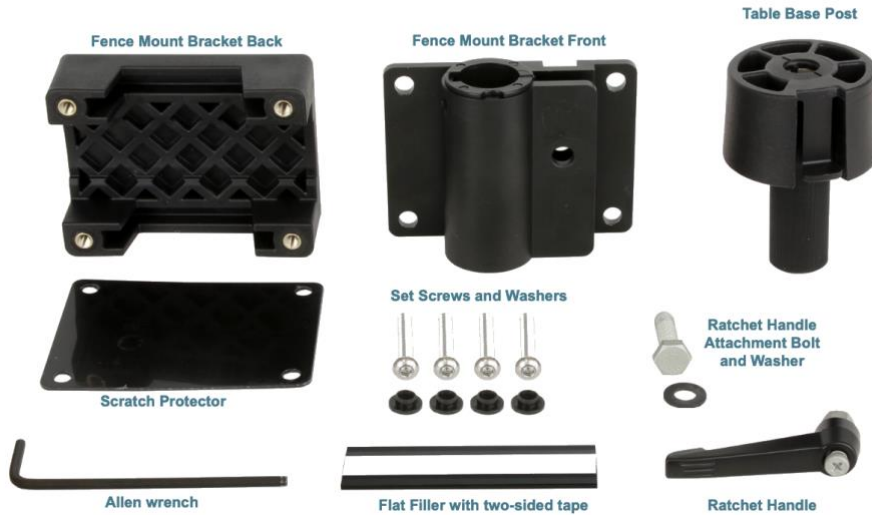
 
### Fence Mount Table Base Parts Assembled

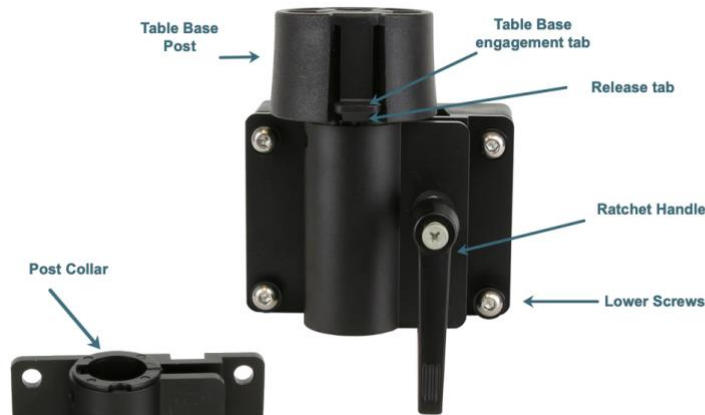

Step 1: Using the included allen wrench remove the two screws and washers on the lower half of the bracket. Loosen the screws on the top of the bracket (can be removed completely as needed) until the bracket can be opened enough to slide bracket onto pontoon fence/rail. Be sure scratch protector stays in place.

For two-sided flat fence/rail remove the paper from the two-sided tape on the flat filler piece, and adhere into the void in the bracket to allow for tighter fit.

Step 2: Once bracket is located in desired location re-insert washers and screws in lower bracket and tighten with allen wrench– tightening all four screws a little at a time to ensure an even, balance installation. Tighten until secure

Step 3: If using an ITC table with pre-installed Table Base go to the next step. If using another table top, install ITC Table Base on table top using self-sourced screws in a length that will not screw through your table top (VERY IMPORTANT do not screw or drill through the top). Place Table Base in center of the top. Mark screw hole location and predrill to start if needed or place base and attach with self-sourced screws.

Step 4: Use the ratchet handle to tighten down the collar on the table mount post. Please use caution as this handle will come completely off the Fence Mount.

Step 5: Insert table top to Fence Mount by aligning the post with the table base and push firmly and evenly down until secure.

Step 6: **PLEASE READ** - Removing the table. Using the ratchet handle loosen the collar so the post can slide out of the Fence Mount with the table (Note the ratchet will come all the way off the Fence Mount bracket). Once table is removed from the Fence Mount the post can be removed or left in for future use. To remove – press the lower release tab in toward the center – this allows the engagement tab to release from the table base, then pull out.