



# Eminence™ Overhead Light Installation Instructions

(Base Part #: 69242)

 
## PARTS/TOOLS NEEDED:

	Mounting Screws (Qty: 3)	Wire Nuts	Power Drill & Hole saw
Eminence Overhead Light	Not Provided	Not Provided	Not Provided


### IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- \*Disconnect power before installing, adding or changing any component.
- \*To avoid a hazard to children, account for all parts and destroy all packing materials.
- \*Do not use in damp or wet locations.
- \*Do not install any luminaire assembly closer than 6" from any curtain or other combustible material.


**1.** Determine the installation location. Remove existing light or drill a 3.5" hole using a hole saw.

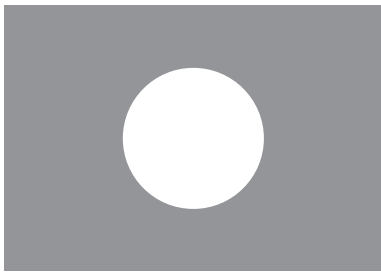

 **2.** Using the wiring diagram below, wire the light to the units power.

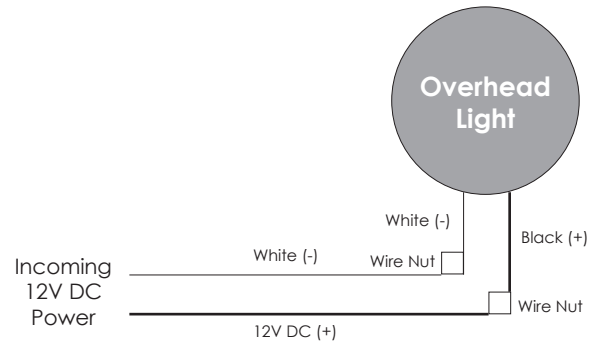

 **3A.** Installing the spring clip version:  
Push clips on both sides of light up and slide housing and clips through hole. Clips will snap down and hold the light in place. Test the light.

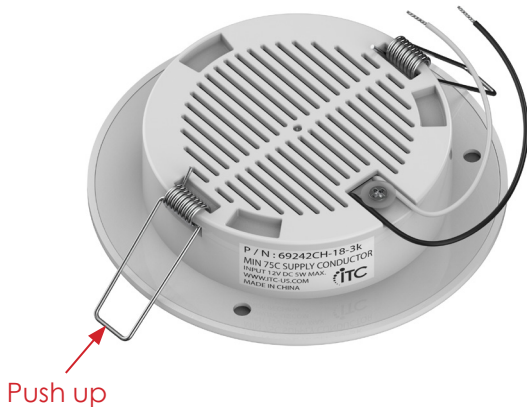

**3B.** Installing the screw mount version:  
Remove springs by pinching. Remove cover by twisting counter clockwise. Mark location of screw holes and pre-drill. Screw in fixture and re-install cover by twisting clockwise. Test the light.



For warranty information please visit [www.itc-manufacturersselect.com/warranty](http://www.itc-manufacturersselect.com/warranty)

ITC Incorporated • 3030 Corporate Grove Dr. • Hudsonville • MI • 49426

Phone: 616-396-1355 • [www.itc-us.com](http://www.itc-us.com) • Doc #: MS69242 • Revision A: 05.17.21