






Redwood™ Table Leg Installation Instructions

(Part #'s: TL5000-X-YY, TS5020-X, TS5003-X, TS5021-X)

PARTS/TOOLS NEEDED:

		
<p>Table Base, Table Leg & Floor Base</p>	<p>#10 Phillips Oval Head Screws (not provided)</p>	<p>Power Drill (Not Provided)</p>

INSTALLATION CONSIDERATIONS

- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Do not sit on or lean on table, intended for use as a table only.

1. Mount the floor base into solid floor structure (wood, fiberglass, etc.) using #10 phillips oval head screws.



2. Align the T-bolt on the bottom of the leg with the rectangular opening in the floor base*. Insert the T-bolt and begin to turn. Continue to turn the leg until the leg is secure.



3. Mount the table base onto table top (customer provided). Make sure the weight of the table top is evenly supported over the table leg. Then align the table base to the leg and push down.



Removing The Leg & Table Base

- ¹To remove the table base lift until it pops off the post.
- ²To remove the leg turn the leg counter-clockwise and lift gently until the leg removes from the base
- ³Place cover on floor base when the leg is not in place.

