



BONZY HOME
Best of New Cozy Home

Assembly Instruction

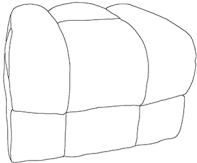
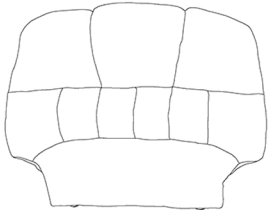
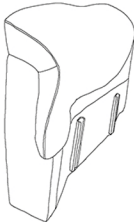
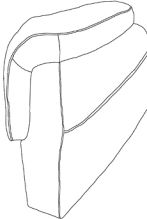
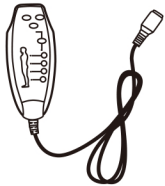
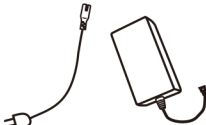




CD0212AF21D

Your recliner comes packaged in **three boxes**. Carefully remove all components from the packaging and set aside for assembly.


CAUTION:

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Package Contents


					
Box 1	Box 2	Box 3			
A1*Seat	B1*Back	C1*Left Arm	D1*Right Arm		
					
E 1* Massage Remote	F 1* Power Source	G 1* Power Cord	H 2*Supporting Feet	I 4*Screws	J 4*Gaskets

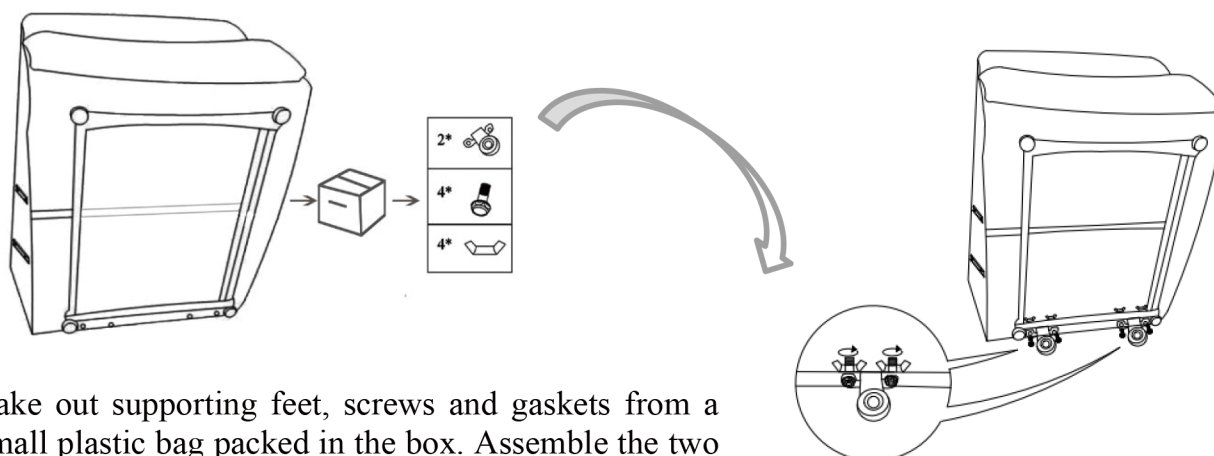Step 1




Take out supporting feet, screws and gaskets from a small plastic bag packed in the box. Assemble the two supporting feet as shown on the bottom of mechanism to avoid toppling and falling.

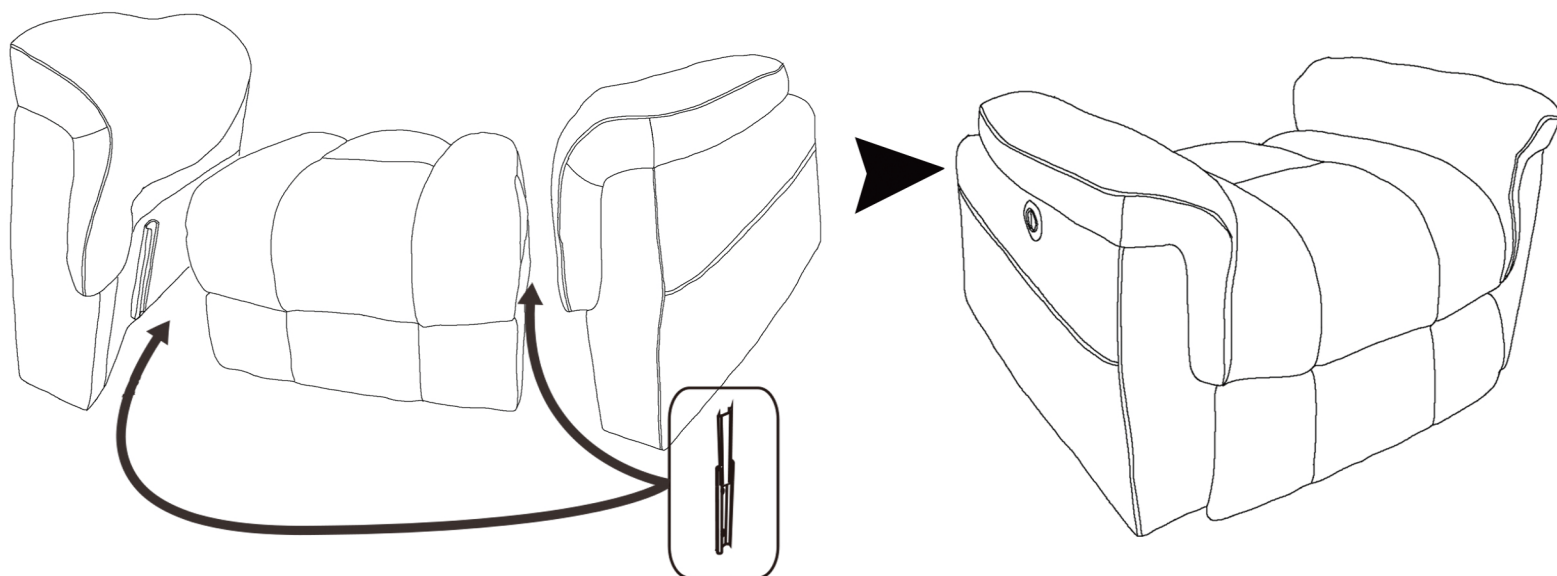Step 2 Insert two armrests to the chair base, make sure the slots on the armrests fully assembled to the bottom part.



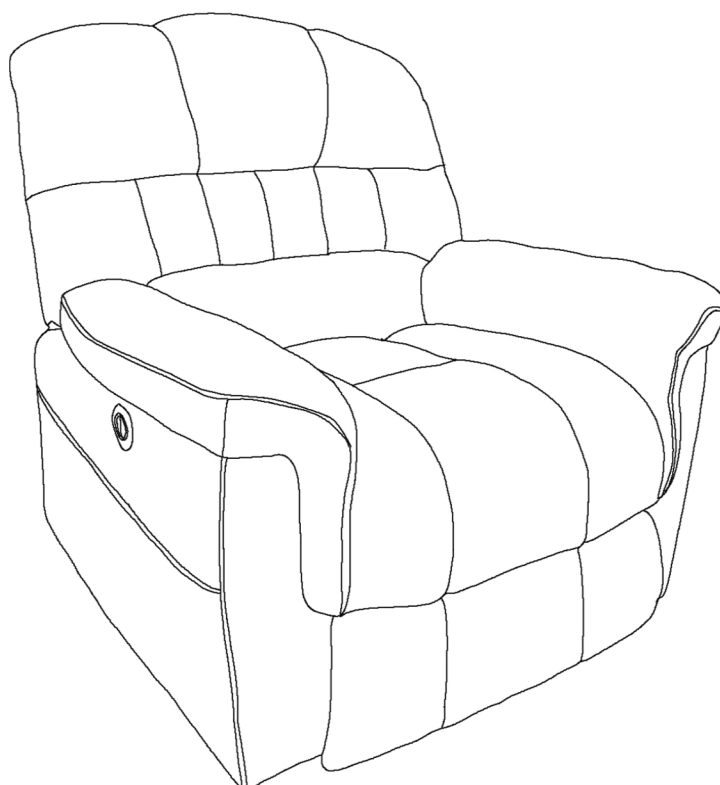Step 3 Insert chair back to the chair base, make sure the slots on the back fully assembled to the bottom part.



No.1 and No.2 wire connect with the backrest and chair seat.

No.3 wire connects with backrest and power cord(G).

No.4 wire connects with backrest and massage remote(E).

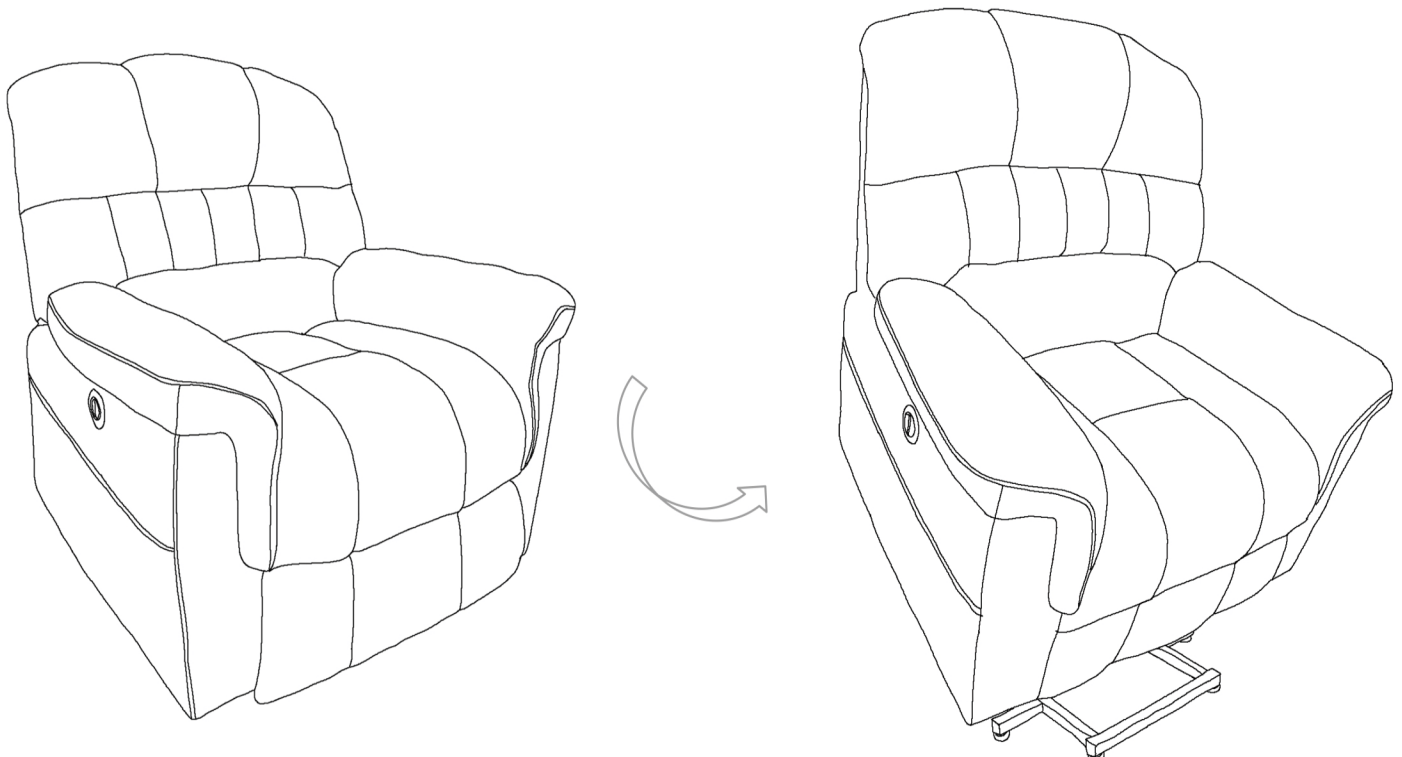
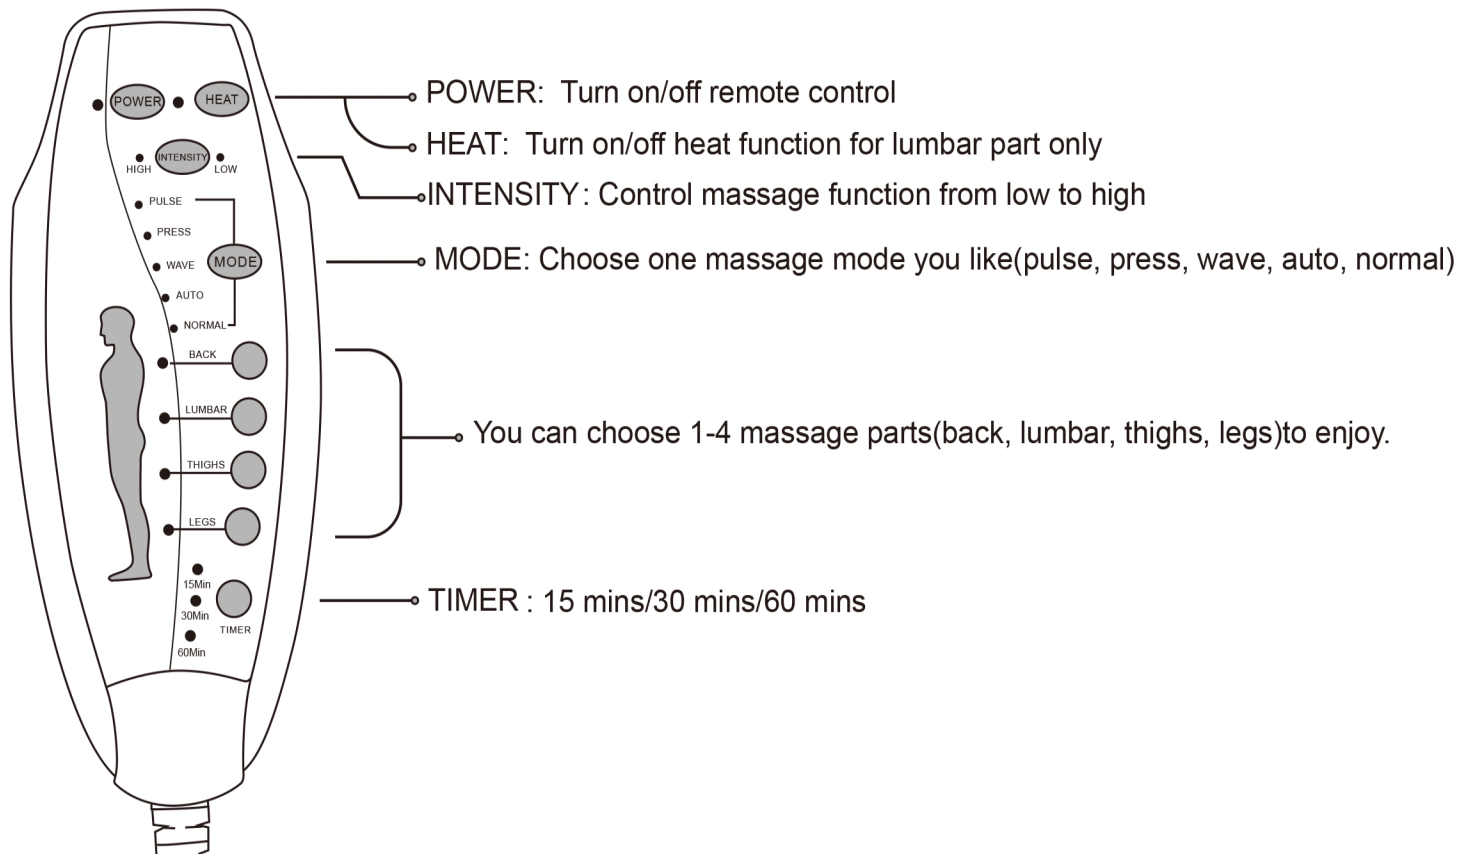
No.5 wire connect the motor and the wire from rightside armrest.
which use to connect the control panel.

No.6 wire connect the motor and power source (F).

NOTE

1. The connection plugs have different colors, black to black, white to white, red to red.
2. Plug both the **Power Cord(G)** and **Power Source (F)** into outlet to get the recliner working.

Remote Operation Instruction



*Different positions by pressing **the button** to switch, the lift recliner chair can meet your various needs.*

Warnings

1. Please check if the components of the chair are all included and can be used normally as the 6th tip.
2. Assemble all components according to the instruction correctly before you connect the chair with the power.
3. Please DO NOT sit on the armrests or footrest to eliminate the risk of tipping over.
4. Please use carefully to avoid sliding from the chair when lifting.
5. If the sofa is damaged or doesn't match the website product, please send clear pictures of the product and label of the carton to our service team, and we'll help you to solve the problem.
6. If the lift recliner doesn't work, you can try the following measures for self-checking firstly:
 - ① Check if all the cables are connected;
 - ② Check if the light of transformer is on.
 - ③ If the motor has a weak buzz on condition that two steps above are normal.

If the chair still doesn't work, please feed the information back to the customer service in time. We will help solve the problem for you as soon as possible.

7. If you have any questions with the product, please contact us by:

Email: canmov2021@gmail.com (we will reply to you within 24 hours)

Phone:(314)390-1178 (customer Service)from eastern time 9am to 5pm on business days

