



Coding your new remote to the motor

1. Press and hold down the button on the new remote you wish to program to your motor (do not let go of this button) – An orange LED will flash continuously to indicate the motor is receiving the signal from the remote
2. Press and release the Learn button on your motor once – The courtesy LED will flash once to confirm the remote has been programmed
3. Stand clear of the door and test the remote

To Delete All Remotes from the Motor

1. Press and hold the learn button on the motor until the orange LED indicator light goes out (usually takes approximately 9-10 seconds)