

1. Ensuring the power is switched off remove or loosen the screw on the GTS cover using screw driver



2. Remove the GTS cover by pulling in the directions of arrows as shown in the figure



3. Switch ON the power supply and press the LEARN button on receiver once (located on receiver board as shown)  
A red light will illuminate on the receiver board

Note: The receiver picture may vary depending on the model of the receiver compare to the picture shown in the figure



4. Press and hold any button on the handset once until red-light on receiver board turns off  
This confirms that the handset is programmed



1. Carefully remove the light cover by pulling down on tab near front of unit



2. Press the LEARN button once  
• A red light will illuminate



3. Press any button on the handset once and hold until red-light on receiver board turns off  
• This confirms that the handset is programmed



Note: To reset the receiver press and hold the learn button (2.) for 12 seconds. This will erase all handsets from the memory. This is recommended if a remote has been lost or stolen. Any other handsets previously used will need to be reprogrammed by following steps 1, 2 and 3 above.