

CODE LEARNING

If needed hinge the Courtesy Lamp Cover open to expose the **Learn or Code Set** Button otherwise

it is on the rear of the motor head



Decide which button of the new remote will control the opener

Momentarily press the **Learn or Code Set** Button

** LED Indicator will glow solid*

Momentarily press the New Remote button you want to control the door - LED indicator will extinguish

Momentarily press the same Remote button again

LED indicator will begin to flash rapidly

programming is complete once the LED Indicator ceases to flash

If required close the Courtesy Lamp Cover

CODE DELETING

All Remote codes may be deleted as follows;

If needed hinge the Courtesy Lamp Cover open to expose the **Learn or Code Set** Button otherwise it is on the rear of the motor head - Momentarily press the **Learn or Code Set** Button LED indicator will glow solid

Press and hold the black **Run** Button

LED indicator will begin to flash rapidly

All Remote Codes will have been deleted once the LED Indicator ceases to flash

If required close the Courtesy Lamp Cover