 


JUMPSMART™

10-IN-1 MULTI TOOL

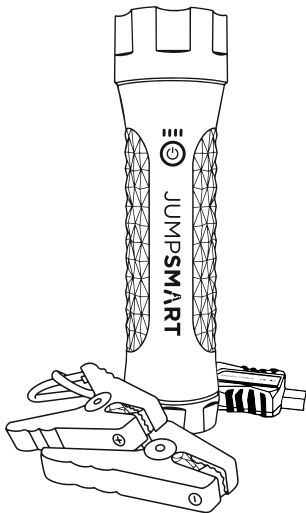

User Manual

Table of Contents

Customer Support	1
Safety Information & Warnings.....	2-5
Information de Sécurité.....	7-11
What's Included.....	12
Components.....	13
Technical Specifications	14-15
Operation Instructions	16-22
Removing the End Cap.....	16
Checking the Battery Level.....	16
Charging the JumpSmart	17
Using the Jump Starter	18-19
Using the Flashlight & Red Flashing Light.....	20
Using the Power Bank.....	21
Using the S.O.S. Alarm	21
Using the Compass	22
Using the Thermometer	22
Certification.....	23
Limited Warranty	25-30
Copyright	31

Customer Support

Your use of the product shall at all times require you to comply with the Terms, Conditions of Use, Instructions and recommendations set forth within the User Manual and the Terms and Conditions found at:

Manual: LimitlessInnovations.com/Manual/JumpSmart-10in1.pdf

Are you having issues with your product? Contact Customer Support at:
LimitlessInnovations.com/Support or call us at (855) 843-4828

Safety Information & Warnings

SAFETY FIRST: To prevent potential product damage, property damage, personal injury, or even loss of life, **READ ALL** Safety Warnings and this User Manual in its entirety before using the JumpSmart. By using the JumpSmart, you hereby agree that Limitless Innovations, Inc., an Illinois corporation and its affiliates (“Limitless”) shall have no liability for any losses associated with property damage, personal injury or loss of life that are incurred by you or by any third party in connection with or relating in any manner whatsoever to your use of the JumpSmart. By using the JumpSmart, you hereby agree at all times to comply fully with all Safety Warnings, Operation Instructions and General Safety Information in this User Manual. By using the JumpSmart, you further agree to hold harmless Limitless, (and Limitless’ officers, directors, shareholders and employees) in connection with any losses sustained by you (including, without limitation, losses arising in whole or in part from property damage, personal injury or loss of life) relating in any manner whatsoever to your use of the JumpSmart.

Safety Information & Warnings cont'd

IMPORTANT SAFETY INSTRUCTIONS

WARNING - When using the JumpSmart, basic precautions should always be followed, including, but not limited to, the following:

- Read all the instructions before using the JumpSmart.
- To reduce the risk of injury, close supervision is necessary when the JumpSmart is used near children.
- Do **NOT** insert fingers or hands into any of the ports or openings of the JumpSmart.
- Do **NOT** use any accessories that are not recommended or sold by Limitless Innovations. May result in damage to the JumpSmart and risk of fire, electric shock, or injury to person(s).
- To reduce the risk of product damage, always disconnect any cable from the plug, **NOT** the cord.
- Do **NOT** use a JumpSmart that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, shock, or risk of injury.
- Do **NOT** operate the JumpSmart with damaged accessories, plugs, ports, or cables.
- Do **NOT** attempt to disassemble or repair the JumpSmart or its accessories.
- Do **NOT** attempt to replace the battery as it is a non-serviceable part.
- Do **NOT** twist the head of the JumpSmart. Doing so may damage the internal components.

Safety Information & Warnings cont'd

WARNING - RISK OF EXPLOSIVE GASES.

- To reduce risk of battery explosion, follow these instructions and those published by Limitless Innovations and manufacturer of any equipment you intend to use in the vicinity of the battery. Review cautionary markings on all JumpSmart products and the engine.
- Misusing or incorrectly connecting your JumpSmart may cause electric shock to users, damage to the product, and/or damaged equipment..
- Do **NOT** use any non-JumpSmart-branded accessories. Doing so may result in risk of fire, electric shock, and/or injury to person(s).
- The JumpSmart may become warm during extended use. During operation, keep your JumpSmart away from materials that may be affected by these temperatures.

SAFETY PRECAUTIONS

- Always charge the JumpSmart in a well-ventilated area.
- Do **NOT** insert foreign objects into any ports or openings of the JumpSmart.
- The JumpSmart should be recycled or disposed of, as per state and local guidelines.
- Have plenty of fresh water and soap nearby in case battery acid comes in contact with skin, clothing, or eyes.
- Wear complete eye protection and clothing protection. Avoid touching eyes while working near battery.

Safety Information & Warnings cont'd

- If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters eye, immediately flood eye with running cold water for at least 10 minutes and get medical attention immediately.
- **NEVER** smoke or allow a spark or flame in the vicinity of a battery or engine.
- Be extra cautious to reduce the risk of dropping a metal tool onto a battery. It might spark or short-circuit the battery or other electrical part that may cause explosion.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do **NOT** expose the JumpSmart to fire or excessive temperatures. Exposure to fire or temperatures above 266°F may cause an explosion.

PLEASE SAVE THESE INSTRUCTIONS

Information de Sécurité

TOUT D'ABORD, LA SÉCURITÉ: Afin de prévenir des dommages potentiels à la propriété ou au produit, des blessures corporelles ou la mort, **LISEZ TOUS** les avertissements de sécurité inscrites dans ce manuel de l'utilisateur avant d'utiliser le JumpSmart. Par l'utilisation du JumpSmart, vous acceptez que Limitless Innovations, inc., une entreprise de l'Illinois, et ses affiliés (« Limitless») déclinent toute responsabilité quant aux pertes associées à des dégâts matériels, à des dommages corporels et à la mort causés par vous ou un tiers à la suite de l'utilisation du JumpSmart ou en rapport, de quelque façon que ce soit, avec votre utilisation du JumpSmart. En utilisant le JumpSmart, vous acceptez de vous conformer en tout temps à toutes les instructions de sécurité et d'utilisation, et aux consignes générales de sécurité inscrits dans ce manuel de l'utilisateur. En utilisant le JumpSmart, vous acceptez de dégager Limitless, ainsi que ses dirigeants, ses directeurs, ses actionnaires et ses employés, de toute responsabilité quant aux pertes subies (y compris, mais sans s'y limiter, les pertes engendrées en tout ou en partie, par des dommages à la propriété, des blessures ou la mort), relatives, de quelque manière que ce soit, à l'utilisation du JumpSmart.

INSTRUCTIONS IMPORTANTES SUR LA SÉCURITÉ

AVERTISSEMENT: Lorsque vous utilisez ce produit, vous devriez prendre des précautions de base, y compris les suivantes:

- Lisez toutes les instructions avant d'utiliser le produit.
- Afin de réduire les risques de blessures, une surveillance étroite est de mise lorsque le produit est utilisé près d'enfants.
- Ne placez **PAS** vos doigts ou vos mains à l'intérieur du produit.
- L'utilisation d'un accessoire qui n'est pas recommandé ou vendu par le fabricant Limitless Innovations pourrait entraîner des risques d'incendie, de décharge électrique ou de blessures corporelles.
- Afin de réduire les risques de dommage à la fiche électrique et au cordon d'alimentation, débranchez le cordon du JumpSmart en maintenant la fiche plutôt que le cordon.
- N'utilisez **PAS** un bloc-piles ou un appareil endommagé ou modifié. Les batteries endommagées ou modifiées pourraient exhiber un comportement imprévisible occasionnant des incendies et des explosions ou des risques de blessures.
- Ne faites **PAS** fonctionner le JumpSmart ou un câble de sortie si sa fiche ou son cordon sont endommagés.

Information de Sécurité a continué

AVERTISSEMENT - RISQUES DE GAZ EXPLOSIFS.

- Afin de réduire les risques d'explosion de la batterie, suivez ces instructions et celles publiées par Limitless Innovation et le fabricant de l'équipement que vous tentez d'utiliser à proximité de la batterie. Consultez les avertissements indiqués sur ces produits et sur le moteur.

AVERTISSEMENTS DE SÉCURITÉ

- Le mésusage ou la mauvaise connexion de votre JumpSmart pourraient entraîner des décharges électriques aux utilisateurs, des dommages au produit ou des dommages à l'équipement.
- Le JumpSmart et ses accessoires **NE** sont **PAS** des jouets et devraient être rangés hors de la portée des enfants.
- N'utilisez **PAS** d'accessoires autres que ceux du JumpSmart. L'utilisation d'accessoires autres pourrait causer des incendies, des décharges électriques ou des blessures.
- Ne tentez **PAS** de désassembler ou de réparer le JumpSmart ou ses accessoires.
- Ne tentez **PAS** de remplacer sa batterie, puisqu'il s'agit d'une pièce non réparable.
- Ne tournez **PAS** la tête du JumpSmart. Vous pourriez endommager des composants internes.
- Afin de réduire les risques d'endommager le produit, débranchez le cordon à partir de la fiche; **PAS** en tirant sur le cordon.

Information de Sécurité a continué

- N'échappez **PAS** le JumpSmart. Vous pourriez endommager des composants internes que vous ne pouvez pas voir. Si toutefois cela devait arriver, N'utilisez **PAS** l'appareil.
- Le JumpSmart pourrait chauffer lors d'une utilisation prolongée. Veuillez donc le garder à distance de tout matériau pouvant être affecté par la chaleur.
- Chargez toujours le JumpSmart dans un endroit bien aéré.
- N'insérez **PAS** d'objets étrangers dans les ouvertures ou les ports du JumpSmart.
- Les batteries devraient être recyclées ou jetées conformément aux directives locales ou de l'état.

PRÉCAUTIONS DE SÉCURITÉ

- Ayez suffisamment d'eau fraîche et de savon à proximité au cas où de l'acide sulfurique entrerait en contact avec votre peau, vos vêtements ou vos yeux.
- Portez une protection oculaire complète et des vêtements de protection. Évitez de vous toucher les yeux lorsque vous travaillez à proximité de la batterie.
- Si de l'acide sulfurique entre en contact avec vos vêtements, nettoyez-les immédiatement avec de l'eau savonneuse. Si de l'acide entre en contact avec vos yeux, nettoyez-les immédiatement avec de l'eau froide pendant au moins 10 minutes et consultez un médecin sans tarder.
- Ne fumez **JAMAIS**, n'approchez ou ne créez **JAMAIS** de flamme ou d'étincelles près de la batterie ou du moteur.

Information de Sécurité a continué

 
- Soyez extrêmement prudent afin d'éviter tout risque de chute d'outil métallique sur la batterie. Cela pourrait étinceler ou court-circuiter la batterie ainsi que d'autres composants électriques et entraîner une explosion.
- Lorsque vous rechargez la batterie interne, travaillez dans un endroit bien aéré et ne bloquez pas la ventilation.
- En cas d'usage abusif, du liquide peut s'échapper des batteries; évitez donc d'y toucher. Si par mégarde vous y touchez, nettoyez la région avec de l'eau. Si le liquide entre en contact avec les yeux, consultez un médecin. Le liquide qui s'écoule de la batterie pourrait causer des irritations ou des brûlures.
- N'exposez **PAS** un bloc d'alimentation à une flamme ou à des températures extrêmes. L'exposition à une flamme ou à des températures au-dessus de 130°C pourraient causer une explosion.
- Fixez les câbles de sortie à la batterie et au châssis. NE laissez **JAMAIS** les pinces de sortie se toucher.

VEUILLEZ CONSERVER CES INSTRUCTIONS

What's Included


WHAT'S INCLUDED

- 1x JumpSmart
- 1x Smart Jumper Cables
- 1x USB Wall Charger
- 1x USB Car Charger
- 1x Micro USB Cable
- 1x Carrying Pouch
- 1x User Manual

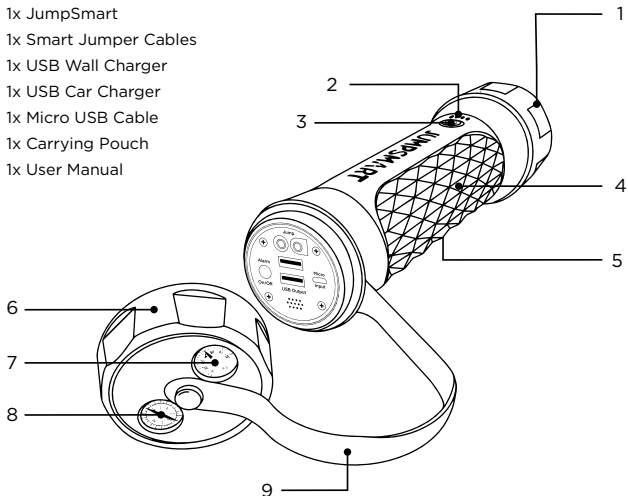


Components

 1. Flashlight / Red Flashing Light
2. Battery Capacity Indicator Lights
3. Flashlight Power Button
4. Non-Slip Grip
5. Reflector
6. Cap
7. Thermometer
8. Compass
9. Wrist Strap

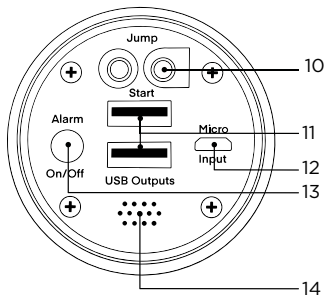

 10. Jump Starter Port
11. 2x USB Ports (Output)
12. Micro Charging Port (Input)
13. S.O.S. Alarm Power Button
14. S.O.S. Alarm Speaker
15. Smart Cable Jumper Box
16. Safety Check Lights
17. Smart Cable Mini Flashlight

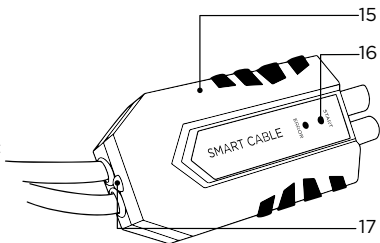

Technical Specifications

Dimensions	10IN x 2.5IN x 2.5IN
Battery Capacity	8000mAh 4-Cell
Battery Type	Lithium Polymer
Weight	2.5LBS
Micro Input	5V / 2A
USB Output	5V / 2.4A
Starter Port	DC 12V / 200A (Start) - 9V / 800A (Peak)
Jump Starter Capacity	7.0L Gas / 4.0L Diesel Engines & Below
Self-Consumption Current	<200 uA
LED Flashlight Brightness	8W 330LM
Beam Distance	495FT
Material	PC + ABS TPU
Product Working Temperature	32°F - 104°F
Battery Working Temperature	-4°F - 140°F
Storage Temperature	32°F - 104°F
Life Cycle	Approx. 1000 Times (Then Decay 70%)

Technical Specifications cont'd

The Smart Jumper Cables have 10 Safety Checks & Levels of Protection:

1. Reverse Polarity
2. Short Circuit
3. Over-Charge
4. Over-Discharge
5. Over-Temperature
6. Timeout
7. Vehicle Battery False Voltage
8. Vehicle Engine Voltage
9. Non-Sparking
10. Low Input Voltage

STORAGE INSTRUCTIONS

 
- The ideal storage location for the JumpSmart is inside in a cool, dry place.
- Batteries are affected by temperature. The ideal storage temperature is 70°F (21°C).

NOTE: If the JumpSmart is exposed to extreme temperatures (-4°F - 140°F / -20°C - 60°C), it is recommended to allow the JumpSmart to re-acclimate to the ideal temperature of 70°F before using.

Operation Instructions



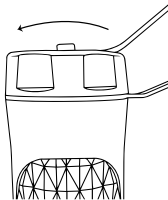

REMOVING THE CAP

 
1. Twist the Cap counterclockwise 1.5 times to remove and access the Back Panel of the JumpSmart.



CHECKING THE BATTERY POWER LEVEL

1. Activate the Battery Capacity Indicator Lights by utilizing one of the following features: Flashlight, Red Flashing Light, Power Bank, S.O.S. Audible Alarm, or Charging the JumpSmart.
2. See chart below to determine the approximate Battery Capacity:

- 25% 
- 50% 
- 75% 
- 100% 




NOTE: It is recommended to recharge the JumpSmart every three months or when there are two or less Battery Capacity Indicator Lights illuminated.

Operation Instructions cont'd

CHARGING THE JUMPSMART

 1. Remove the Cap from the Back of the JumpSmart.
2. Plug the Micro USB Cable into the Micro Charging Port (Input) on the Back Panel.
 - a. If using the USB Wall Charger:
 - 3a. Plug the USB Wall Charger into a standard 110V AC wall outlet.
 - 4a. Plug the opposite end of the Micro USB Cable into the USB Port of the Wall Charger.
 - b. If using the USB Car Charger:
 - 3b. Plug the USB Car Charger into a standard 12V Vehicle Power Socket.
 - 4b. Plug the opposite end of the Micro USB Cable into the USB Port of the Car Charger.

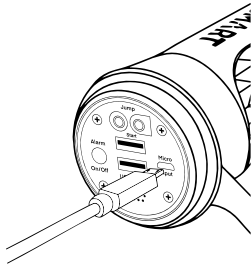


NOTE: While charging, the Battery Capacity Indicator Lights will blink to indicate the percentage of charge. When all 4 Indicator Lights have stopped blinking, the JumpSmart is completely charged. It will take approximately 3-4 hours to fully charge the JumpSmart from a completely drained battery. Additionally, while charging the JumpSmart, the USB Ports (Output) will not function.

Operation Instructions cont'd


USING THE JUMP STARTER

 1. Plug the Smart Cable Jumper Box into the Jump Starter Port located on the Back Panel of the JumpSmart.
2. Once plugged in, the green and red Safety Indicator Lights will flash in an alternating pattern on the Smart Cable Jumper Box. The Smart Cables can now be connected to the battery terminals.

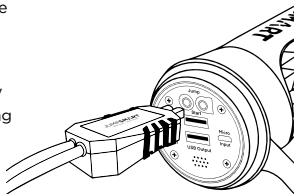

TIP: Use the Smart Cable Mini Flashlight located on the end of the Smart Cable Jumper Box to shine light on the battery terminals.

 3. Connect the **RED** clamp of the Smart Cables to the **POSITIVE (+)** terminal of the vehicle battery.
4. Connect the **BLACK** clamp of the Smart Cables to the **NEGATIVE (-)** terminal of the vehicle's battery.
5. Once both the positive and negative clamps are properly connected, the "Start" (green) Safety Indicator Light on the Smart Cable Jumper Box will remain illuminated. The vehicle is now ready to be started.

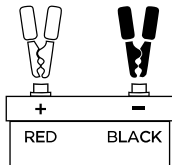


Operation Instructions cont'd

NOTE: If the red “Error” Safety Indicator Light illuminates after connecting the Smart Jumper Cables to the battery terminals, check the connection.

If the battery terminal is heavily corroded it may cause a bad connection. Refer to the vehicle’s owner manual on how to clean.

 If the “Error” message continues, one of the 10 Safety Checks listed on page 15 were found. See a certified mechanic.

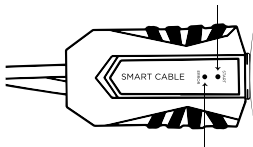

6. Once the vehicle has been successfully started, proceed to remove the Jumper Cables in the reverse order that they were attached, beginning with the Black Jumper Cable.

NOTE: If the vehicle does not start after the first attempt, disconnect the Smart Cables from the JumpSmart and wait at least 60 seconds before repeating steps 1-4.

Do not attempt to jump start a vehicle more than three times. If the vehicle battery does not start after the third try, consult a certified mechanic.

Operation Instructions cont'd

 
USING THE FLASHLIGHT

1. Single click the Flashlight Power Button to turn the Flashlight on. The Flashlight is now in High Mode.
2. Single click the Flashlight Power Button to scan through the Flashlight modes;
 - High (default)
 - Low
 - S.O.S.
 - Strobe
 - Off
3. To turn off the Flashlight without scanning through the modes, press and hold the Flashlight Power Button for approximately 2 seconds.

NOTE: If the Flashlight and the Power Bank are being used simultaneously, the light may appear dimmer.

USING THE RED FLASHING LIGHT

4. Press and hold the Flashlight Power Button for approximately 2 seconds to turn the Red Flashing Light on.
5. Single click the Flashlight Power Button again to turn the Red Flashing Light off.

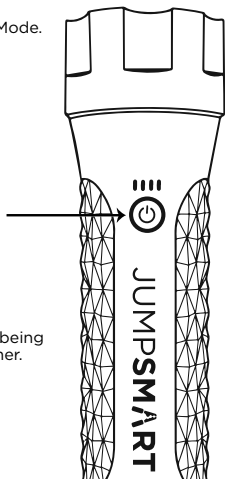


Operation Instructions cont'd

USING THE POWER BANK

1. Remove the Cap from the Back Panel of the JumpSmart
2. Plug a USB cable into one of the USB Charging Ports (Output).
3. The Battery Capacity Indicator Lights will illuminate if properly connected and ready to use.
4. Plug the opposite end of the USB cable into a mobile device. The device will begin to charge.
5. Repeat steps 2 and 4 to charge a second mobile device.


NOTE: If the Flashlight and the Power Bank are being used simultaneously, the device may charge at a slower rate.

 NOTE: When using both USB Ports (Output), the power will be shared between both ports.

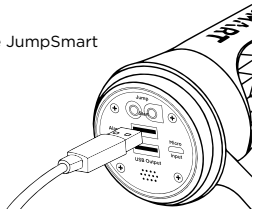

USING THE S.O.S. AUDIBLE ALARM

 1. Remove the Cap from the Back Panel of the JumpSmart
2. Press the S.O.S. Power Button located on the Back Panel of the JumpSmart to activate the Alarm.
3. Press the S.O.S. Power Button again to deactivate the Alarm.

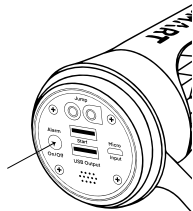


Operation Instructions cont'd

USING THE COMPASS

1. With the Cap attached, hold the JumpSmart in a vertical position directly in the front and center of your body, or stand the JumpSmart on a flat surface for a more accurate reading.
2. The Compass will adjust and point to magnetic north.

USING THE THERMOMETER

 1. The Thermometer will automatically indicate the current temperature.
2. For an accurate reading, place the JumpSmart out of direct sunlight and wait approximately 5 minutes for the thermometer to acclimate.

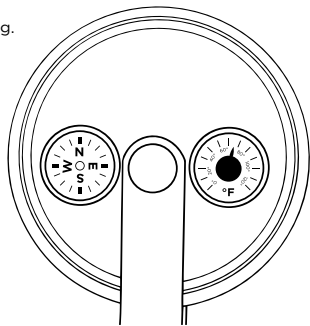

Certification

ETL

JumpSmart is ETL certified to conform to ANSI/CAN/UL STD. 2743 and tested to comply with FCC Standard Part 15 for safety and reliability under the United States and Canadian standards.

FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- a. Reorient or relocate the receiving antenna.
- b. Increase the separation between the equipment and receiver.
- c. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- d. Consult the dealer or an experienced radio/TV technician for help.

FCC NOTICE TO USERS: Unauthorized changes or modifications to this unit not expressly approved by the party responsible for compliance could impair the user's ability to operate this device and will void the Warranty.

Limited Warranty

We stand behind each product with a (1) Year Limited Warranty by Limitless Innovations.

Your use of the product shall at all times require you to comply with all Terms, Conditions of Use, Instructions and Recommendations set forth within the JumpSmart and Terms and Conditions found at:

Manual:

LimitlessInnovations.com/Manual/JumpSmart.pdf

Warranty Terms & Conditions:

LimitlessInnovations.com/Warranty

Are you having issues with your JumpSmart product? Contact our support team today at: LimitlessInnovations.com/Support or call us at (855) 843-4828

Subject to the exclusions contained below, Limitless Innovations, Inc. (“Limitless”) warrants the JumpSmart product to be free from defects in materials and workmanship under normal consumer usage for a period of one (1) year from the date of original purchase, (the “JumpSmart Limited Warranty”). As utilized herein, the term “JumpSmart” (or the singular, JumpSmart product) shall include all products set forth above in the What’s Included section of this User Manual that may be sold by Limitless now or in the future.

This JumpSmart Limited Warranty is a consumer’s sole and exclusive remedy regarding any express warranty claim by a consumer and is subject to the exclusions on the following pages:

Limited Warranty cont'd

Exclusions: The JumpSmart Limited Warranty shall not apply in the event of the occurrence of any of the following:

- 1. Normal Wear and Tear.** The JumpSmart Limited Warranty shall not apply to cover the maintenance, repair and/or replacement of parts or the JumpSmart products due to normal wear and tear by the consumer.
- 2. Abuse and Misuse.** The JumpSmart Limited Warranty shall not cover defects or damage that result in whole or in part from: (a) improper operation, storage, misuse or abuse, accident or neglect by the consumer (including, without limitation, physical damage, cracks and scratches to the surface of the JumpSmart product; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the JumpSmart product for commercial purposes; (d) subjecting the JumpSmart product to abnormal usage or conditions; and/ or (e) other acts which are not the sole and absolute fault of the JumpSmart.
- 3. Unauthorized Service or Modification.** The JumpSmart Limited Warranty shall not cover defects or damages resulting in whole or in part from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other JumpSmart or its authorized service centers.
- 4. Altered Products.** The JumpSmart Limited Warranty shall not cover defects or damages to a JumpSmart product with (a) serial numbers or date tags that have, at any time, been removed, altered, or obliterated;

Limited Warranty cont'd

(b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) non-conforming or non-JumpSmart housings, or components.

- 5. Communication Services.** Defects, damage, or the failure of the JumpSmart products due to any communication service or signal you may subscribe to or use with the JumpSmart product or software.

WHO IS COVERED?

This Warranty extends only to the first consumer purchaser and is not transferable to any third party nor applicable to any subsequent owner other than the first consumer purchaser.

WHAT WILL LIMITLESS DO?

If Limitless determines, in its sole and absolute discretion, that a claim is subject to the JumpSmart Limited Warranty, it will, at its sole option, repair or replace the JumpSmart product or alternatively, it will, in its discretion, refund the purchase price of any JumpSmart products or software. The JumpSmart product replacement will be with a functionally equivalent reconditioned / refurbished / pre-owned or new JumpSmart product or part.

For additional information, visit us at:

LimitlessInnovations.com/Support or call us at (855) 843-4828

Limited Warranty cont'd

WHO DO I CONTACT TO MAKE A CLAIM?

In the event of any warranty claim under the JumpSmart Limited Warranty, you can contact the telephone number below or provide a written correspondence to the address below at which time and in response thereto, you will receive instructions on how to ship any JumpSmart product at your expense, to a Limitless authorized repair center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name if your service provider, if applicable; and (d) your mailing address, email address and telephone number.

Mailing Address

(Please call (855) 843-4828 first to obtain RMA #)

Limitless Innovations, Inc.
4800 Metalmaster Way
McHenry, IL 60050

WHAT OTHER LIMITATIONS ARE THERE?

ANY WARRANTY CLAIM SHALL BE LIMITED TO LIMITLESS COST OF MATERIAL ON THE JUMPSMART PRODUCT DETERMINED TO HAVE A MANUFACTURER'S DEFECT. IN NO EVENT SHALL LIMITLESS BE LIABLE TO ANY PARTY FOR ANY LABOR COSTS OR ANY OTHER DIRECT, INDIRECT,

Limited Warranty cont'd

CONSEQUENTIAL, INCIDENTAL OR SPECIAL DAMAGES, WHETHER IN CONTRACT OR TORT AND LIMITLESS EXPRESSLY DISCLAIMS LIABILITY FOR ANY DAMAGES OF ANY KIND ARISING UNDER ANY THEORY OF LAW WHATSOEVER.

THE PERFORMANCE OF THE JUMPSMART PRODUCT DEPENDS ON THE PURCHASER'S ADHERENCE TO MANUFACTURER PRODUCT INSTRUCTIONS AND LIMITLESS WILL NOT BE RESPONSIBLE TO PURCHASER FOR ANY DEVIATIONS THEREFROM. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION REGARDING INCIDENTAL OR CONSEQUENTIAL DAMAGES MAY NOT APPLY TO YOU. ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE SHALL EXPIRE ON THE DATE WHICH IS 1 YEAR FROM THE DATE OF FIRST PURCHASE OF THE JUMPSMART PRODUCT BY THE CONSUMER. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. WITH RESPECT TO THAT PERIOD OF TIME BEYOND THE JUMPSMART 1 YEAR LIMITED WARRANTY PERIOD, LIMITLESS DISCLAIMS AND FURTHER MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Limited Warranty cont'd

PLEASE NOTE THIS JUMPSMART LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHT, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

NATIONAL STATUTORY RIGHTS

CONSUMERS IN SOME JURISDICTIONS MAY HAVE LEGAL RIGHTS UNDER APPLICABLE NATIONAL LEGISLATION GOVERNING THE SALE OF CONSUMER GOODS, INCLUDING, WITHOUT LIMITATION, NATIONAL LAWS IMPLEMENTING EC DIRECTIVE 99/44. THESE RIGHTS ARE NOT AFFECTED BY THE WARRANTIES IN THIS LIMITED WARRANTY.

For the full Warranty, Terms, and Conditions, please visit:
www.LimitlessInnovations.com/Warranty

Copyright

All rights reserved. JumpSmart is a registered trademark of Limitless Innovations, Inc. Design and specifications subject to change without notice. Products may vary from images shown. All other trademarks included herein are property of their respective owners.

JUMPSMART™

10-IN-1 MULTI TOOL

Made in China

Phone: (855) 843-4828

Email: Support@LimitlessInnovations.com

Website: LimitlessInnovations.com

© Limitless Innovations, Inc.



@LimitlessInnovations



/LimitlessInnov



/LimitlessInnov



/LimitlessInnov



Limitless Innovations