

LIMITLESS

Tassel Keychain Power Bank

Quick Start Guide

WHAT'S INCLUDED

- (1) Tassel Keychain Power Bank
- (1) Carabiner Ring
- (1) 36in Type-C to USB Charging Cable with Lightning & Micro Adapters



COMPONENTS

- USB Charging Port (Output)
- 2. Type-C Port (Input)
- 3. Power Indicator Light
- 4. Leather Tassels
- 5. Carabiner Ring
- 6. USB Plug
- 7. Type-C Connector (Power Source)
- 8. Lightning Adapter Tip*
- 9. Micro Adapter Tip*

*Attaches to Type-C Tip, when needed

See backside of this document for further instructions on how to use the 36in Type-C to USB Charging Cable with Lightning & Micro Adapters.

6 7 8 9

TECH SPECS

Model:

LIM-TSSL-XXX

Battery Capacity:

2,500mAh

Recharging Time (From 0%):

±3 Hours

Type-C Port (Input):

5V/2A

5V/2A

USB Charging Port (Output):

Dimensions:

4.02 in x 1.06 in x 1.06 in

Weight:

2.68 oz (0.17 lbs)



Scan to learn more about using the features of your Tassle Keychain Power Bank:

Compatibility:

Micro: Select Tracfones, Speakers, Cameras, Power Banks, & More

Lightning: Compatible with iPhones, AirPods, & Most Apple Devices

Type-C: Compatible with newer devices by Samsung, Microsoft, LG, Google, Huawei, select Apple iPads (2018 and newer), select Tracfones, and More.

GETTING STARTED

The Tassel Keychain Power Bank will arrive with a partial charge. It is recommended to charge the battery to 100% upon arrival and after each use. The included Charging Cable is reversible and can recharge the power bank or another USB-chargeable device.

Carabiner Ring

The Carabiner Ring will come attached to the Tassel Keychain Power Bank. Push the lever to attach it to a purse or keychain.



CHARGING THE POWER BANK

Plug the Type-C Connector into the Type-C Input and a USB charger (not included). The Power Indicator Light will blink while charging and will go solid once fully charged.



The Power Indicator Light will blink once the battery level reaches 5% to indicate it is time to recharge.

RECHARGING A DEVICE

Plug a USB charging cable into the USB Output then into a USB chargeable device. The device will begin to charge.

How to Use the 36in Charging Cable (See Figure A)

*The Type-C Connector is the power source. The Lightning and Micro adapters will **NOT** charge anything without being connected to the Type-C Connector.

- 1. Choose the charging adapter that is compatible with the device.
- If the device uses the Type-C Connector, plug it directly into the device.
- 3. If the device uses the Lightning or Micro adapters:
 - A. Insert the Type-C Connector into the bottom of the adapter.
 - B. Once the Type-C is connected to the compatible adapter, plug the adapter into the device.
- Connect the USB Plug on the Charging Cable to the USB Output. The device will begin to charge.

