


TIKITUNES™

4FT POLE & STAKE

WHAT'S INCLUDED:

- A. 1x Stake
- B. 5x 8IN Pole Sections
- C. 1x Threaded Adapter

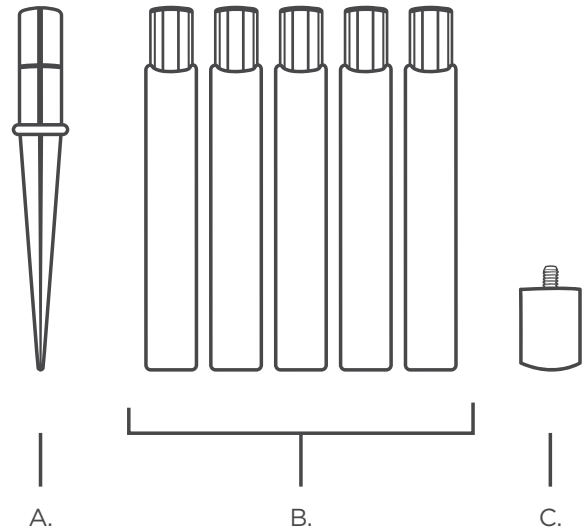

ASSEMBLY INSTRUCTIONS:

1. Connect the Ground Stake (A) to one of the 8IN Pole Sections (B).
2. Push the pointed end of the Stake (A) into the ground until it is secured

DO NOT attempt this step when more than one 8IN Pole Section (B) is connected as that may cause it to break.

3. Attach additional 8IN Pole Sections (B) until desired height has been met. The total height is 4ft when all 5x 8IN Pole Sections (B) are being used with the TikiTunes mounted.
4. Add the Threaded Adapter (C) to the last 8IN Pole Section (B).
5. Install the TikiTunes Wireless Speaker by screwing the unit on to the Threaded Adapter (C).

DO NOT over-tighten the TikiTunes Wireless Speaker onto the Threaded Adapter (C) as it may strip.

SPECIFICATIONS

- **THREADED ADAPTER: 1/4-20**
- **POLE: 5x 8IN SECTIONS**
- **HEIGHT: 40IN MAX, 4FT WITH TIKITUNES**