By using the TotalDesk™ you hereby agree that Limitless Innovations, Inc., an Illinois corporation and its affiliates ("Limitless") shall have no liability for any losses associated with property damage, personal injury or loss of life that are incurred by you or by any third party in connection with or relating in any manner whatsoever to your use of the TotalDesk™. By using the TotalDesk™, you hereby agree at all times to comply fully with all safety warnings, operating instructions and general safety information in this User Manual. By using the TotalDesk™, you further agree to hold harmless Limitless, (and Limitless' officers, directors, shareholders and employees) in connection with any losses sustained by you (including, without limitation, losses arising in whole or in part from property damage, personal injury or loss of life) relating in any manner whatsoever to your use of the TotalDesk™.

SAFETY WARNINGS

- Do NOT sit, stand, jump on, or otherwise apply excessive weight or pressure to the TotalDesk™.
- Do NOT exceed the weight limit of 20lbs on the Desktop. Exceeding this weight limit may result in bowing of the desktop and/or damage to the Legs of the TotalDesk™ and will void the Warranty.
- The TotalDesk™ and its accessories are **NOT** toys and should be kept away from children.
- Do NOT attempt to modify, disassemble, or repair the TotalDesk™ and/or any
 of its accessories. Doing so will void the warranty.
- Do **NOT** expose the TotalDesk™ extreme heat or place near fire.
- Do **NOT** use sharp objects on the TotalDesk™. Doing so will scratch or tear the PVC leather Desktop.
- If this device is accessible to or may be used by a minor, purchasing adult agrees to be solely responsible for providing supervision, instruction, and warnings. Purchaser agrees to defend, indemnify, and hold Limitless harmless for any claims or damages arising from unintended use or misuse by a minor.

Made in China

Phone: (855) 843-4828

Email: Support@LimitlessInnovations.com

Website: LimitlessInnovations.com

© Limitless Innovations, Inc.












Limitless Innovations



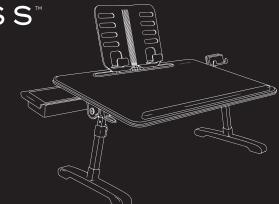

TotalDesk™ Adjustable Workstation User Manual

TotalDesk™ Specifications

Desktop Size

23,00 in x 14,50 in

Desktop Height

10.25 in (Min) 13.25 in (Max)

Materials

ABS, PVC, Polypropylene, Aluminum

Min Size (Folded)

Length: 23.00 in Width: 14.50 in Height: 2.75 in

Max Size (Standing)

Length: 23.00 in Width: 14.50 in Height: 13.25 in

1-YEAR LIMITED WARRANTY

We stand behind our products! For complete Warranty details please visit: LimitlessInnovations.com/Warranty

CONTACT US

Our team is happy to hear from you and is ready to provide prompt and exemplary customer service. If you have any feedback or questions about your purchase, please do not hesitate to contact us.

(855) 843-4828 | Support@LimitlessInnovations.com

For product information, FAQs, videos, and more, please visit:

LimitlessInnovations.com/Products/TotalDesk


SHARE & REVIEW

Your experience could help the next customer! Please take the time review the TotalDesk™ to help others with their purchase!


TotalDesk™

COMPONENTS

- Desktop
- 2. Accessory Slot
- 3. Book/Tablet Stand
- 4. Phone Mount
- 5. Desktop Stopper
- 6. Desk Leg
- 7. Height Adjustment Lock
- 8. Surface Glides

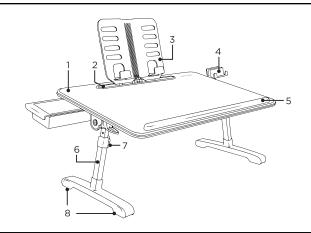


- 9. Phone Mount Bracket
- 10. Tilting Adjustment Lever
- 11. Cable Openings
- 12. Book/Tablet Stand Storage
- 13. Drawer
- 14. Foldable Leg Joints

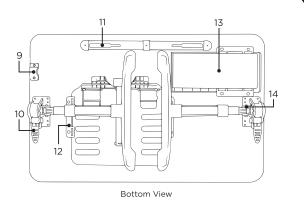

SETTING UP THE TOTALDESK™


UNFOLD

 With the Desktop facing down, pull the Desk Legs upwards until they lock in place.



FOLD

With the Desktop facing down, push the legs

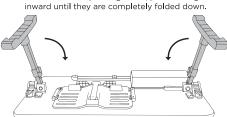

ADJUSTING THE TABLE HEIGHT

The TotalDesk™ has 4 height positions to choose from.


UP

While holding the Desk Leg, pull up on the Desktop. It will automatically lock in place at the first height position. Repeat until the desired height position is met.




DOWN

Press and hold the Height Adjustment Lock and lightly push the Desktop down. Release the Height Adjustment Lock to align with the desired height position. Repeat this step on the opposite Desk Leg.

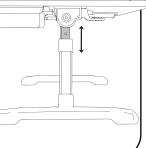

ADJUSTING THE TILT ANGLE

- 1. Rotate both Tilt Adjustment Levers downwards to unlock the Desktop.
- 2. Apply pressure to the front side of the Desktop to tilt it to the desired angle.
- 3. Rotate both Tilt Adjustment Levers all the way up until to lock the angle of the Desktop.

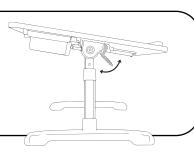


REMOVING THE BOOK/TABLET STAND

The Book/Tablet Stand is stored under the Desktop and can be removed by pulling it outwards. To store, align the bottom of the Book/Tablet Stand with the tracks and push in until it clicks in place.


FREE STANDING

Set up the Book/Tablet Stand anywhere by unfolding the Kickstand on the back to use as a tripod.

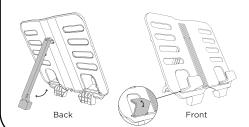

ACCESSORY SLOT


Insert the angled feet at the bottom of the Book/Tablet Stand into the Accessory Slot.

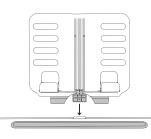

USING THE PHONE MOUNT

Insert the arm of the Phone Mount into the Bracket attached to the underside of the Desktop.

The Bracket is capable of positioning the Phone Mount at virtually any angle. Do not try to rotate the Phone Mount while installed in the Bracket. Remove the Phone Mount completely and re-insert at the desired angle.

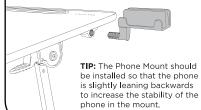

USING THE ACCESSORY SLOT

Virtually any mobile device can be mounted to the top of the TotalDesk™ by inserting it into the Accessory Slot. There is a rubber grip inside the slot to secure devices.

TIP: Insert a charging cable through the Cable Openings at the bottom of the Accessory Slot to charge a device while mounted in the TotalDesk™. (Charging accessories not included).

