

1 DRAG KNOB ASS'Y   2 RETAINER RING   3 EARED DRAG WASHER   4 KEYED DRAG WASHER   5 FRICTION WASHER	
3 EARED DRAG WASHER   4 KEYED DRAG WASHER   5 FRICTION WASHER	
4 KEYED DRAG WASHER 5 FRICTION WASHER	
5 FRICTION WASHER	
6 CLICK RATCHET	
7 SPOOL SUB ASS'Y	
7A CLICK PAWL PILLER	
7B CLICK PAWL	
7C CLICK PAWL SPRING	
7D CLICK SPRING WASHER	
7E SCREW	
8 WASHER	
9 WASHER	
10 CLICK RATCHET	
11 MAIN SHAFT	
12 SCREW	
13 BAIL ASSEMBLY	
14 WASHER	
15 BALL BEARING x1	
16 LINE ROLLER	
17 WASHER	
18 WASHER	
19 BRACKET	
20 SCREW	
21 SCREW	
22 SCREW	
23 BAIL ARM COVER	
24 TRIP LINK	

KEY NO.	PART NAME
25	TRIP SPRING
26	TRIP SPRING HOLDER
27	BAILTRIP WIRE
28	SCREW
29	LOCK WASHER
30	PICK UP HOUSING NUT
31	PICK UP HOUSING
32	SCREW
33	BEARING SLEEVE
34	BALL BEARING x1
35	BEARING COVER
36	SCREW
37	WASHER
38	WASHER
39	ONE WAY CLUTCH
40	WASHER
41	BALL BEARING x1
42	PINION
43	LOCK WASHER
44	N-R PAWL
45	N-R PAWL STUD
46	N-R SPRING
47	N-R STEM
48	NR STEM SPRING
49	O RING
50	N-R SCREW
51	N-R LEVER
52	FRAME
53	HANDLE LOCK SCREW

KEY NO.	PART NAME
54	WASHER
55	BUSHING
56	BALL BEARING x1
57	DRIVE GEAR
58	DRIVE GEAR WASHER
59	BALL BEARING x1
60	BUSHING
61	SIDE COVER
62	SCREW
63	SCREW
64	CRANK SUB ASS'Y
65	BALL BEARING x1
66	HANDLE
67	BALL BEARING x1
68	SCREW
69	PLUG
70	REAR COVER
71	SCREW
72	BALL BEARING x1
73	LEVEL WIND GEAR
74	LEVEL WIND GEAR COVER
75	SCREW
76	SELF LOCKING WASHER
77	BALL BEARING x1
78	LEVER WIND BRACKET
79	SCREW
80	L. W. BRACKET PLATE
81	SCREW
82	SCREW