

Bicycle Wall Hanger

Storage or display rack. For mounting a single bike vertically on a wall.



Tools Required

Drill Drill bit

Hammer (if wall plugs are used)
Phillips head screwdriver

Parts

- a | Wall hanger
- Screws x 2
- c Wall plugs (screw anchors) x 2 (for masonry or concrete walls only)
- Wall protector (adhesive)

Read instructions before use. There may be updated or additional information on our website.

Warning

Do not mount hanger on drywalls (plasterboard), or wooden panel walls unless there is a wooden stud behind it. Use drill bit of appropriate size and type: e.g. masonry drill bit for masonry. Avoid any electrical, plumbing, or water fittings hidden in or behind walls. If you lack the DIY skills to install hanger, seek professional help.

Mount in a safe, appropriate place where bicycle is unlikely to cause obstruction. Determine correct height

警告(繁體中文) 1、磚塊或水泥牆請使用6.5mm的鑽頭鑽孔。2、請勿將本產品鎖固在沒有支撐的牆壁、石膏板或裝飾板上。3、安裝時請避開電子電路,瓦斯、天然氣或自來水的管線。4、吊掛自行車前,請確認本產品有確實地安裝在實心柱子、樑或牆上,以避免對人和自行車造成損傷。5、如果您缺乏DIY技能安裝,請尋求專業幫助。

Instructions

Mount Hanger

Mounting on Drywalls or Wooden Panel Walls

Hanger must be mounted securely on a wall stud (one of the vertical lengths of timber behind the wall). Use a stud finder to locate stud, and mark its centreline with a pencil. Mark holes before drilling. Fasten bracket firmly with screws (fig. 1a).

fig. 1b

Mounting on Masonry or Concrete Walls

fig. 1a

Mark holes before drilling with a 6.5 mm (1/4") drill bit. Install wall plugs with hammer after drilling holes, making sure they are firmly pressed in. Fasten bracket firmly with screws (fig. 1b).

Hang Bicycle With hanger installed securely, hang bike by placing front wheel in rim hook, then stick wall protector on wall where rear tyre makes contact (fig. 2).

Limited Warranty

Ibera warrants this product for normal usage against workmanship, and material defects to the original purchaser for two year from purchase date. Products purchased online are not covered by this warranty unless purchased from an authorised Ibera online store. 1. User assumes all risk of personal injury, damage to or failure of the product when it is used in jumping, acrobatics or similar activities. 2. Warranty does not cover any incidental or consequential damages, such as personal injury or other losses due to accident, neglect, misuse, abuse, modification, normal wear and tear, improper care and cleaning, or failure to follow included instructions.

See other Ibera products at www.ibera.info

fig. 2

Ibera Co. Ltd.

Specifications subject to change without notice. Ibera is a trademark of Ibera Co. Ltd. All other trademarks are property of their respective owners. Copyright Ibera Co. Ltd. Made in Taiwan. IB-ST3

Artwork: 11/22

