

We care about the Environment

By refraining from inserting a full printed manual with our Argon Audio products we save more than 20 tons of paper each year. You can find a full User Manual in PDF format for this product on; www.argonaudio.com

See back side of this insert for Quick start guide

Safety

Safety Instructions



- Unplug this product from the wall outlet before cleaning. Do not use this product near water or moisture. Do not spill liquids on the product. Clean only with a dry cloth.
- Place the unit on a solid surface.
- Do not put it in a closed bookcase or a cabinet that may keep air from flowing through its ventilation openings.
- Do not install near any heat sources, such as radiators, heat registers, stoves or other appliances that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs and the point where they exit from the product.
- During Lightning storms, unplug the product from the power source or if unused for long periods of time.

This will prevent lightning and power-line surge damage to the product.

- Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please contact the manufacturer to be referred to an authorized service center near you.
- Do not overload wall outlets, extension cords, or integral power circuits as this can result in a risk of fire or electric shock.
- Never push any object through the product openings, as this can result in fire, electric shock or damage.
- Use proper power sources. Plug the product into a proper power source, as described in the operating instructions or as marked on the product.



If there is a Lightning flash with an arrow head on the product, it's intended to alert the User of the presence of un-insulated "dangerous voltage" within the product, that might be of sufficient magnitude to constitute a risk of electric shock to persons.



If there is an Exclamation point on the product, it's intended to alert the User that there is important operating and maintenance (servicing) information in the User manual.



If there is a double rectangular symbol on the product, it means that the product is double insulated. Earth connection is not required.

Quick start

Start up

1. Connect the Antenna and place it in a position that allows optimal reception of stations.
2. Plug the Power supply into an electric outlet and into the back of the Adapter.
3. The Adapter will start searching for DAB stations automatically. This may take a few minutes and the progress will be shown in the display.
4. Once finished searching, the Adapter will start playing the first found station.

Basic Operating

1. Notice; All operations on the Adapter are done via the remote control.
2. Stations can be chosen by pressing the “arrows”.
3. Once the prefer station is found press the “select” button and the chosen station will start playing.
4. To store a station on one of the 1-6 preset buttons, press and hold the wished preset button for 3 sec., while playing the station that you want to store.
5. When stored, the display will show “Preset X saved”
6. To tune stations press and hold the “autotune” button for 3 sec. and the Adapter will scan for available stations..

Other Operating functions

1. Sleep function is activated by pressing the “Sleep” button and the display will indicate “Set Sleep time”. Press the “Sleep” button to select the sleep time period. Confirm by pressing the “Select” button.
2. Alarm function is activated by pressing the “Alarm” button and the display will indicate “Alarm 1 setup”. Press the “Select” button to select ON mode. Use the arrow buttons to choose your settings. Once a setting is made, confirm by pressing “Select” button. Continue the same way with the other settings, such as alarm sound source, alarm level, daily/week-end etc. After about 10 sec. the display will return to main display by itself. Activated alarm will be indicated at the bottom of the display by a small clock icon.
3. Pressing the “Snooze/Mute” button will terminate and/or activate the sound
4. The “Info” button will show different display information upon pressing it continuously.
5. Pressing the “Menu” button will bring you into the Adapters menu settings. Use the “arrows” to scroll through the “Menu” options. Use the “Select” button to enter the wanted “Menu” setting.