



Safety

- Do not spill liquids on the product. Clean only with a dry cloth.
- Place the unit on a solid surface.
- Do not leave the product near any heat sources, such as radiators, heat registers, stoves or other appliances that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs and the point where they exit from the product.
- During Lightning storms, unplug the product from the power source or if unused for long periods of time. This will prevent lightning and power-line surge damage to the product.
- Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please contact the manufacturer to be referred to an authorized service center near you.

- Do not overload wall outlets, extension cords, or integral power circuits as this can result in a risk of fire or electric shock.
- Never push any object through the product openings, as this can result in fire, electric shock or damage.
- Use proper power sources. When charging, plug the product into a proper power source, as described in the operating instructions or as marked on the product.

Quick start

1. **Charging:** Be sure the headphone is powered off, and then connect the charging cable to the USB interface of your PC/Laptop or any other USB power outlet. The LED will turn red during charging process, and it will turn off when charging is complete. Please fully charge the headphone before using it for the first time.
2. **Power on and pairing:** Press the power button for 3-5 seconds until the LED starts blinking red and white alternatively and the headphone says "Power on." The headphone will then begin to pair automatically, and say "Pairing". Open Bluetooth settings on your device, find

“Argon Audio Quiet Storm” on the list and then click it to pair until the headphone says “connected”. You are now ready to listen to music!

3. Power off: Press the power button for about 3 seconds until the headphone says “power off.”
4. To switch between ANC mode, Ambient mode and ANC off mode, press the NC-button.

Buttons and indicators overview

1. Power [hold]/play/pause/answer call/end call
2. Volume up/next track
3. Volume down/previous track
4. Mode switch [ANC on/off, Ambient mode]
5. Microphone
6. LED indicator for pairing/power on/power off
7. LED indicator for charging
8. Line in [3.5mm jack]
9. Type C charging port

