

We care about the Environment

By refraining from inserting a full printed manual with our Argon Audio products we save more than 20 tons of paper each year. You can find a full User Manual in PDF format for this product on; www.argonaudio.com

See back side of this insert for Quick start guide

Safety

Safety Instructions



- Unplug this product from the wall outlet before cleaning. Do not use this product near water or moisture. Do not spill liquids on the product. Clean only with a dry cloth.
- Place the unit on a solid surface.
- Do not put it in a closed bookcase or a cabinet that may keep air from flowing through its ventilation openings.
- Do not install near any heat sources, such as radiators, heat registers, stoves or other appliances that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs and the point where they exit from the product.
- During Lightning storms, unplug the product from the power source or if unused for long periods of time. This will prevent lightning and power-line surge damage to the product.

- Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please contact the manufacturer to be referred to an authorized service center near you.
- Do not overload wall outlets, extension cords, or integral power circuits as this can result in a risk of fire or electric shock.
- Never push any object through the product openings, as this can result in fire, electric shock or damage.
- Use proper power sources. Plug the product into a proper power source, as described in the operating instructions or as marked on the product.



If there is a Lightning flash with an arrow head on the product, it's intended to alert the User of the presence of un-insulated "dangerous voltage" within the product, that might be of sufficient magnitude to constitute a risk of electric shock to persons.



If there is an Exclamation point on the product, it's intended to alert the User that there is important operating and maintenance (servicing) information in the User manual.



If there is a double rectangular symbol on the product, it means that the product is double insulated. Earth connection is not required.

Quick start

Start up

1. Connect the Tempo Active Speaker with the Tempo Passive Speaker, using normal speaker cable. (remember to connect + to + and - to -)
2. Connect the Power cord into an electric outlet and into the back of the Tempo Active Speaker. The LED light on the loudspeaker will light ORANGE.
3. Your speaker is automatically ready for Pair and Connect with Bluetooth (BT), if you intend to use this function - Activate BT on your playback device (mobile phone etc) and Scan for Devices. Your speaker will show up as "Tempo A4". Press "pair" and you are connected. The LED light on the speaker will change to solid BLUE. Start playback from you playback device (mobile phone etc) there will be both a solid BLUE and a LIGHT BLUE LED, indicating BT playback.
 - a. Notice; when you restart playback from BT, it will take 5-8 sec. before sound will be heard from the speaker.
4. Besides Bluetooth, Argon Tempo have three more inputs: Optical1, Optical2, and AUX.
Use the included remote control to select your wished input.
5. If you have an Active Subwoofer, connect it to the Tempo Speaker SUB OUTPUT, using a RCA cable and then connect the cable to Your Subwoofer.
6. Included in the box are two sponges. These two sponges are used to adjust the bass response. Mounted in the bass ports on the back of the speakers they will lower the bass response. Feel free to try what suits you best, sound wise. It will all depend on your placement of the speakers and your taste.

Basic Operating

1. You can adjust the Master volume on the back of the Tempo speaker.
 - a. It's recommended to set the Master volume at a rather high level.
 - b. Then control the daily volume level using Your Source player (Tablet, Laptop, Phone etc). or the included remote.
 - c. Besides input select on the remote control you can also change inputs by pressing the volume button on the back side of the active Tempo speaker
2. Remote function from Samsung, Sony and Denon remotes.
 - a. Argon Tempo support most (but not all) Samsung TV, Sony TV and Denon Receiver remote functions for "Volume +/-" and "Mute".
If you use the Argon Tempo with a Samsung TV, Sony TV or Denon Receiver it allows you to have only one remote control (the TV remote) to control basic and useful functions.

Tips

- We recommend a running-in time of your Tempo Speakers of approximately 15-20 hours at normal listening level before you decide on the final positioning of the Speakers. During the running-in time the drive units will settle in and perform as intended.
- For optimal sound performance, the best listening position is on ear level with the speakers placed not too far from a wall.