

CT4gps

Operation Manual



Thanks for purchasing this product. Please read this Manual carefully before use.

Model	CT4gps	Screen Type	1.28" -inch color screen
Battery capacity	300mAh	Charging Voltage	5V±0.2v
Charging Time	about 2 hours	Battery Life	7 Day
Waterproof level	5ATM	Weight of Product	47g
Operating Temperature	0°C-60°C	Bluetooth Version	BLE5.0
Product Frequency	2402-2480MHz	Max. transmission Power Consumption	4dBm



Scan the QR code for more function information



Quick Start

(EN)

1. Know the Device



Physical Button

Press the physical button

1. Turn off reminders in the "Reminder" interface.
2. Turn on screen when screen is off.
3. Access the function list.


Press and hold the physical button

To turn on the device in power-off state;

2. Power On/Off

Power On

When you start charging the device, it will be turned on automatically.

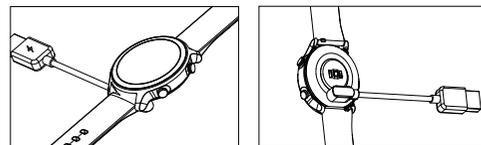

Note: the device must be charged and activated before the first use; please always use the original charger to charge the device.

Press and hold the physical button to turn on the device.

Power Off

Shutdown path: [setting]→[Power Off].



Downloading and Pairing

1. Download the APP

Scan the following QR code to download our app or you can download it with the following link: <http://app.cubitt.co/watch>



2. Pairing

Turn on the APP and Bluetooth. Search and select the device in the APP. Finally, bind the device in the APP. Or go to the app > device > upper right corner and select the QR code scanner icon to scan the QR code in the watch screen to pair the device.

Inicio rápido

(ES)

1. Conociendo el dispositivo



Botón físico

Pulsar el botón físico

1. Desactivar los recordatorios en la interfaz "Recordatorio".
2. Encender la pantalla cuando está apagada.
3. Acceder a la lista de funciones.


Pulsar y sostener el botón físico

Encender el dispositivo en estado apagado;

2. Encendido/apagado

Encendido

Cuando inicie la carga del dispositivo, éste se encenderá automáticamente.

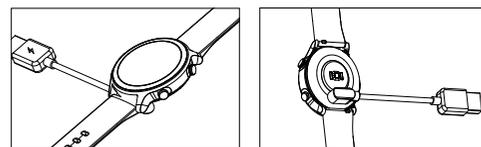

Nota: el dispositivo debe ser cargado y activado antes de su primer uso; siempre se debe usar el cargador original para cargar el dispositivo.

Pulsar y sostener el botón físico para encender el dispositivo.

Apagado

Ruta del apagado: [Ajustes]→[Apagar].



Descarga y emparejamiento

1. Descarga de la aplicación

Digitalizar el siguiente código QR para descargar nuestro app o descargar el app con el siguiente link: <http://app.cubitt.co/watch>



2. Emparejamiento

Encienda la aplicación y Bluetooth. Busque y seleccione el dispositivo en la APLICACIÓN. Finalmente, vincule el dispositivo en la APLICACIÓN. También puede hacerlo desde el App > dispositivo > esquina superior derecha y seleccione el símbolo de escaner de código QR. Escanee el código que muestra la pantalla del reloj para empajar el dispositivo.

Operaciones de la pantalla

Deslizar la pantalla hacia arriba/abajo

1. Cambiar entre las páginas en el mismo nivel; o
2. Visualizar el texto largo o los detalles.

Deslizar la pantalla hacia la izquierda/derecha

1. Cambiar entre las páginas en el mismo nivel.

Screen Operations

Swipe the screen up/down


1. To switch among pages at the same level; or
2. To view long text or details.

Swipe the screen left/right

1. To switch among pages at the same level.

Click the screen

1. To go to the sub-page;
2. To complete the corresponding action, depending on which on-screen button is clicked.

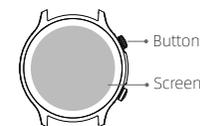

Click and hold the screen

1. To change the watch face wallpaper.

Functions

Supporting features such as: multiple exercise modes, women's health, weather, watch face store, breath training, heart rate monitoring, sleep monitoring, stress level monitoring, blood oxygen level detection, notifications, etc. For instructions and FAQs for these functions, open the app to access the user guide for answers.

Maintenance

Below are three recommendations on wearing and maintenance:

1. Keep the device clean;
2. Keep the device dry;
3. Do not wear the device too tight.

Mantenimiento

A continuación se detallan tres recomendaciones acerca del uso y del mantenimiento:

1. Mantener el dispositivo limpio;
 2. Mantener el dispositivo seco;
 3. No usar el dispositivo demasiado ajustado.
- * No utilizar limpiadores domésticos para limpiar el dispositivo. En cambio, se deben utilizar limpiadores libres de jabón.
 - * Para las manchas que son difíciles de remover, se recomienda limpiar con alcohol.


Rendimiento impermeable: el dispositivo no es adecuado para bucear, nadar en el mar o en el sauna; es adecuado para piletas de natación, para la ducha (agua fría) y para la natación en aguas poco profundas.

Hacer clic en la pantalla

1. Ir a la subpágina;
2. Completar la acción correspondiente, según el botón en pantalla sobre el cual haga clic.

Hacer clic y sostener la pantalla

1. Cambiar el fondo de pantalla frontal del reloj.

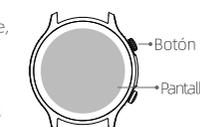

Funciones

es compatible con funciones como: múltiples modos de ejercicio, salud femenina, tiempo, tienda de pantalla del reloj, entrenamiento de respiración, monitorización del ritmo cardíaco, monitorización del sueño, monitorización del nivel de estrés, detección del nivel de oxígeno en sangre, notificaciones, etc. Para ver instrucciones y preguntas frecuentes sobre estas funciones, abra la aplicación y acceda a la guía del usuario para conocer las respuestas.

- * Do not use household cleaners to clean the device. Use soap-free cleaners instead.
- * For stains that are difficult to remove, it is recommended to scrub with alcohol.

Waterproof performance: the device is not suitable for diving, swimming in the sea or sauna; it is suitable for swimming pool, shower (cold water) and swimming in shallows.

Safety

- To prevent device failure, fire and explosion, never place the device or its accessories in any extremely-high-temperature or extremely-low-temperature area.
- To prevent device damage, accessory damage and device failure, always protect the device against strong impact or shock.
- Do not disassemble or modify the device or its accessories without authorization. Any device failure should be referred to our after-sales service personnel.

Seguridad

- A fin de evitar fallas en el dispositivo, incendio y explosión, nunca se debe colocar el dispositivo o sus accesorios en áreas de temperaturas extremadamente altas o extremadamente bajas.
- Para evitar el daño al dispositivo, el daño a sus accesorios y fallas en el dispositivo, siempre se debe proteger el dispositivo contra impactos fuertes o choques.
- No se debe desmontar o modificar el dispositivo o sus accesorios sin previa autorización. Cualquier falla del dispositivo debe ser remitida a nuestro personal de servicio de posventa.

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS



Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.

If you experience discomfort or skin irritation when wearing your smart watch, then we recommend you try cleaning your device. Sometimes residue or foreign materials build up around your device and may aggravate your skin. It's also possible that you are not wearing the watch correctly. We recommend making sure to clean and adjust your watch regularly for a more comfortable fit.

- Caution:
- If you experience skin irritation when wearing your watch, please refrain from wearing, and wait two to three days to see if your symptoms ease. If symptoms persist or worsen, please consult a physician.
 - If you have eczema, allergies or asthma, you may be more likely to experience a skin irritation or allergy from a wearable device.

- CAUTION
- Risk of explosion if the battery is replaced by an incorrect type
 - disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
 - leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
 - a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.