





unosounds.com

To prevent possible hearing damage, please do not listen at high volume levels for long periods.

DO NOT use the earphones. Do not use the earphones in unsafe situations, such as driving, crossing the street or engage in any activity which require your full attention.

DO NOT leave the earphones near magnets. Under the influence in other magnetic field the sensitivity of the speaker can drop down! DO NOT leave th earphones in wet conditions to prevent rust & damage. DO NOT disassemble. Disassembling the earphones will not be covered by warranty. DO NOT use outside in very cold weather.

In order to avoid hearing damage, before connecting the headphones, reduce the volume of the music player, when you place the headphones into your ears gradually increase the volume.

1. **Weight:** 23g

2. Plug Type: 3.5mm

3. **Frequency:** 10-20000 Hz 4. Impedance: 23

5. **Sensitivity:** 112dB/mW

6. Built-in Mic

7. **Pin Type:** 0.75mm 8. **IEM** Earphones

COMFORT FIT









Choose the best fit from the three different sizes earlips. Choose the one comfortable for you, isolate the outside noise and enjoy fully the sound and bass of your music.

BUTTON FUNCTIONS



Press and Release the center button to Answer/End Calls Press, Hold and Release the button to reject Calls Press and Hold for Voice Assistant Other functions: Play/Pause, Previous/Next, Answer/End Calls, Voice Assistant



Distinguish headset direction, "L" is left "R" is Right



Point the wire to the plug and push it in until it fits perfectly



Put the earphones the correct way.



Fix the earphones wire behind



