



# UMOOV

## USER MANUAL (EN)




Compatible with **Android & iOS**

[unosounds.com](http://unosounds.com)

### BUTTONS

- ① Lanyard
- ② - Long press for Previous song, Short press to Decrease the volume
- ③ Play Button: Play/Pause, Answer/Redial TWS Connection
- ④ + Long press for Next song, Short press to Increase the volume
- ⑤ Power button: Long press to Power On/Off, Short press for Siri, Long press to Reset
- ⑥ Mode Button: Swith Mode(AUX/Bluetooth)
- ⑦ LED Indicator
- ⑧ Micro USB Port
- ⑨ Audio Jack
- ⑩ Bluetooth Indicator
- ⑪ Built-in Mic

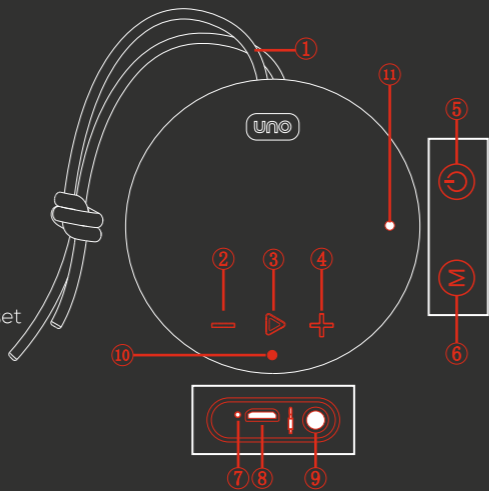

### VOICE ASSISTANT

Short press of the power button to activate SIRI (IOS), supports Huawei's intelligent v.a.

### SAFETY INSTRUCTIONS

Charge only with devices rated and marked 5V to avoid damage to the speaker. Do not disassemble the speaker, this will void the warranty and may damage the product. Rechargeable batteries have a limited number of charging cycles. Battery life and number of charge cycles vary depending on usage and settings. Never place the speaker near high heat sources. To keep the warranty valid, never try to repair the product yourself.

### CHARGING

Connect the supplied charging cable to the charging port and to a USB port on your computer or USB charger. The charging indicator lights up in red during charging. The LED turns off when fully charged. It is recommended to charge 10 minutes before turning on, if you do not use for 7 days, you can continue to use during charging.

### CONNECT THE SPEAKER

Look for Bluetooth devices on your device. Select the speaker from the list. The speaker will emit an indication sound when the connection is successful. Only one Bluetooth device can be connected at a time. If you want to connect another device to the speaker, turn off the current one first. \*Some bluetooth devices support automatic reconnection and the speaker will connect automatically to there devices.

### RESTART

Hold down the power button for 6 seconds to restart the speaker automatically and turn it off.

### AUTO SHUTDOWN

The speaker will turn off automatically after 10 minutes when Bluetooth is not connected and no music is playing.

### HANDS-FREE BUTTON FUNCTIONS

1. Connect your phone via Bluetooth, the speaker will play melodies while a call is coming.
2. Briefly press button ③ to answer and end a call, when the call end the music will continue to play.
3. Press and hold button ③ to reject an incoming call.
4. When you have connected your phone, press twice button ③ to Redial last number.

### AUDIO CONNECTION

Turn on your speaker and connect it with a 3.5mm audio cable to any supported device and the speaker will be automatically connected. \*Audio Cable is not included in the package

### SPECIFICATIONS

2. Model: Umoov
3. Speaker: Ø52mm 4 5W \*1
4. Charging time: 3 hours
5. Input: 5.0V 1.0A
6. Product weight: 182g
7. Bluetooth: V5.0
8. Built-in rechargeable battery: Li-on, 3.7V, 800mAh
9. Playback time: 4+ hours
10. Product size: 100 \* 100 \* 45 mm
11. Range: Up to 10 m
12. Waterproof level: IPX7

### TWS CONNECTION (PAIR 2 SPEAKERS IN STEREO MODE)

1. Turn on both speakers
2. Press and hold button ⑥ on one of the speakers for about 2 seconds until you hear a beep. By default the main speaker will be the one you activate the stereo connection from.
3. Release button ⑥. It may take a few more seconds before the speakers connect to each other. Check the indicator lights to distinguish the L / R channel: The blue light that flashes every 3 seconds is the left speaker indicator, and the right one flashes more intensely.
4. Enter the Bluetooth menu of your smartphone and pair the speakers with your phone by selecting the speaker . (you will see 1 model connected as both will be combined under one)
5. Press and hold button ⑥ on one of the speakers for about 2s until you hear a beep. \* Distinguish the L / R channel: The blue light that flashes every 3 seconds is the Left speaker indicator, and the Right one flashes more intensely.

### FAULTS AND MAINTENANCE

#### 1. IF THE CONNECTION FAIL

- (1) Please check that the multifunction indicator flashes blue. Please turn on the speakers if the light is off. Please charge the speaker if the lamp is still off.
- (2) Please turn off other Bluetooth devices if there are many Bluetooth devices around. This May lead to search difficulties.
- (3) Restart the Bluetooth (Turn Off/On) and delete the bluetooth speaker from the search list.

#### 2. SOUNDS/MUSIC PAUSE OR STOPS

- (1) See that the distance between the player and the speaker is not exceeded by violating Bluetooth connection distance 8-12 meters.
- (2) Make sure there are no obstacles between the playback device and the speakers.
- (3) Check the playback device or the speaker is in low power.

### NOTES

This product is designed with complete safety in mind. To ensure safe operation, please follow the following rules:

1. Place the speakers in a stable position to avoid falling and causing damage or injury.
2. Do not drop, disassemble, open, crush, bend, puncture, burn the speaker
3. Do not keep close to heat source (such as radiators, heating equipment, stoves or other heat generators equipment).
4. Please send professional maintenance personnel to repair any damage.
5. Before wiping with a dry cloth to clean the speakers, turn the power switch to the off position and unplug it from the power .
6. For health reasons, please adjust the sound to the appropriate level.
7. Changes or modifications not expressly approved by the party responsible for compliance may void the user's right to operate the equipment and any warranty.

### RESET

Hold the power button for 6 seconds to reset the speaker.

### TROUBLESHOOTING

- The speaker does not turn on?  
Charge fully.
- The speaker does not turn off or does not respond?  
Reset the speaker. There is a small hole above the USB port. Press and hold the reset button with a clip for 5 seconds.
- There is no sound?  
Adjust the volume.  
Make sure your Bluetooth device is within range.  
Make sure there are no obstacles in the way that could block / disturb the signal.
- Check with the Bluetooth connection of the device that the speaker is connected to the device.
- Is there poor sound quality?  
Move the device closer to the connected device.
- Can't connect the device to the speaker?  
Disconnect other connected devices and try again.  
You can force an interruption by moving out of Bluetooth range (10 m).