

The **AXDSPL-SP** will be used for adding a Toslink digital output to the **AXDSP-L**.

1. **Important!** Unplug the **AXDSP-L** from the vehicle.
2. Remove (4) Phillips screws securing the **AXDSP-L** interface, then remove the top cover, exposing the circuit board within.
3. Locate the 16-pin header on the circuit board.
4. **Important!** Carefully line up the header pins to the Toslink interface, with the Toslink port facing outward. Gently press down to secure.

**Note:** Both interfaces may be damaged if installed wrong.

5. Reinstall the top cover provided with the **AXDSPL-SP** to complete the installation.

