

---

# ATMOS<sup>FX</sup>

DIGITAL DECORATIONS<sup>®</sup> FOR EVERY OCCASION

## MEDIA PLAYER

### User Manual



Congratulations! You're one step closer to digitally decorating your home and having the coolest house in the neighborhood.

The AtmosFX Media Player device lets your projector or TV play digital decorations stored on a USB Drive or SD Card and is fully compatible with all AtmosFX SD Card Digital Decoration products!

## SD CARD COLLECTIONS



Coming Soon!  
(Fall 2016)



Coming Soon!  
(Winter 2016)

**Learn Cool Tips & Tricks,  
Find New AtmosFX Products,  
And Discover More Ways To  
Digitally Decorate  
Just Visit [AtmosFX.com](http://AtmosFX.com)**

# Contents

## Product Specifications

1.1 Included Components .....	4
1.2 A/V Connections .....	4
1.3 Technical Specifications .....	5
1.4 Remote Control Button Functions .....	6

## Usage Guide

2.1 Home .....	7
2.2 Playing Digital Video Content .....	7
2.3 Playing Other Digital Media .....	8
2.4 Setting .....	9
2.5 Warranty Information .....	10-11

---

# Product Specification

## 1.1 Included Components

- AtmosFX Media Player device
- VGA (A/V) output cable
- Remote control with CR2025 button cell battery











## 1.2 A/V Connections

1. **VGA Video Output (A/V):** Connect single black plug of included VGA cable to VGA output terminal of this player, and connect the other end to your TV or projector based on the jack color (video-yellow; audio-red and white).
2. **Component Video Output (YPbPr):** Connect one end of user-provided component video cable to YPbPr output terminal of this player and connect the other end to your TV or projector based on the jack color (green, blue and red).
3. **HDMI Video Output:** Connect one end of user-provided HDMI cable to HDMI output terminal of this player and connect the other end to your TV or projector.

## 1.3 Technical Specifications

Power	Positive inside and negative outside, 5V/2 A
File System	FAT32, NTFS
Video Outputs	Component YPbPr, VGA (AV), HDMI 1.3
Audio Outputs	Analog stereo, digital audio HDMI 1.3
Video Formats	AVI/MPG/MPEG/XVID/VOB/DAT/MP4/TS/ M2TS/MKV/H.264/RM/RMVB and more
Audio Formats	PCM/DTS/AC3/MP3/RA/AMR/MP3/WMA/ OGG/APE
Picture Formats	JPG/BMP/PNG/GIF/TIFF
Subtitle Formats	SMI/ASS/SSA/SRT/SUB/PGS/SUB+IDX
Language	Choice of 16 languages
USB Port	USB HOST 2.0
Source Formats	SD/SDHC/MMC Card
Indication Light	Blue Light when Stand By / Working
Working Environment	Working Temperature: -10 ~ +45°C; Humidity: <90% Storing Temperature: -20 ~ +70°C; Humidity: <95%

## 1.4 Remote Control Button Functions

	Power: Standby/On
MODE	Output system switch, HDMI, PAL, NTSC
	Mute: On/Off
GOTO	Go to time setting
ZOOM	Zoom picture/movie/text
FUNCT	Function option
MENU	Switch to main menu
EXIT	Stop playing and back to last page
	Up
	Down
	Fast rewind / Rotate photo anticlockwise
	Fast forward / Rotate photo clockwise
OK / 	Confirm, Play/Pause
VOL-	Volume Down
VOL+	Volume up
Audio	Audio setting
Repeat	Repeat/ Play mode
INFO	File information
	Previous track
	Next track
	Stop

## Usage Guide

### 2.1 Home

After connecting the AtmosFX Media Player into your TV or projector and plugging in the provided A/C charger and cable, use the remote control to turn on the device. Be sure to remove the plastic battery insulator on the remote control.

You will immediately be greeted with the following “Home” screen.



### 2.2 Playing Digital Decorations

1. Using your remote control, navigate to and select the “Movie” icon and then press the “OK” button.
2. Select the input source that you want to play from and press “OK”.
3. Navigate to the folder and file you want to play.  
(Press the “Exit” button to return to the previous directory)
4. Press the “OK” button to select and play the file.

5. For optional functions, press the "FUNCT" button and select desired function:
  - Mode : Repeat play setting
  - Video Proportion : Full screen or different proportion
  - Subtitle : Subtitle setting for playing movies

## **2.3 Playing Other Digital Media**

You can play other types of digital media with this device, including digital photos or music.

1. Using your remote control, navigate to and select the appropriate icon and then press the "OK" button.
2. Select the input source that you want to play from and press "OK".
3. Navigate to the folder and file you want to play.  
(Press the "Exit" button to return to the previous directory)
4. Press the "OK" button to select and play the file.
5. For optional photo display functions, press the "FUNCT" button and select desired function:
  - Switch Mode : Different modes for sequence display of photos
  - Play Interval : Time setting for displaying photos sequentially
  - Background Music : ON/OFF



## 2.4 Setting

Language	16 language choices.
Screen Saver	Set screen saver start time.
Video Output	NTSC, PAL, 480I, 576I, 480P, 576P, 720P, 1080I and 1080P.
Audio Output	Set audio output mode.
Auto Play	Set media player to play automatically after device startup.
Auto Detect HDMI	If more than one input is connected, HDMI will be selected.
Restore Default Settings	Use to re-set to factory default settings.
System Information	Displays the software information.

## **2.5 Warranty Information**

AtmosFX Inc. strives to create high quality products that are free from manufacturer defects. This document explains the warranty and exchange policies for all AtmosFX products.

Only items that have been purchased directly from AtmosFX through the AtmosFX Online Store ([www.AtmosFX.com](http://www.AtmosFX.com)) are governed by this policy. AtmosFX products purchased through other retailers must be returned in accordance with that retailer's respective replacement and refunds policy.

### **Restrictions**

Products that are not covered by this warranty:

- AtmosFX digital downloads and other non-physical goods.
- AtmosFX products not purchased directly from [www.AtmosFX.com](http://www.AtmosFX.com)
- AtmosFX products purchased as "Final Sale" items.

All warranties voided for the following cases:

- Damage due to customer abuse or mishandling.
- Damage occurring during shipping.

### **Warranty Period**

AtmosFX Inc. warranties all physical products against manufacturer defects for 60-days after the purchase date.

## **Warranty Process**

If you believe an AtmosFX product you purchased is subject to a manufacturer defect, and you are within the 60-day warranty period, please visit <http://atmosfx.com/blogs/support> and complete the “Contact Us” form. A representative will contact you and direct you through the warranty process. During this process AtmosFX may require you to provide pictures and/or ship the product to AtmosFX at your expense.

Products that are sent to AtmosFX outside of this warranty process will be sent back to the customer at the customer’s expense.

Once your product is received it will be inspected for manufacturer defects. Inspections may take up to 30 days to complete. During this process, the customer is responsible for all shipping charges. If it is determined in our inspection that issues are due to a manufacturing defect, we will make a reasonable effort to try to fix the issue. If we cannot fix the issue we will either replace or refund the item.