

TADA68 PROGRAMMING

MANUAL

ORIGINATIVE Co.

First Layer / Layer 0 (Default)



Second Layer / Layer 1 (Fn)



| Fn Functions | | | | Memo |
|--------------|---|-----------|---|--------|
| | | 1! | | F1 |
| | | 2@ | | F2 |
| | | 3# | | F3 |
| | | 4\$ | | F4 |
| Fn | + | 5% | = | F5 |
| | | 6^ | | F6 |
| | | 7& | | F7 |
| | | 8* | | F8 |
| | | 9(| | F9 |
| | | 0) | | F10 |
| | | -_ | | F11 |
| | | =+ | | F12 |
| | | Backspace | | Delete |
| | | W | | ↑ |
| | | A | | ← |
| | | S | | ↓ |
| | | D | | → |
| | | ~ | | Ins |
| | | Delete | | Home |
| | | Pg Up | | End |

| Fn Media Functions | | | | Memo |
|--------------------|--|----|---|-----------------|
| | | N | | Increase Volume |
| Fn | | M | = | Decrease Volume |
| | | ,< | | Silence |

| Fn LED Functions | | | | Memo |
|------------------|---|---|---|--|
| Fn | + | C | = | Decrease Brightness |
| | | V | | LED Switch |
| | | B | | Increase Brightness |
| | | | | LEDs: 3 levels of constant light, 3 levels of breathing light. |

- Step 1** Click on the following link to find the programmability page:
123.57.250.164:3000/tada68
- Step 2** After opening the link, you will see your default settings.
- Step 3** Click on the key that you want to program. Complete programming on each key.
- Step 4** When finished, click 'Compile.'
- Step 5** Click "Save .bin", use the new .bin file you just created to replace the old one.

You're done!