

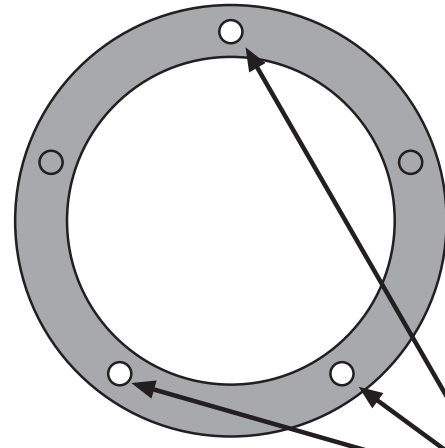
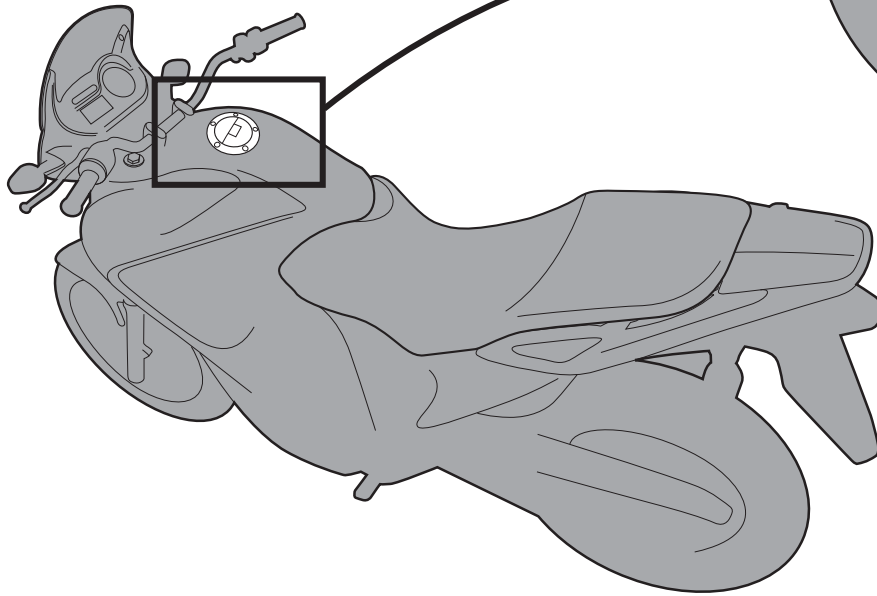


# BF35\_BF35K

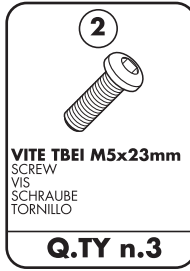

Rimuovere le viti originali  
Remove the original screws  
Enlevez les vis originales  
Entfernen Sie die Originalschrauben  
Mover los tornillos originales

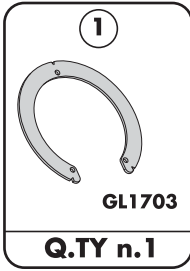