

- (1) Ensure that the bottom of the Peanut Changer is dry and place Peanut Changer on a smooth, flat, dry surface, preferably the top of a dressing table or bureau, that is at least 32" long by 17" wide.
- (2) To secure the Changer, peel off the protective cover from one side of the Safety harness hook & loop patch and stick to flat surface of the table top. Check the location of the Changer, insuring that it fits on the surface completely with no overhang. Press hook & loop patch firmly down onto the surface. Allow the adhered safety harness to stay in place overnight prior to using the Peanut Changer for the first time.


(3) Audible "click" must be heard when securing child into your Peanut Changing Pad.


CAUTION: Hook & loop patch adhesive may cause marring or discoloration of some surfaces. Bergeron By Design is not responsible for any damage to surfaces. Adhesive residue may be removed from the surface using a citrus cleaning solution. Always gather all your changing needs and have them ready BEFORE placing your child into the Peanut Changer.

WARNING A

FALL HAZARD - to prevent death or serious injury, always keep child within arm's reach. ALWAYS secure this product to a smooth, flat surface that is level, stable, and structurally sound with a minimum surface dimension of 17 inches by 32 inches. Always secure this pad to the changing surface by engaging the Hook and Loop Tabs provided. Read all instructions before use of the changing table, add-on changing unit, or contoured changing pad. Keep instructions for future use. Manufacturer's Recommended Maximum Weight of Child is 30 Lbs.

Do not use changing pad if damaged or broken. NEVER lift this product with child in it.

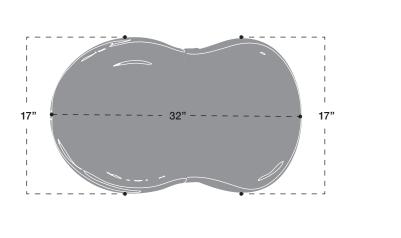

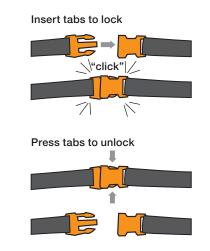

Limited Warranty

Bergeron by Design warrants to the original retail purchaser of the Keekaroo® product, that if any part or component proves defective in material or workmanship within five years of the purchase date, the defective part will be repaired, replaced, or refunded at the discretion of Bergeron by Design.

This warranty does not cover normal wear and tear, or damage caused by accident or misuse and only applies in the United State and Canada. Any use of the product outside the US and Canada will void the limited warranty. Users outside the United States and Canada must contact the original retailer for their return or refund policy.

To exercise this limited warranty in the United States and Canada, the user should first obtain a Return Authorization Number from the retailer the Keekaroo® product was purchased from. The product must be delivered with charges pre-paid (UPS recommended) to the factory or to the retailer, together with a copy of the original invoice, the Return Authorization Number and a written description of the problem.

Cleaning

Periodically wipe clean with a mild detergent, however DO NOT SUBMERGE.

Product Maintenance

Check Peanut Changer pad and restraint system before each use to ensure that they are in good working condition.

Be sure that both your Peanut Changer and the changing table top are completely dry before placing the Peanut onto the changing table top surface to avoid damage to the top of your changing table.

Customer Service

Contact your retailer or contact Keekaroo® Customer Service Support directly Toll Free: 1.800.994.2416

10111100.	1.000.00 1.2 110
International:	1.315.429.7110
Fax:	1.315.429.8862
Email:	support@keekaroo.com

Notice

No part of this document may be photocopied, reproduced, transmitted, transcribed, stored in a retrieval system or translated to another language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise without the prior written consent of Bergeron by Design.

Use only Keekaroo® accessories and parts on Keekaroo® products. Keekaroo® parts are not interchangeable with other manufactures' products. Replace any worn parts immediately for safety. © Bergeron By Design.



1.315.429.8407 15 South Second St. Dolgeville, NY 13329

Made In USA