 




## 2). Non-usable Pans

Heat-resistant glass, ceramic container, copper, aluminum pans/pots.  
Rounded-bottom pans/pots with bottom measuring less than 12cm.



## V. How to Clean

- 1). Disconnect plug and wait until the unit is cooled down completely. Clean after using every time.
- 2). If the pots/pans are used without being cleaned, discoloration or cooked on stains may be caused.
- 3). Do not use benzine, thinner, scrubbing brush or polishing powder to clean the induction cooker.
- 4). Wipe using dish washing agent and damp cloth.
- 5). Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.
- 6). Never run water over the unit (Water gets inside may cause malfunction).

Appliances are not intended to be operated by means of an external timer or separate remote-control system.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments
- farm houses;
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments.



# Induction Cooker




**MODEL : ICW2000**

Please read it carefully and keep for future reference.

## I .Specification

- |               |            |                  |             |
|---------------|------------|------------------|-------------|
| 1). Item No.: | ICW2000    | 2). Power Rate:  | 500 - 2000W |
| 3). Voltage:  | 240V~ 50Hz | 4). Temperature: | 60℃-240℃    |

## II .Cautions

- 1). Do not plug with wet hands.
- 2). Do not plug into a socket where several other appliances are plugged in.
- 3). Do not use if the plug cord is damaged or the power plug does not fit the socket safely.
- 4). Do not modify the parts, or repair the unit by yourself.
- 5). Do not use the unit near flame or wet places.
- 6). Do not use where children can easily touch the unit, or allow children to use the unit by themselves.
- 7). Do not place on unstable surfaces.
- 8). Do not move the unit when the pot or the pan is on it.
- 9). Do not heat the pot empty or overheat the pot.
- 10). Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate.
- 11). Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear.
- 12). Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
- 13). Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
- 14). If the surface is cracked, switch off and take to the service center immediately.
- 15). Do not block air intake or exhaust vent.
- 16). Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
- 17). Do not place the unite near to the objects which are affected by magnet, such as: radios, televisions, automatic-banking cards and cassette tapes.
- 18). The power cord must be replaced by qualified technicians.
- 19)  The surface is liable to get replaced by qualified technicians.
- 20) This appliance is not intended for use by persons (including children) with reduced

physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

**Warning:** Children should be supervised to ensure that they do not play with the appliance.

## III.How to Use

- 1). Place suitable cooking utensils in the center of the top plate and plug in, the ON/OFF light will flash.
- 2). Pressing ON/OFF button,the induction cooker will enter into the working statement.
- 3). Function: To Press FUNCTION SELECTION pad and to select HEATING, TEMP and TIMER.  
HEATING:500-2000W  
TEMP: 60℃, 80℃, 100℃, 120℃, 140℃, 160℃, 180℃, 200℃, 220℃, 240℃  
TIMER: 0, 5, 10, 15, ...180; 5 minutes per interval. Timer can be adjusted by "+" or "--" from 0 –180 minutes.
- 5). The preset temperature and Heating are 60℃ and 1400W respectively.
- 6). If you want to cancel TIMER function, simply press ON/OFF. Press ON/OFF to start again.
- 7). After you select the function, press the Lock button to lock the function for 3 second you want, then the Lock Indicator will be shine. The induction cooker has no response when press any other button during this state. If you want to select other function or want to close the unit, press the Lock button again for 3 second, until it make a sound "bi" for 1 time, every button will be work normally.
- 8). The temperature of accessible surfaces may be high when the appliance is operating.
- 9). If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

## IV.Usable and Non-usable Utensils

- 1). Usable Pans  
Steel or cast iron, enameled iron, stainless steel, flat-bottom pans / pots with diameter from 12 to 26cm.