#### AUSTRALIA / NEW ZEALAND





### Operating Instructions Electronic Rice Cooker / Warmer

使用說明書 電飯煲/取暖器

取扱説明書 電子ジャー炊飯器

#### Model No. / 型號 / 品番 SR-UH36F

#### Contents

Safety Precautions	2-4
Usage Precautions	4
Parts Identification	5
How to Cook Rice	6-7
To Keep Cooked Rice Warm and Tasty	7
How to Clean	8
Troubleshooting	
Specifications	
Note	26

安全注意事項	10-12
使用注意事項	
零件名稱	
烹煮方法	14-15
保持煮好的飯溫熱美味	
清潔方法	
故障處理	
規格	17
便笺	26

もくじ	
安全上のご注意	20 21 22-23 23 24 25
メモ	

Thank you very much for purchasing Panasonic product.

Please give your special attention to "Safety Precautions" on pages 2-4 before use.

Please carefully read these instructions before use, and keep these instructions for future use. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and

- other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environment;
- bed and breakfast type environments.

非常感謝您購買Panasonic產品。

- 使用前請小心細讀本使用說明書,
- 並保存本使用說明書以作日後參考。
- 本電器適用於、家庭及類似應用、例如:
- ■農舍;

目錄

- 酒店、汽車旅館和其他居民型環境的客戶;
- 床和早餐型環境。

このたびは、パナソニック製品をお買い上げ 使用前請仔細閱讀第 10-12 頁的的「安全措施」。 いただき、まことにありがとうございます。 で使用前に「安全上のご注意」 (18~20ページ)を必ずお読みください。 ご使用前に取扱説明書をよくお読みいただき、 ■商店、辦公室和其他工作環境中的員工廚房區域;必要なときのために取扱説明書は大切に保 管してください。 この製品は家庭内及び下記のような使用を 目的としています:

- 店舗内のスタッフキッチンエリア、 オフィスや他の仕事環境;
- 農場内の家屋;
- ■ホテル、モーテルや他の居住環境な
- どのクライアント;
- ベッド&ブレックファーストなどの環境。

# **Safety Precautions**

Please follow the instructions below to prevent accident, personal injury, and property damage.

#### The following charts indicate the degree of damage caused by wrong operation.



The samples of symbols used in this manual are described below.



These symbols indicate prohibition.

These symbols indicate requirements that must be followed.

English

### Warning

#### Plug in the AC cord to the outlet firmly.



(Not doing so can result in an electrical shock or fire due to generation of heat.)

Do not use a damaged plug or outlet.

#### Do not plug or unplug the appliance with wet hands.



(Doing so can result in an electrical shock.)

Do not use wet hands

Do not place your hands or face over or near the steam vent.





(Exposure to steam can cause personal injury.)

Do not damage the AC

### cord or plug.



Do not disassemble, expose to heat or fire, twist, pull, place heavy objects on or tie the AC cord in a bundle.

(A damaged cord or plug can lead to electrical shock or fire.)

If the AC cord or plug is damaged, consult your nearest retailer or service center for repair.

#### Do not insert metal objects such as pins or needles, or any other objects in the exhaust outlets, or in any other portion of the unit.



(Doing so can lead to an electrical shock or malfunction.)

Prohibited

#### Clean the power plug regularly.



(Dust accumulation can lead to fire or a malfunction.)

Unplug and wipe with a dry cloth.

#### Do not operate the appliance with damaged AC plug or cord.



(It may result in an electrical shock or fire.)

Prohibited

Be sure the supply voltage matches the required voltage of the appliance.



(It may cause electrical shock or fire.)



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

(It may result Children should be supervised to ensure that they do not play in a burn or with the appliance. injury.)

# **Safety Precautions**

Stop using the appliance immediately when abnormality or breakdown occurs.

(It may cause smoking, a fire or electric shock.)



e.g. for abnormality or breaking down:

- The Power Plug and the Power Cord become abnormally hot.
- The Power Cord is damaged or power failure when it is touched.
- The Main Body is deformed or is abnormally hot.
- There are cracks, looseness or wobbles of the appliance.

Please consult your nearest retailer or service center for a check or repair immediately.

### <u> Warning</u>

If the Power Cord is damaged, it must be replaced by the manufacturer, its Service Agent or similarly qualified person in order to avoid a hazard.



(Otherwise, it may cause a fire, electrical shock or injury.)

#### Do not modify, disassemble or repair the appliance.



(It may cause a fire, electrical shock or injury.) Please consult your



Do not disassemble.

### Do not immerse the appliance in water or other liquids.



(It may cause an electrical shock or short circuit.) If water gets inside the appliance, please consult your nearest retailer or Service Center.



# **Safety Precautions**

### 1 Caution

To prevent electric shock, be sure to grasp the plug itself when disconnecting it; never unplug by pulling the AC cord.



(Pulling the cord may damage the cord resulting in an electric shock.)

### Do not place the appliance near a wall or furniture.



(The steam may cause color changes or deformation of any nearby objects.)

### Do not substitute the inner pan with other containers.

Do not use damaged inner pan with the rice cooker. Please contact authorized service agent for replacement.



(It may cause a burn or injury due to overheat or malfunction.)

Prohibited

Unplug the power plug from the power outlet when the appliance is not in use.



(Otherwise it may cause an electric shock and fire caused by a short circuit due to the insulation deterioration.)

# **Usage Precautions**

### Avoiding damage to the appliance.

#### Do not cover the outer lid with a cloth.

The outer lid may become deformed, cracked or discolored and result in malfunction.

Do not place the appliance in direct sunlight.

Do not use the inner pan for other applications.

Please always clean the foreign objects such as rice on the pan, cast heater and sensor. Otherwise, it may result in malfunction of the unit.



### Avoiding damage to the inner pan.

Do not leave the rice scoop or any other objects inside the inner pan. The inner pan should be cleaned immediately after cooking.

Do not use the inner pan as mixing utility. Do not use metal utensils that can scratch or crack the inner pan.

The coated surface of the inner pan will gradually wear away, so use with care.

Do not tap or rub the inner surface of the inner pan. Clean only with a sponge or soft cloth. Do not use a scouring pad.



# How to Cook Rice





Approx. 180 mL per cup.



Add plenty of water, stir, and quickly drain the water.

Rinse and wash the rice until the water becomes relatively clear.

English



4



# Measure the rice using the measuring cup provided.

#### **Rinse the rice**

Do not rinse the rice by using the inner pan.

Rinse the rice in a separate bowl. Do not rinse the rice in the provided inner pan as non-stick coating may be damaged. Pour the washed rice into the inner pan.

#### Pour in the desired amount of water

Set the inner pan on a flat surface when adding the water.

Add water according to the level indication. (When cooking sushi rice, use the level indication for sushi rice.)

Add water to the corresponding level, and then adjust to suit your taste. (Do not increase the water more than 1/4 cup of water.)

Hot water is not recommended for cooking as it may result in soggy rice.

#### Put the inner pan into the body.

Wipe water off around the surface of the inner pan before placing into a rice cooker, otherwise it may result in strange noise during cooking.

Be sure that the inner pan is directly in contact with the cast heater. Improper contact between the inner pan and the cast heater may result in uncooked rice. Be also sure that the inner lid is attached to the outer lid.

# Close the outer lid, plug in the AC cord to the power supply outlet.

Close the outer lid firmly. (If it is not securely closed, cooking will be affected.)





Plug in the AC cord to the power supply outlet.

6

# How to Cook Rice







Press the switch to start cooking.

The "RICE COOKING" light lights up



Do not open the outer lid or unplug the appliance while it is operating. Please ensure that the switch is pressed and the "RICE COOKING" light lights up properly.

(The rice will not be cooked in warming mode.)



The "KEEP WARM" light lights up to Indicate warming mode.

After the rice is cooked, it is recommended to let it steam and warm for another 15 minutes. Then scoop and mix the rice well.

After the rice is cooked, the appliance will automatically switch to warming mode. Let the rice steam and warm for another 15 minutes without opening of the outer lid. Scoop and mix the rice well.

English

Unplug the appliance when it is not in use.

# **To Keep Cooked Rice Warm and Tasty**

After the rice has been steamed and warmed, scoop and mix the rice gently. Do not leave the rice scoop inside the inner pan.

Do not warm the rice for more than 12 hours. (It may cause a smell or discoloration.) Do not use the rice cooker to warm other kinds of food. It is for rice only. Do not warm cold rice.

#### Note:

Variations in the room temperature may cause the rice to discolor and lose its fresh smell.

Unplug the rice cooker when it is not be used.

Clean the dew collector located on the side of the rice cooker by pouring out the water, cleaning and sanitizing it after every use.

## How to Clean

- Before cleaning, please pull out the power plug first. Do not clean the rice cooker until it cools down.
- DO NOT use objects such as benzine, thinner, cleansing powder or metal scrubbers.

#### Inner lid / Inner pan

Wash with a dishwashing detergent and soft sponge. Wipe off any moisture on the outside of the inner pan.

\*Note : Clean after every use.

#### Body / Outer lid / Protecting rim

Wipe with a damp cloth.

#### **Cast heater**

English

If any objects stick on the bottom of the pan or cast heater, remove them immediately.

Object, such as rice or other food debris may cause a malfunction and damage.

#### **Dew collector**

Remove, clean and sanitize after every use.



8

# Troubleshooting

		Ric	ce cook	ing		K	eep wai	m	No swit	Produ
Check Items	Too hard	Uneven cooking (The core of rice remains.)	Too soft	Viscous juice overflows	Burnt rice at the bottom of the inner pan	Rice produces an odor	Changes in color	Gets too dry	No reaction to any switch operation	Produces a strange sound
<ul> <li>Are the volume of rice and the volume of water correct?</li> </ul>	•	•	•	•	•				• Z	00 € (01
Is the rice rinsed adequately?									cur	"Pang" water c (outsid
Is the bottom of the inner pan dented?	٠								rent	sound drops u e) of th
<ul> <li>Is there any foreign matter sticking to the outside of the inner pan or the sensor?</li> </ul>	•	•	•		•	•	•		supplie	"Pang" sound produced durir water drops under the action (outside) of the inner pan.
Is the rice being cooked with oil?									] <u>ä</u>	roduced du der the act inner pan-
Has the rice been well fluffed after cooking?	٠								] ⊑	d du actio
<ul> <li>Is the keep warm continuing for more than 12 hours?</li> <li>Is the too small amount of rice kept warm?</li> </ul>						•	•	•	No current supplied. Pull out the plug	produced during cooking inder the action of thermal ie inner pan.
<ul> <li>Is the Keep Warm being used with the scoop in it?</li> </ul>						•			and check the	
<ul> <li>Is the Keep Warm setting being used on cold rice?</li> </ul>									ock the	is the sound of bu expansion on the
Is the outer lid securely closed?									breaker	of b n th
Is the inner pan clean?						•			aker.	
<ul> <li>AC cord unplugged or switched turned off during rice cooking?</li> </ul>		•				•				rsting of bottom

# **Specifications**

IV	lodel No.	SR-UH36F					
Power supply		230 - 240 V ∼ 50 Hz					
Power	During cooking	1400 - 1524 W					
consumption	During keep warm	124 W					
Capacity		1.0 - 3.6 L (5 - 20 cups dry rice)					
Wei	ght (approx.)	17.6 lbs (8.0 kg)					
Dimensions (H×W×D) (approx.)		34.7 cm × 42.8 cm × 38.4 cm					
A	ccessories	Measuring cup, Rice scoop, Scoop holder					



安全注意事項





11



### 使用注意事項

避免損壞本機。

請勿將抹布蓋在外蓋上。 外蓋扭曲變形,變色而造 成故障。

請勿放置在太陽下。

請勿將内鍋用於其他用途。



請及時清潔内鍋、電熱板和傳感器上的飯粒等異物。 否則,可能會造成本機故障。

避免内鍋損壞。

請勿將塑膠飯勺或其他任何物件留在鍋内。 烹煮後,務必即刻清洗内鍋。 請勿將攪拌器在内鍋中使用。 切勿使用金屬器物以避免刮痕或裂痕。 外表的塗層會慢慢剝離,請小心使用。 請勿敲打或磨刷。 衹可以使用海綿或乾布清理。 不要使用百潔布。

### 零件名稱





(外蓋未蓋好,水會溢出來,飯也會煮不好)

插座

# 烹煮方法







開始煮 飯的標志。





烹煮時請勿打開外蓋或拔插頭。 請確定已按下開關按鈕, 然後"RICE COOKING"燈會點亮。 (溫度低,飯没法煮好)

飯煮好後,先焗15分鐘,再把飯翻鬆。

煮好後,鍋會自動保溫。 煮好後,請勿打開外蓋。先讓飯焗15分鐘。 然後再將米飯翻鬆。 没有使用時,請把插頭拔出收好。

#### "KEEP WARM"燈是表示正在保溫中。

### 保持煮好的飯溫熱美味

米飯煮好後,輕輕翻鬆米飯。 請勿把塑膠的飯勺留在内鍋裏。 請勿將米飯保溫超過12小時(可能造成異味或變色) 請勿將其他食品放入保溫。衹適合米飯保溫。 請勿將冷米飯直接保溫。

#### 注:

溫度大幅變化(有時高有時低)將造成米飯的顏色變化並產生異味。 保溫飯煲用完後或不需要保溫時,請把插頭拔下。 將保溫飯煲旁的水滴收集器内的水倒乾淨後再清洗,每次使用後請清洗和消毒。

### 清潔方法



# 故障處理

$\smallsetminus$			烹煮米飢	ź			保溫		何操	產
檢查項目	太硬	(飯還很生)	太軟	米湯滿溢出來	產生焦飯	產生焦味	顏色變化	變得太乾	何反應	產生怪聲音
● 米與水的份量是否正確?	•	•	•	•	•				•	
● 米是否充分地淘洗乾淨?				•	•	٠			無電源提供。	滴爆裂發出
● 内鍋底是否正常?	•	•			•				源 提	裂术發飯
<ul> <li>● 内鍋的外表或感應器</li> <li>是否有異物沾黏?</li> </ul>	•	•	•		٠	٠	•			田 守, "乓", "
● 米飯是否同油一起烹煮?									山	* 外 聲)
● 米飯煮好後是否完全翻鬆?	•								明	。鍋底
<ul><li>● 是否保溫超過12小時?</li><li>● 是否保溫時飯量太少?</li></ul>						•	•	•	拔出插頭再重新插入	聲。 )鍋底因熱膨脹作用導致水
● 是否將飯勺插於飯中保溫?									, î	作用
● 冷飯保溫?										導致
● 外蓋是否蓋緊?										л̂
● 内鍋是否乾淨?					•	٠				
● 烹煮米飯時, 是否拔出交流電線或關掉開關?										

# 規格

型號		SR-UH36F
伯	共 電	230 - 240 V ∼ 50 Hz
⊤+⊨≠≠	烹煮中	1400 - 1524 W
功耗	保溫中	124 W
容	皇	1.0 - 3.6 L (5 - 20 杯米)
重量	(大約)	17.6 lbs (8.0 kg)
尺寸 (高 × )	寬×深) (大約)	34.7 釐米 × 42.8 釐米 × 38.4 釐米
附件		量杯,飯勺,飯勺架









# 使用上のお願い

本体の損傷を避ける

**外ふたを布で覆わない** 外ふたが変形、ひび割れ、変色して誤動作の原因

直射日光が当たるところに置かない

内なべを他の用途に使わない

日本語

内なべ、熱板、センサーに付いたごはん 粒などの異物は必ず取り除く (故障の原因)

# 異物 教板 センサー

### 内なべの損傷を避ける

しゃもじや他のものを内なべに入れたま まにしない。 内なべのお手入れは調理後すぐにする。 内なべの中で混ぜない。 内なべを傷をつけたり、ひびを入れたりす るような金属製のものは使わない。 内なべのコーティングはご使用とともに 磨耗するので丁寧にお使いください。 内なべの表面は、たたいたりこすったりし ない。お手入れにはスポンジかやわらか い布を使う。研磨粒子部分は使わない。

### 各部の名前



21











スイッチを押して 炊飯を始める

"炊飯"ランプ が点灯する



保温モードになると"保温" ランプが点灯します。 スイッチを押す

炊飯中にふたを開けたり、電源プラグを 抜いたりしないでください。 スイッチを押して"炊飯ランプ"が点灯 していることを確認してください。 (保温モードでは炊飯できません)

炊飯終了後は保温になります、 15分間蒸らしてください。 それから、べたつきを防ぐために、 ごはん全体をほぐしてください。

使い終わったら、電源プラグを 抜いてください。

### 保温する

蒸らしが終わったら、ごはんを優しくほぐしてください。 しゃもじを入れたままにしないでください。 12時間以上の保温はしないでください。(においや変色の原因) 他の食品を温めるために使わないでください。 冷たいごはんは温めないでください。

#### お知らせ

周囲の温度によって、ごはんがにおう、変色することがあります。 使用しないときは炊飯器の電源プラグを抜いてください。 つゆ受けは使うたびにたまった水を捨て、お手入れしてください。



# こんなときは

			炊飯時				保温時		アイ	変な
チェック項目	かたい	炊きむらがある (芯がある)	やわらかい	吹きこぼれる	底がこげている	でおう	黄ばむ	乾燥する	「ッチが反応しない	変な音がする
● お米と水の量を正しく計りましたか?	•	•	٠	•	•				●	• 核つ
● お米をよく洗いましたか?				•	•	•			内認し	飯た中水
<ul> <li>内なべの底が変形していませんか?</li> </ul>									また。	にに
<ul> <li>内なべの底やセンサーに異物が付いていませんか?</li> </ul>	•	•	•		•	•	•		電力が供給されてい 確認してください。	炊飯中に「パン」 した水滴が膨張し
● 油脂類を入れて炊飯していませんか?						•			] ° ົ 	よて 音感
● 炊飯終了後、ごはんをほぐしましたか?									ません。	
● 12時間以上保温していませんか?										そっと. ちつを
● 少ない量を保温していませんか?									電源プラ	は 通 内 内
● しゃもじを入れたまま保温していませんか?						•			グを抜いてブ	なっ うべ、 風
● 冷たいごはんを保温していませんか?						•			521	: (外側)
● ふたは確実に閉まっていますか?									Ĩ	5 ()
● 内なべはきれいに洗っていますか?									- - -	に付着
<ul> <li>         炊飯中に電源プラグが抜かれた、またはス イッチを切りましたか?     </li> </ul>		•				•			Ŕ	

# 仕様

	品番	SR-UH36F
	電源	230 - 240 V $\sim$ 50 Hz
消費電力	炊飯時	1400 - 1524 W
府其电力	保温時	124 W
	容量	1.0-3.6L (5-20 カップのお米)
丘 馬	質量(約)	17.6 lbs (8.0 kg)
寸法(高さ×幅×奥行)(約)		34.7 cm x 42.8 cm x 38.4 cm
	付属品	計量カップ、しゃもじ、しゃもじ受け

日本語

### Note / 便笺 / メモ

### Note / 便笺 / メモ


Panasonic Appliances India Co., Ltd. Web site : http://panasonic.com © Panasonic Appliances India Co., Ltd. 2022

RZ19NL76