

IN THE EVENT OF NOT USING THE APPLIANCE FOR AN EXTENDED PERIOD :

- Disconnect the power supply.
- Remove all products from the storage compartment; clean the inner cabinet and all accessories.
- Leave the doors open in order to allow free air circulation through the inner cabinet, thus preventing the development of bad odours and mildew.
- Make sure the room is aired regularly

WARNING

Keep ventilation openings, in the appliance enclosure or in the built in structure


Clear of obstruction.

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

Do not use electrical appliances inside the food storage section of the appliance, unless they are of the type recommended by the manufacturer

ANVIL

OPERATING AND INSTRUCTION MANUAL

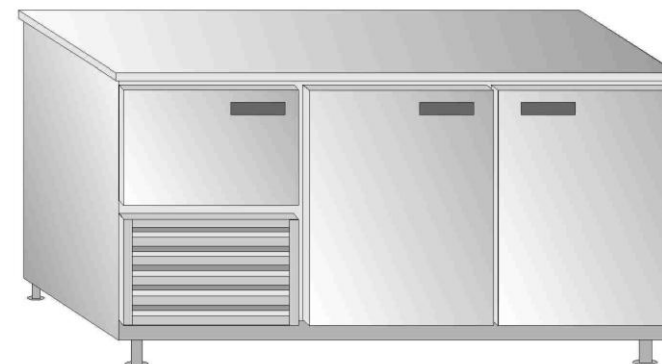

UNDERBAR MODELS



OPERATING INSTRUCTIONS

GENERAL

- Please read the instructions carefully as it contains important information regarding the safety, the installation of the appliance, its use and maintenance.
- A qualified person in accordance with the manufacturer's instructions should carry out installation of this appliance.
- Disconnect the appliance from the main supply outlet before attempting to do any maintenance and service or before removing the bottom grille of the appliance.
- In case of any failure of the appliance, switch off and have it attended to by a qualified technician using original spare parts.

INSTALLATION AND POSITIONING

- The appliance is supplied with shelves and hooks which the owner can install at different levels of his choice. It is also equipped with an advertising panel, which is hooked onto the top of the appliance.
- The appliance should be placed in an adequately ventilated room far from other sources of heat and in such a way that good air circulation – especially in front of the grille at the bottom of the appliance – is maintained. The appliance must also be placed approximately 100mm away from the wall.
- The room temperature should not exceed 35°C.
- Level the appliance by rotating the two front feet, situated at the corners of the base of the appliance. It is possible to level the appliance in all directions using the two feet only, and this will ensure proper functioning of the doors.

ELECTRICAL CONNECTIONS

- Any electrical alterations to the appliance should be carried out in conformity with local standards and regulations.
- The appliance operates off a single-phase 220/240 volt, 50 Hz power supply.
- To connect the appliance, insert the plug into the mains supply socket, making sure that:
 - a) The mains socket has an adequate current carrying capacity, and is effectively connected to earth.
 - b) The mains socket has adequate overload protection according to standard regulations.
- The electrical safety of this appliance is guaranteed only when it is correctly connected to an efficiently grounded installation as specified in the standard electrical safety regulations.
- If in doubt about the efficiency of the earth connection and electrical installation, have it tested by a qualified electrician. The manufacturer accepts no responsibility for situations arising from the failure to comply with these measures.

INSTRUCTIONS TO THE USER

REMARKS

- In order for the appliance to work properly, it is necessary to leave enough space between packed products, to allow free airflow. This will ensure efficient and economical functioning.
- Isolate the appliance from the electrical supply. Remove the bottom grille and clean the condenser fins of the refrigeration unit at least once every quarter. Using a soft brush or vacuum cleaner. Do not use a sharp instrument. Periodically, the condenser should be cleaned thoroughly by blowing through the fins using CO₂ gas. Always blow from the inside out, thus avoiding the dirt being blown onto the fan motor.

SWITCHING ON

- Turn on the power at the mains.
- The appliance is equipped with fluorescent lighting on the inside, and to light up the advertising panel at the top of the cabinet.
- The temperature on the inside of the cabinet is regulated by use of a mechanical thermostat, which is preset at the factory. Should there be need to alter the settings of the thermostat, contact the supplier or the service agent.
- When merchandising the cabinet, care must be taken not to damage the rubber seals on the door, by placing sharp objects against the door to keep it open. Damaged seals must be replaced, as the efficiency of the cooler will be adversely affected by warm air drawn into the cabinet.

CHANGING FLUORESCENT TUBES

INTERNAL LIGHT

- Switch the cooler off at the plug point.
- Twist the tube to disengage from the fitting on both ends.
- Remove the top cap from the light protector tube and slip the fluorescent tube out.
- Slip the new fluorescent tube into the protector tube and replace the top cap.
- Replace the new tube by inserting the points at the end of the tube into the fitting and twist the tube until engaged.
- Switch the cooler on again.

IMPORTANT NOTICE

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard

CLEANING AND GENERAL MAINTENANCE

- Before carrying out any cleaning or maintenance on the appliance, ensure that the power supply has been disconnected.
- The storage compartment, outer cabinet and all accessories of the appliance should be cleaned with warm water and a neutral soap, thoroughly rinse with clean water and wipe dry. No detergents should be used.