








 

 




Machine	Explode	Code	Description
Apuro Light Duty Chamber Vacuum Sealer	1-3,6-11	AJ539	Complete Outer Lid
Apuro Light Duty Chamber Vacuum Sealer	3	AF900	PCB
Apuro Light Duty Chamber Vacuum Sealer	4		Upper Left-hand Cover
Apuro Light Duty Chamber Vacuum Sealer	5		Upper Right-hand Cover
Apuro Light Duty Chamber Vacuum Sealer	12	AJ540	Interior Lid
Apuro Light Duty Chamber Vacuum Sealer	13	AF901	Upper Pusher Bar
Apuro Light Duty Chamber Vacuum Sealer	14	AF902	Lid Gasket
Apuro Light Duty Chamber Vacuum Sealer	15	AF903	Teflon Tape
Apuro Light Duty Chamber Vacuum Sealer	16-20	AF904	Sealing Bar Assembly
Apuro Light Duty Chamber Vacuum Sealer	21		Sealing Bar Mount
Apuro Light Duty Chamber Vacuum Sealer	22		Metal Rim
Apuro Light Duty Chamber Vacuum Sealer	23		Screw M4x15
Apuro Light Duty Chamber Vacuum Sealer	24		Rear Lower Axis
Apuro Light Duty Chamber Vacuum Sealer	25		Axis Clamp
Apuro Light Duty Chamber Vacuum Sealer	26		Spindle
Apuro Light Duty Chamber Vacuum Sealer	27		Plastic Mounting
Apuro Light Duty Chamber Vacuum Sealer	28		Release Valve Mounting
Apuro Light Duty Chamber Vacuum Sealer	29	AJ221	Magnet
Apuro Light Duty Chamber Vacuum Sealer	30	AF908	Fan
Apuro Light Duty Chamber Vacuum Sealer	31		T-shaped Connector
Apuro Light Duty Chamber Vacuum Sealer	32		Vacuum Connection Hub
Apuro Light Duty Chamber Vacuum Sealer	33,34,43	AJ216	Suction Base Assembly
Apuro Light Duty Chamber Vacuum Sealer	35-42	AG676	Push Pump Set(4766-AU,with thread)
Apuro Light Duty Chamber Vacuum Sealer	35-42	AH039	Push Pump Set(new version, without thread)
Apuro Light Duty Chamber Vacuum Sealer	44		Lock
Apuro Light Duty Chamber Vacuum Sealer	45		Plastic Cover
Apuro Light Duty Chamber Vacuum Sealer	46		Lower Housing
Apuro Light Duty Chamber Vacuum Sealer	47	AF909	On/Off Switch
Apuro Light Duty Chamber Vacuum Sealer	48		Socket
Apuro Light Duty Chamber Vacuum Sealer	49		Rear Right-hand Arm
Apuro Light Duty Chamber Vacuum Sealer	50		Front Right-hand Arm
Apuro Light Duty Chamber Vacuum Sealer	51		Front Right-hand Cover
Apuro Light Duty Chamber Vacuum Sealer	52		Screw Cover
Apuro Light Duty Chamber Vacuum Sealer	53		Mounting Plate
Apuro Light Duty Chamber Vacuum Sealer	54		Plastic Plug
Apuro Light Duty Chamber Vacuum Sealer	55		Front Lower Axis
Apuro Light Duty Chamber Vacuum Sealer	56		Screw PT. Φ 3.0*10.0mm NI-PTD
Apuro Light Duty Chamber Vacuum Sealer	57		Side Panel
Apuro Light Duty Chamber Vacuum Sealer	58	AF911	Motor
Apuro Light Duty Chamber Vacuum Sealer	59		Hose
Apuro Light Duty Chamber Vacuum Sealer	60		Switch Housing
Apuro Light Duty Chamber Vacuum Sealer	61	AF910	PCB (Power)

Apuro Light Duty Chamber Vacuum Sealer	62		Lower Left-hand Cover
Apuro Light Duty Chamber Vacuum Sealer	63		Front Left-hand Arm
Apuro Light Duty Chamber Vacuum Sealer	64		Front Left-hand cover
Apuro Light Duty Chamber Vacuum Sealer	65		Rear Left-hand Arm
Apuro Light Duty Chamber Vacuum Sealer	66		Black Pressure Switch
Apuro Light Duty Chamber Vacuum Sealer	67		Switch SC7301-2VAS-OP1
Apuro Light Duty Chamber Vacuum Sealer	68		Handle
Apuro Light Duty Chamber Vacuum Sealer	69		Door Panel
Apuro Light Duty Chamber Vacuum Sealer	70		Door Insert
Apuro Light Duty Chamber Vacuum Sealer	71		Base Plate
Apuro Light Duty Chamber Vacuum Sealer	72	AF912	Feet (Set 4)
Apuro Light Duty Chamber Vacuum Sealer	73		Power Cord (SAA Plug)
Apuro Light Duty Chamber Vacuum Sealer	74	AJ220	Magnetic Valve
Apuro Light Duty Chamber Vacuum Sealer	75		Extraction-Combination-O-Ring
Apuro Light Duty Chamber Vacuum Sealer	76		Vent-Cap
Apuro Light Duty Chamber Vacuum Sealer	77		Tape