



| Machine | Explode | Code | Description |
|-------------------------------------|---------|-------|--------------------------------|
| DB203-A Apuro Double Fryer - 2x3Ltr | 1 | AD585 | Indicator Light |
| DB203-A Apuro Double Fryer - 2x3Ltr | 2 | AK554 | Knob |
| DB203-A Apuro Double Fryer - 2x3Ltr | 3 | | Electrical Rear Plate Assembly |
| DB203-A Apuro Double Fryer - 2x3Ltr | 4 | N117 | Breaker |
| DB203-A Apuro Double Fryer - 2x3Ltr | 5 | N116 | Thermostat |
| DB203-A Apuro Double Fryer - 2x3Ltr | 6 | AH342 | Switch |
| DB203-A Apuro Double Fryer - 2x3Ltr | 7 | N280 | Heating Element |
| DB203-A Apuro Double Fryer - 2x3Ltr | 8 | N282 | Basket |
| DB203-A Apuro Double Fryer - 2x3Ltr | 9 | N279 | Oil Pan Assembly |
| DB203-A Apuro Double Fryer - 2x3Ltr | 10 | | Complete Fryer Head |
| DB203-A Apuro Double Fryer - 2x3Ltr | 11 | N152 | Feet |
| DB203-A Apuro Double Fryer - 2x3Ltr | 12 | | Baffle Plate |
| DB203-A Apuro Double Fryer - 2x3Ltr | 13 | AH040 | Switch |
| DB203-A Apuro Double Fryer - 2x3Ltr | 14 | AC841 | Cover Assy |
| DB203-A Apuro Double Fryer - 2x3Ltr | 15 | AK556 | Handle |
| DB203-A Apuro Double Fryer - 2x3Ltr | 16 | | AUS Plug & Lead |
| DB203-A Apuro Double Fryer - 2x3Ltr | N/A | AK559 | Cable Clamp |