



Machine	Explode	Code	Description
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	1		Electric box back cover assy
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	2	N116	Thermostat
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	3	AH342	Switch
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	4		Baffle Plate
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	5	AK916	Heating Element
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	6		Sensor Clamp
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	7	AK361	Knob
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	8	N120	Oil Pan
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	9	N283	Basket
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	10	AK365	Cover Assy
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	11		Handle
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	12	AH040	Swicth
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	13	N117	Breaker
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	14	AD585	Indicator Light
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	15		Electrical Box Assy
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	16		Power Cord
FB971-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	N/A	N152	Feet