



Machine	Explode	Code	Description
FS498-A Apuro Fryer - 5Ltr 2.2kW	1		Triangle Plate
FS498-A Apuro Fryer - 5Ltr 2.2kW	2	N117	Breaker
FS498-A Apuro Fryer - 5Ltr 2.2kW	3		Heating Element
FS498-A Apuro Fryer - 5Ltr 2.2kW	4		Gasket
FS498-A Apuro Fryer - 5Ltr 2.2kW	5	AE837	Control Panel
FS498-A Apuro Fryer - 5Ltr 2.2kW	6	AH342	Switch
FS498-A Apuro Fryer - 5Ltr 2.2kW	7	N120	Oil Pan Assembly
FS498-A Apuro Fryer - 5Ltr 2.2kW	8	AD585	Indicator Light (Green)
FS498-A Apuro Fryer - 5Ltr 2.2kW	9	N116	Thermostat
FS498-A Apuro Fryer - 5Ltr 2.2kW	10	N152	Feet
FS498-A Apuro Fryer - 5Ltr 2.2kW	11	AK361	Knob
FS498-A Apuro Fryer - 5Ltr 2.2kW	12		Stuffing Nut
FS498-A Apuro Fryer - 5Ltr 2.2kW	13	AK561	Basket
FS498-A Apuro Fryer - 5Ltr 2.2kW	14		Electrical Box Back Cover Assembly
FS498-A Apuro Fryer - 5Ltr 2.2kW	15		Electrical Box Assy.
FS498-A Apuro Fryer - 5Ltr 2.2kW	16	AK556	Handle
FS498-A Apuro Fryer - 5Ltr 2.2kW	17	AK366	Cover Assembly
FS498-A Apuro Fryer - 5Ltr 2.2kW	18		Main Body Assy.
FS498-A Apuro Fryer - 5Ltr 2.2kW	19	AH040	Switch
FS498-A Apuro Fryer - 5Ltr 2.2kW	20	AK559	Bushing
FS498-A Apuro Fryer - 5Ltr 2.2kW	21		Teflon Stick
FS498-A Apuro Fryer - 5Ltr 2.2kW	22		Limit Tube
FS498-A Apuro Fryer - 5Ltr 2.2kW	23		Baffle Assy
FS498-A Apuro Fryer - 5Ltr 2.2kW	24		Power Cord