








Machine	Explode	Code	Description
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	1	AE837	Eletronic Timer Assy
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	2	N117	Breaker
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	3		Electrical Box Back Cover Assembly
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	4	AK361	Knob
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	5	N116	Thermostat
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	6	AH342	Switch
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	7		Eletronic Box Assy
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	8		Baffle Plate
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	9		Heating Element
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	10		Sensor Clamp
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	11	AK561	Basket
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	12	N120	Pan
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	13	AD585	Indicator Light (Green)
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	14		Eletronic Box Assy
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	15	N152	Feet
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	16	AH040	Switch
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	17	AK366	Cover Assy
FS499-A Apuro Double Fryer - 2x5Ltr 2x2.2kW	18		Handle