 


# DURONIC

Creative Consumer Electronics

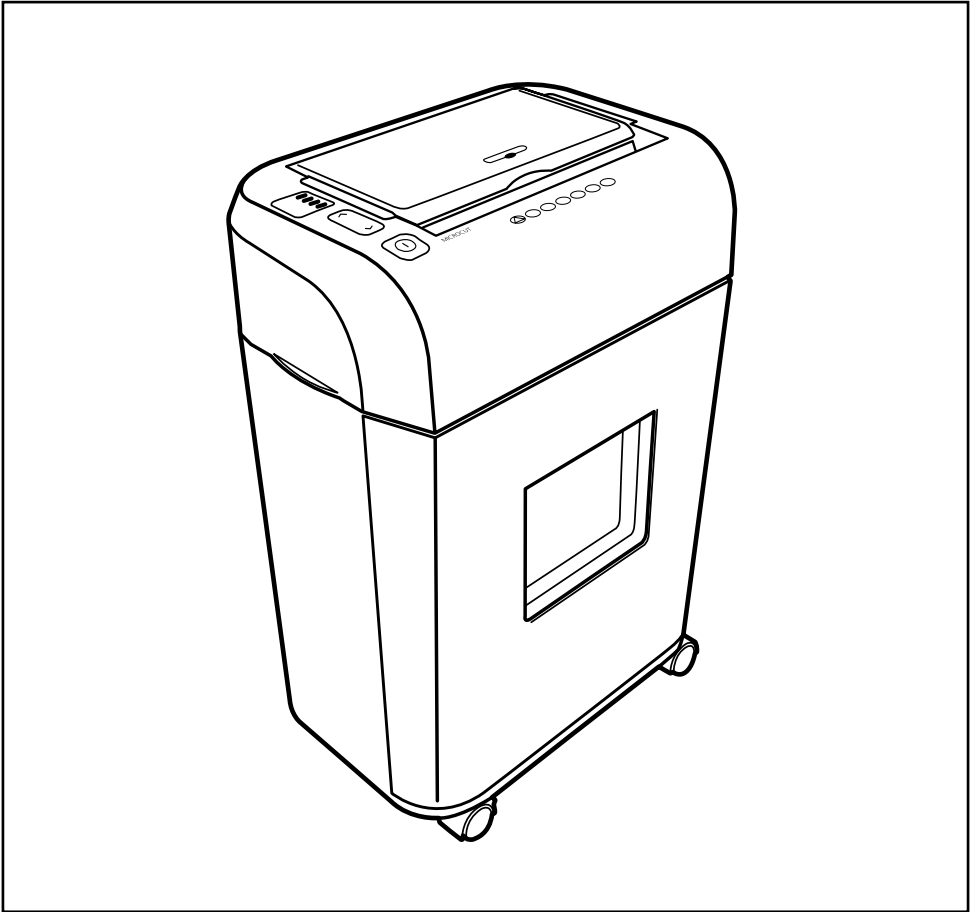

## PS609 - Shredder

PLEASE READ ALL THE INSTRUCTIONS BEFORE USE



[duristic.com](http://duristic.com)



[duristic](https://www.youtube.com/channel/UCduristic)



[@duristicmedia](https://www.instagram.com/duristicmedia)



[Duristic](https://www.facebook.com/duristic)



 
[@duristicmedia](https://www.twitter.com/duristicmedia)



# Contents

<b>Specifications</b>	<b>4</b>
<b>Safety Instructions</b>	<b>5</b>
<b>Warning Icons</b>	<b>7</b>
<b>Cleaning and Maintenance</b>	<b>7</b>
<b>Setup</b>	<b>8</b>
<b>Operation</b>	<b>8</b>
<b>Special Features</b>	<b>9</b>
<b>Capacity</b>	<b>10</b>
<b>Paper Jams &amp; Overloads</b>	<b>10</b>
<b>Warranty</b>	<b>13</b>

## Specifications

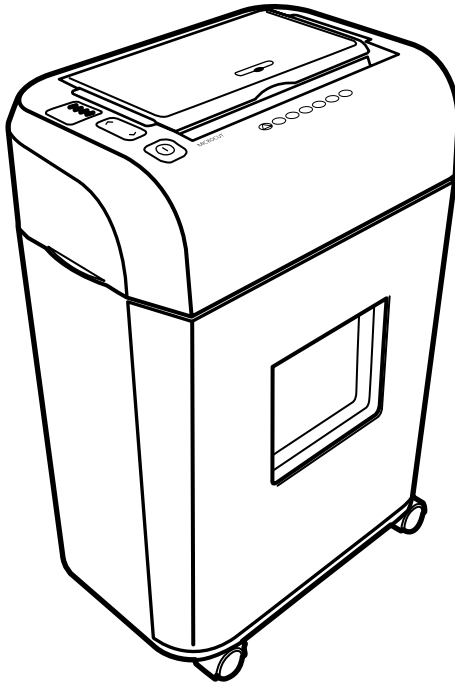

<b>Shred Type:</b>	Micro-Cut
<b>Shred Size:</b>	4mm x 10mm
<b>Shredding Capacity:</b>	7-9 Sheets of paper (80gsm A4) OR 1 bank card
<b>Paper Tray Capacity:</b>	100 Sheets
<b>Duty Cycles:</b>	10 min on / 40 min off for auto shred 3 minute on / 40 off for manual shred
<b>Feed Opening:</b>	220mm / 22cm
<b>Dimensions:</b>	337 x 218 x 506 mm
<b>Bin Size:</b>	17 Litre
<b>Weight:</b>	8.3kg
<b>Input Input:</b>	220 - 240V, 50-60Hz, 2.4A

## Safety Information

*Please read these instructions fully and keep for future reference.*

### **Before Use**

- Dispose of all packaging carefully and responsibly.
- This appliance is designed for indoor use only. Do not use outdoors.
- Do not use this shredder for industrial and commercial use, or any other purpose.
- The shredder **MUST** be positioned on a firm level base before and during use.
- Ensure the power cable is not caught under the appliance.
- Ensure the correct power supply is used (220-240V AC).
- Keep the power cable away from hot surfaces.
- Do not place the shredder near a heat source or in direct sunlight.
- Do not operate under or near curtains or other combustible materials.
- Do not immerse the machine in water or any other liquid to protect against electric shock.
- Do not spray any flammable synthetic oil, petroleum-based or aerosol products onto this shredder as it may cause a fire.
- Do not allow the shredder to be exposed to rain or any other moisture.
- Do not attempt to repair the shredder by yourself. If for any reason your shredder stops working properly, contact Duronic Customer Care Team for advice.

## During Use

- **WARNING!** Keep loose articles of clothing; ties, jewellery, hair or other objects away from the feed opening in order to prevent injury.
- Never insert fingers into the feed opening. Serious injury may result!
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **DO NOT** leave children unattended with the shredder.
- **ALWAYS** keep the shredder off and unplugged when not in use.
- **DO NOT** attempt to feed more sheets of paper into the feeder than specified.
- **ALWAYS** limit continuous shredding to the specified time as suggested in the instruction manual. See section titled 'Capacity'.
- **DO NOT** attempt to shred materials other than paper and credit cards in the provided feed slots.
- To avoid overheating the shredder, limit continuous shredding to the specified time as suggested in this instruction manual.
- Do not operate the shredder if the cable or plug are damaged or if the shredder has malfunctioned in any way.
- **ALWAYS** unplug the shredder when moving, cleaning or emptying the waste basket.
- **DO NOT** attempt to operate the shredder if the shredder is experiencing any kind of problem.
- If your machine stops working, do not attempt to repair it yourself! Contact Duronic (Shine-Mart) for assistance.

## Warning Icons

Please take note of these warnings displayed on the machine:



**WARNING**



**READ INSTRUCTION  
BEFORE USE**



**NO FINGERS  
OR HANDS**



**NO HAIR**



**NO LOOSE  
CLOTHING**



**NO CHILDREN**



**NO AEROSOL  
PRODUCTS**

## Cleaning and Maintenance



**IMPORTANT:** Always unplug the appliance from the power socket during cleaning and maintenance.

- Never use any sharp instruments or abrasive substances, soap, household cleaner, detergent or wax polish for cleaning.
- Never clean the appliance with flammable fluids. It could cause a damage and fire hazard.
- Use lukewarm water on a cloth to clean the cabinet and waste basket of the appliance and wipe it dry.
- Ensure the unit is dry before connecting to the mains.

## Setup

1. Carefully place the PS609 shredder on a dry, flat, level surface.
2. Slide the waste basket into the shredder cabinet ensuring that it is completely inserted into the shredder fits flush with the cabinet.
3. Be careful not to place your fingers near the cutter blades.
4. Plug the power cord into any standard 220-240-Volt AC mains outlet / plug socket which shall should be located near the equipment and should be easily accessible.
5. Press the ON/OFF button. The 'ready' LED indicator should light up blue.
6. This means that the shredder is now ready to use.

*You are now ready to start shredding.*

**Note:** It is recommended that when the auto sheet feed tray is not in use, the paper tray should remain in the closed position.

## Operation

### **For Manual Feed:**

To use the manual feed for shredding, a maximum of 9 sheets at one go or a single credit card is recommended. Exceeding the maximum 9 sheet capacity or by inserting multiple credit cards in one go could result in unnecessary paper jams.

When paper is inserted into the feed opening, the shredding process will start automatically and stop when the paper has completed its travel through the feed opening.




**For Auto-Sheet Feed:**

Grasp the front edge of the paper tray lid and open fully as in *Diagram 1*. Staples and paperclips should be removed prior to inserting any paper into the tray.


Place up to 100 sheets of paper, neatly stacked, into the paper tray as in *Diagram 2*. The feeding of the paper should begin immediately automatically.

 **Diagram ①**

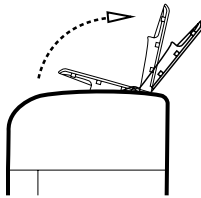

Open paper table fully

 **Diagram ②**

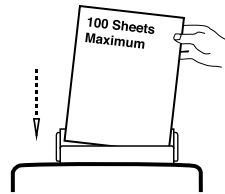

Remove Staples and Clips before inserting paper

**Special Features**

**Ready LED**

This lets you know when the shredder is working and ready to shred.

**Overheat LED**

This will light up when the motor temperature has reached its maximum allowed temperature and will automatically shut off the power to the motor. When the motor cools down, the shredder will be ready to resume shredding.

**Overload LED**

This will light up when the shredder has exceeded the maximum sheet capacity (more than 9 sheets of paper / 1 credit card)

**Bin Full LED**

This will light up when the waste bin is full and should be emptied.

## Capacity

On manual feed the PS609 will shred up to 9 sheets of A4 (80GSM) paper or one credit card. When shredding small material like credit cards, envelopes or receipts, insert them through the middle of the feed opening.

On auto-sheet feed the PS609 will shred up to 100 sheets neatly stacked in the paper tray.

## Paper Jams & Overloads

### How to Resolve a Manual Feed Paper Jam:

1. Turn off or unplug the cable from the mains plug and wait for at least 40 minutes for the thermal overload to reset.
2. Press the reverse button and gently pull the remaining sheets of paper out of the feed opening.
3. Remove the unshredded papers from the top and clear any excess paper shreds from the feed opening.




**CAUTION:** Be careful not to place your fingers near the feed opening as serious harm could occur.

### How to Resolve an Auto Feed Paper Jam:


1. Press the reverse button and remove the jammed paper.
2. If the papers have travelled further into the feed rollers and cutters, open Panel 1 by squeezing the access levers together and lifting Panel 1 (*as shown in Diagram 3*).

 Diagram ③

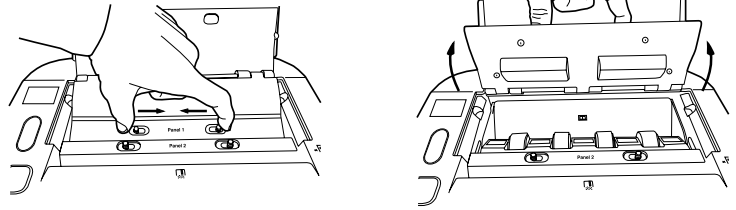

3. If further access to the jam is required, open Panel 2 (as shown in Diagram 4) to allow better access to the cutter assembly.

 Diagram ④

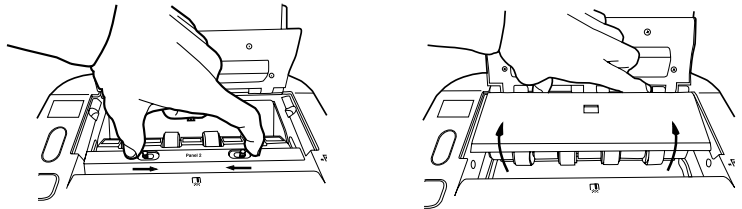

**CAUTION:** Be careful when approaching the cutter blades; they are very sharp and could harm you if mishandled.

4. After the jam has been removed, push down Panel 2 and Panel 1 back into their original secured positions.



# Warranty

1 Year Guarantee from Shine-Mart Ltd, Trademark owners of Duronic Products.  
 NOTE: THESE STATEMENTS DO NOT AFFECT YOUR STATUTORY RIGHTS AS A CONSUMER

This product has been manufactured under the strictest or quality control procedures, and using the highest quality of materials, to ensure excellent performance and reliability. It will give very good and long lasting service, provided it is properly used and maintained. The product is guaranteed for 1 years from the date of original purchase. If any defect arises due to a faulty materials or poor workmanship, the faulty product must be returned to the original place of purchase. Refund or replacement is at the discretion of that company.

Duronic Products are offered with a 1 year guarantee under the following conditions:

1. The product must be returned to the retailer with original proof of purchase.
2. The product must be installed and used in accordance with the instructions contained in this operating manual.
3. It must be used only for domestic purposes.
4. It does not cover wear and tear, malicious damage, misuse, neglect, inexpert repairs or consumable parts.
5. Shine-Mart Ltd has no responsibilities for accidental or consequential loss or damage.
6. Shine-Mart Ltd are not liable to carry out any type of servicing work, under the guarantee
7. Valid in the UK only



This product is fitted with CE:1363 plug and fuse  
 Imported by Shine-Mart Ltd, RM3 8SB



Information on waste Disposal for Consumers of  
 Electrical & Electronic Equipment.

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment, (WEEE).

Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If customers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.

---

## Follow Us

---



[duronic.com](http://duronic.com)



[duronic](https://www.youtube.com/channel/UCduronic)



[@duronicmedia](https://www.instagram.com/duronicmedia)



[Duronic](https://www.facebook.com/duronic)



[@duronicmedia](https://twitter.com/duronicmedia)

**DURONIC**