


AF24

QUICK START GUIDE | KURZANLEITUNG | GUIDE DE DÉMARRAGE RAPIDE
 GUÍA RÁPIDA DE INICIO | GUIDA RAPIDA | SKRÓCONA INSTRUKCJA OBSŁUGI




Control panel sequence 1:

- Top: Single drawer icon
- Row 1: Power button
- Row 2: Down arrow
- Row 3: 1/2 button
- Row 4: Down arrow
- Row 5: Food icons (steak, fish, chicken, burger, pizza, etc.)
- Row 6: Temperature and timer icons
- Row 7: Down arrow
- Row 8: Play/Pause button

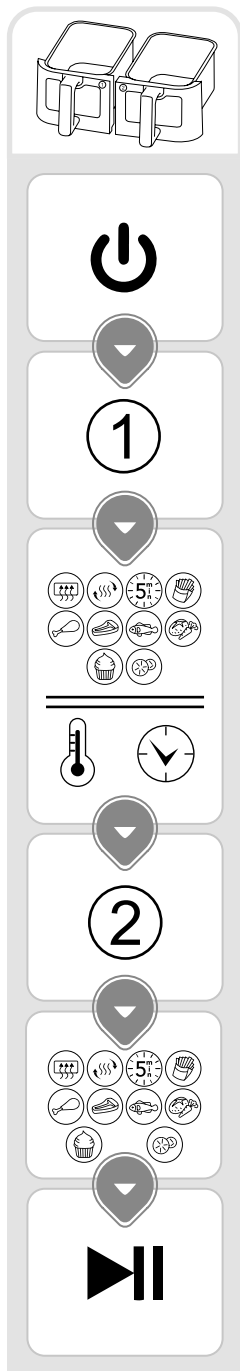


Control panel sequence 2:

- Top: Two drawers icon
- Row 1: Power button
- Row 2: Down arrow
- Row 3: 1 button
- Row 4: Down arrow
- Row 5: Food icons (steak, fish, chicken, burger, pizza, etc.)
- Row 6: Temperature and timer icons
- Row 7: Down arrow
- Row 8: 2 button
- Row 9: Down arrow
- Row 10: Food icons (steak, fish, chicken, burger, pizza, etc.)
- Row 11: Down arrow
- Row 12: Play/Pause button

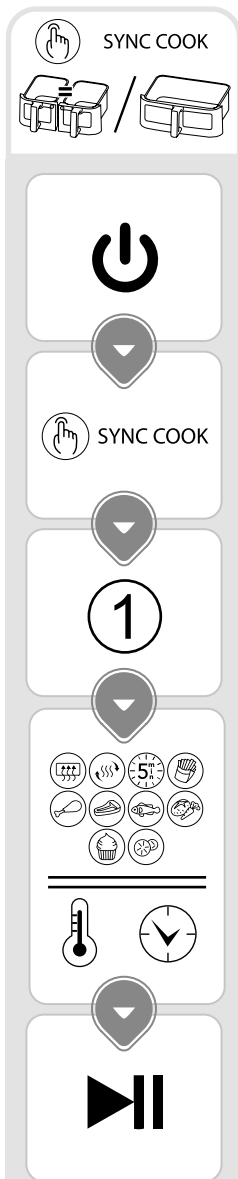

Control panel sequence 3:

- Top: SYNC COOK icon (hand pointing to button) and SYNC COOK text
- Row 1: Power button
- Row 2: Down arrow
- Row 3: SYNC COOK icon (hand pointing to button) and SYNC COOK text
- Row 4: Down arrow
- Row 5: 1 button
- Row 6: Down arrow
- Row 7: Food icons (steak, fish, chicken, burger, pizza, etc.)
- Row 8: Temperature and timer icons
- Row 9: Down arrow
- Row 10: Play/Pause button

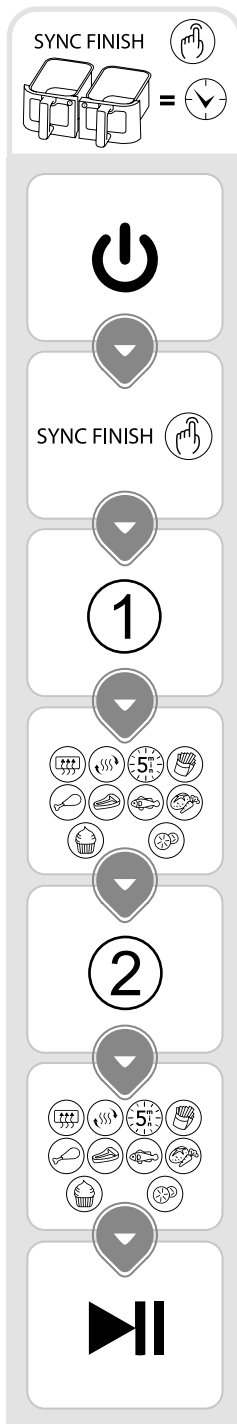

Control panel sequence 4:

- Top: SYNC FINISH icon (hand pointing to button) and SYNC FINISH text
- Row 1: Power button
- Row 2: Down arrow
- Row 3: SYNC FINISH icon (hand pointing to button) and SYNC FINISH text
- Row 4: Down arrow
- Row 5: 1 button
- Row 6: Down arrow
- Row 7: Food icons (steak, fish, chicken, burger, pizza, etc.)
- Row 8: Temperature and timer icons
- Row 9: Down arrow
- Row 10: 2 button
- Row 11: Down arrow
- Row 12: Food icons (steak, fish, chicken, burger, pizza, etc.)
- Row 13: Down arrow
- Row 14: Play/Pause button

AFD1



Sold separately
 Separat erhältlich
 Vendu séparément
 Vendido por separado
 Venduto separatamente
 Sprzedawany osobno

