

DURONIC

Creative Consumer Products



EK42 - Electric Kettle

PLEASE READ ALL THE INSTRUCTIONS BEFORE USE



duronic.com



[duronic](https://www.youtube.com/duronic)



[@duronicmedia](https://www.instagram.com/duronicmedia)



[Duronic](https://www.facebook.com/Duronic)




[@duronicmedia](https://www.twitter.com/duronicmedia)

English Manual

Features and Specifications

Model Number	Capacity	Dimensions	Power	Voltage
EK42	1.7L	24.5x21.5x15cm 10x8.4x6in Cable length: 70cm/27.5in	2500-3000W	220-240V / 50-60Hz

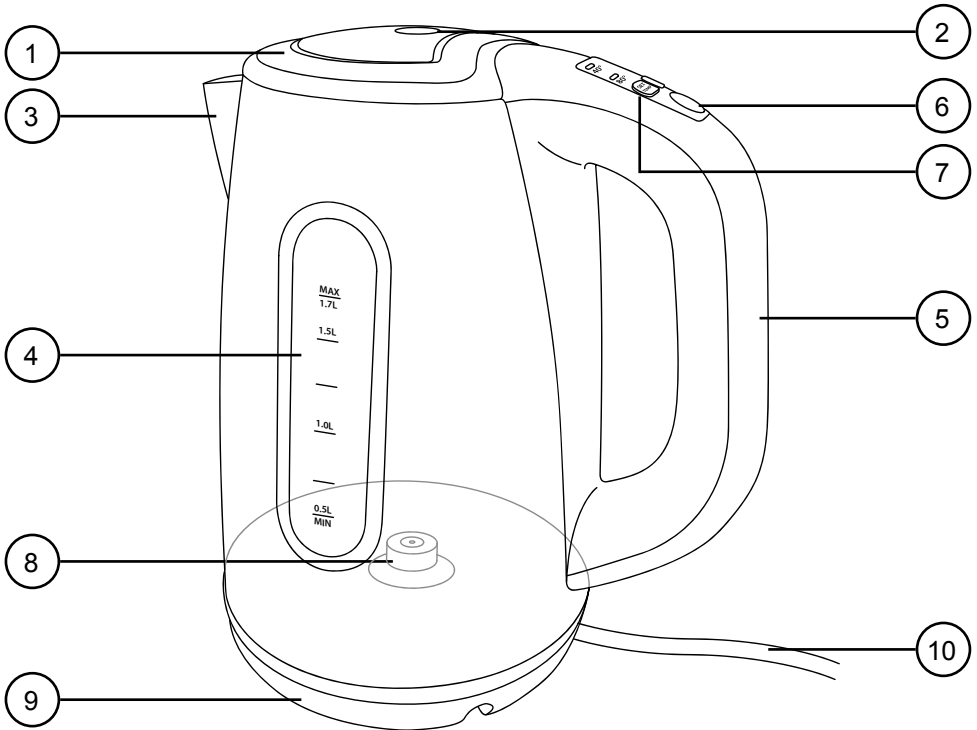

1. Lid
2. Lid release button
3. Spout
4. Water gauge
5. Handle
6. Power button
7. Temperature control buttons
8. Connector
9. Base
10. Power cable

Safety Instructions

- This appliance is for indoor/household use only. Do not use outdoors.
- This appliance is not designed for commercial or industrial use; it is for household use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be closely supervised at all times to ensure that they do not play with the appliance.
- Only use the kettle out of the reach of children because the contents get very hot.
- Do not operate this appliance if the power cable or plug is damaged. If either is damaged, return it to Duronic for service or repair by a professional technician.
- Never try to replace the parts and repair the unit by yourself. Do not modify the appliance in any way that is not described in the instructions for use. The machine contains live parts. Repairs may only be carried out by Duronic, using original spare parts and accessories.
- If an extension lead/cable is needed to reach the appliance to a mains power socket that is too far away out of reach of the machine's accompanying cable, please ensure that:
 - the marked electrical rating of the extension lead is at least as great as the electrical rating of the appliance;
 - the extension lead is of the grounded type.
 - no other appliance is plugged into the same extension lead.
 - the extension cable is safely positioned to avoid it being pulled on by children or animals or being tripped over.

- Always operate the appliance on a dry, smooth, even and stable surface. Do not place the kettle on or next to a hot surface.
- Position the kettle and its power cable to the rear of the work surface, well out of reach of children.
- Take care that any steam escaping from the kettle might damage wallpaper, wall cabinets or other items positioned above it. Turn the spout away from furniture and walls.
- Disconnect the mains plug from the power socket if you are going to be absent for long periods.
- Never disconnect the plug by pulling on the power cable.
- Unplug from the mains plug outlet when not in use and before cleaning. Allow the appliance to cool down before cleaning the appliance.
- This appliance is not intended to be operated using an external timer or separate remote-control system.
- Do not let the power cable hang over the edge of the table or counter, or touch hot surfaces.
- Do not use the appliance for anything other than boiling water.
- Do not operate the kettle with wet hands.
- Do not overfill the kettle past the MAX line. If the kettle is too full, some water may spill out. The maximum capacity of this kettle is 1.7L.
- Do not switch on the kettle if it is empty. Ensure that at the very least the water level reaches up to the MIN line.
- Never open the lid while the water is boiling.

- Do not move the kettle while it is switched on.
- Always remain vigilant when the appliance is on. Be careful of the steam coming out of the spout which is very hot.
- Rising steam can scald. Do not touch the steam emitted from the spout or the boiling water.
- During operation, the body of the kettle will be hot and may burn. Hold the kettle by the handle only.
- When pouring, keep a safe distance from the hot water and steam.
- Be careful to avoid any spillage on the connector during cleaning, filling or pouring.
- To clean, wipe the unit body with a well-wrung wet cloth. Do not submerge the kettle in water or other liquids.

**Warning:**

- The heating element surface is subjected to residual heat after use.
- If you do not use the kettle correctly you may be at risk of serious injury.

Before First Use

1. Remove all of the packaging materials. Check that there are no parts missing.
2. Clean the outside of the kettle body by wiping it with a wet well-wrung sponge or cloth.
3. Ensure that the spout filter is fitted in the spout properly.
4. Fill the kettle with 600ml water and 600ml vinegar (a ratio of 1:1 of water and vinegar). Switch on the kettle and bring it to the boil. Once boiled, allow to cool for few minutes and then empty into the kitchen sink.
5. Allow the kettle to cool down, then refill with fresh water and bring it to a boil again. Once boiled, empty the water out into the sink. Repeat this step two more times.

Operating Instructions

1. Place your kettle onto your kitchen countertop positioned to the rear of the surface. Plug the power cable into the closest mains plug socket.
2. Press the lid release button(2)
3. Fill the kettle with the amount of water you require. Do not fill with more than 1.7 litres of water.
4. Close the lid by pressing the front of it down to click it into place.
5. Press the power button(6) to switch the kettle on. The power indicator will light up while the kettle works to boil the water. The switch will turn off automatically once the water has boiled. If you wish to stop the kettle before it has finished boiling the water, press the power button again to turn it off.
6. After the water has come to a boil, wait a moment until the water has stopped simmering. Then remove the kettle from the base.
7. Pour the water out slowly to avoid splashing. Do not open the lid while pouring out the water.

Using the Temperature Control Buttons

The EK42 kettle gives you the option to heat your water to four different temperatures: 40°, 60°, 80° and 100°.

To heat the water to boiling point (100°), simply press the power button and it will automatically heat the water up to this temperature.

To select one of the cooler temperatures (40°, 60° or 80°), simply press the power button to switch on the kettle, press the set temp button and then press the temperature button you require.

Using the Keep Warm Function

The keep warm button can be used to keep the hot water at the selected temperature of 40°, 60° or 80° for 30 minutes.

To use this function, press the power button to switch on the kettle, press the keep warm button and then press the temperature button you require.

Cleaning and Maintenance

- Unplug the kettle and allow it to cool down completely before cleaning it.
- Do not get the base or electric parts wet or submerge them in water or any other liquid.
- Do not use abrasive materials or chemicals to clean the kettle.
- Clean the outside of the kettle body by wiping it with a wet well-wrung sponge or cloth.
- To clean and descale inside the kettle, fill the kettle with 600ml water and 600ml vinegar (a ratio of 1:1 of water and vinegar). Plug in and switch on the kettle and bring it to the boil. Once boiled, allow to cool for few minutes and then empty into the kitchen sink.
- Allow the kettle to cool down, then refill with fresh water and bring it to the boil again. Once boiled, empty the water into the sink. Repeat this step two more times.

Warranty

1 Year Guarantee from Shine-Mart Ltd, Trademark owners of Duronic Products.

NOTE: THESE STATEMENTS DO NOT AFFECT YOUR STATUTORY RIGHTS AS A CONSUMER

This product has been manufactured under the strictest or quality control procedures, and using the highest quality of materials, to ensure excellent performance and reliability. It will give very good and long lasting service, provided it is properly used and maintained. The product is guaranteed for 1 years from the date of original purchase. If any defect arises due to a faulty materials or poor workmanship, the faulty product must be returned to the original place of purchase. Refund or replacement is at the discretion of that company.

Duronic Products are offered with a 1 year guarantee under the following conditions:

1. The product must be returned to the retailer with original proof of purchase.
2. The product must be installed and used in accordance with the instructions contained in this operating manual.
3. It must be used only for domestic purposes.
4. It does not cover wear and tear, malicious damage, misuse, neglect, inexpert repairs or consumable parts.
5. Shine-Mart Ltd has no responsibilities for accidental or consequential loss or damage.
6. Shine-Mart Ltd are not liable to carry out any type of servicing work, under the guarantee
7. Valid in the UK only



This product is fitted with CE:1363 plug and fuse
Imported by Shine-Mart Ltd, RM3 8SB



Information on waste Disposal for Consumers of
Electrical & Electronic Equipment.

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment, (WEEE).

Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If customers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.

Follow Us



duronicon.com



[duronic](https://www.youtube.com/duronic)



[@duronicmedia](https://www.instagram.com/duronicmedia)



[Duronic](https://www.facebook.com/duronic)



[@duronicmedia](https://twitter.com/duronicmedia)

DURONIC