 


DATE : 06 FEB., 2015 (R1)
 SC-0008/15
 JOB-00215-0006
 MODEL NO.: Z117-P2FM3U "DURONIC_RCD017"
 ENGLISH IM FOR APPROVAL
 SIZE : 100 (W) x 135 (H) MM (each page)
 MATERIAL : 80G WOODFREE PAPER
 PRINTING COLOR : BLACK

OPERATING INSTRUCTIONS

DURONIC

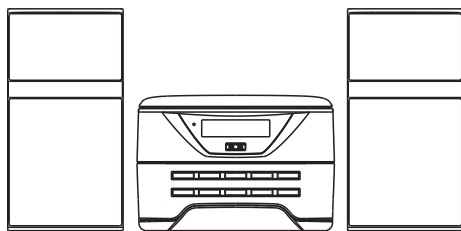

**DIGITAL MICRO
 CD-RADIO HI-FI SYSTEM
 MODEL : RCD017**



The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.

CAUTION
 RISK OF ELECTRIC SHOCK
 DO NOT OPEN

WARNING:
 To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



CAUTION:
 The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

WARNING:
 TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING LIQUIDS.

THE MAINS PLUG IS USED AS THE DISCONNECT DEVICE AND IT SHALL REMAIN READILY OPERABLE. TO COMPLETELY DISCONNECT THE POWER INPUT, THE MAINS PLUG OF THE APPARATUS MUST BE DISCONNECTED FROM THE MAINS COMPLETELY. THE MAINS PLUG SHOULD NOT BE OBSTRUCTED OR SHOULD BE EASILY ACCESSED DURING INTENDED USE.

PLEASE NOTE: YOU WILL FIND THE RATING LABEL FOR THIS PRODUCT LOCATED ON THE BOTTOM OF THE UNIT.



CAUTION
 DO NOT EXPOSE TO DRIPPING OR SPLASHING LIQUIDS!

CAUTION: GROUNDING OR POLARIZATION. THE PRECAUTIONS SHOULD BE TAKEN SO THAT THE WIDER BLADE OF THE AC PLUG MUST MATCH THE SLOT IN RECEPTACLE "WALL SOCKET".

NOTE: CAUTION SYMBOLS ARE PRINTED ON REAR OF UNIT. PLEASE REFER TO INSTRUCTION MANUAL.

CAUTION: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.

VORSICHT: UNSICHTBARE LASERSTRAHLUNG TRITTT AUS, WENN DECKEL GEÖFFNET UND WENN SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT IST. NICHT DEM STRAHL AUSSETZEN!

WARNING: OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRR ÄR URKOPPLAND. STRÅLEN ÄR FARLIG.

ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING. NÄR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDS/ETTELSE FOR STRÅLING.

ATTENZIONE: RADIONS LASER INVISIBILE. NON GUARDARE DIRETTAMENTE NELLA SORGENTE DEL LASER.

ACHTUNG: LASERLINSE NICHT BERÜHREN UNSICHTBARER LASERSTRAHL.

AVISO: A LENTE NUNCA DEVE SER TOCADA.



 
CLASS 1 LASER PRODUCT
 KLASSE 1 LASER PRODUKT
 LASER DE CLASSE
 LASER DI PRIMA CLASSE
 KLASSE 1 LASER
 LASER PRIMERA CLASE
 LASER CLASSE 1
 KLASSE 1 LASER PRODUKT

THE APPARATUS SHOULD NOT BE EXPOSED TO DRIPPING OR SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE APPARATUS.

THE MARKING AND RATING LABEL IS LOCATED AT REAR ENCLOSURE OF THE APPARATUS. UNDER THE INFLUENCE OF ELECTROSTATIC PHENOMENON, THE PRODUCT MAY MALFUNCTION AND USER TO POWER RESEI.

BATTERY SHALL NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.

CAUTION
 DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

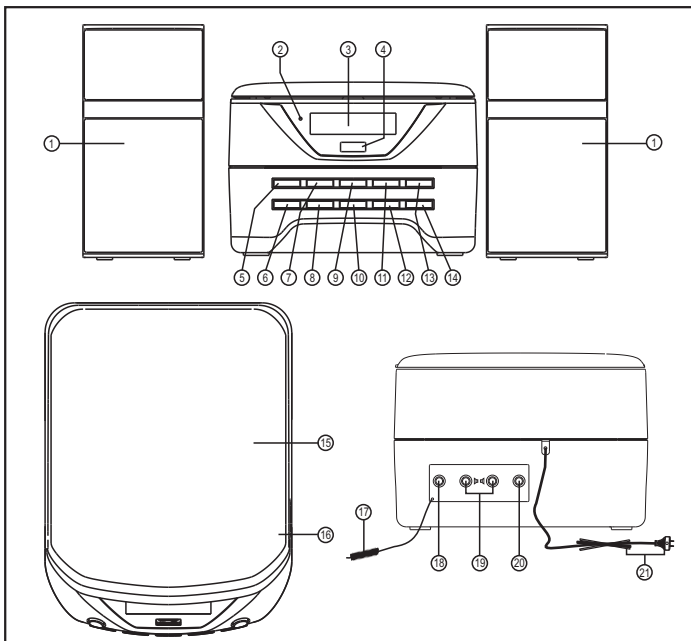

LOCATION OF CONTROLS

- | | |
|-------------------------------|--|
| 1. SPEAKERS (LEFT/RIGHT) | 12. BACK/ TUNE- KEY |
| 2. POWER LED LIGHT | 13. VOLUME + / CLOCK SET KEY |
| 3. LCD DISPLAY | 14. VOLUME - / ALARM SET KEY |
| 4. USB SOCKET | 15. CD DOOR |
| 5. ON/ STANDBY KEY | 16. CD DOOR FINGER-GRIP |
| 6. FUNCTION KEY | 17. FM-ANTENNA WIRE |
| 7. MEM./ PROG./ P-MODE KEY | 18. AUX INPUT SOCKET |
| 8. FM RECALL/ +10/ FOLDER KEY | 19. SPEAKER OUTPUT SOCKETS
(LEFT & RIGHT) |
| 9. PLAY/ PAUSE KEY | 20. HEADPHONE SOCKET |
| 10. STOP/ SNOOZE/ SLEEP KEY | 21. AC-CORD & PLUG |
| 11. NEXT/ TUNE+ KEY | |

E-3

POWER SUPPLY

- THIS SET WORKS ON NORMAL HOUSEHOLD AC-POWER.
- INSERT THE PLUG OF THE AC-CORD INTO A WALL OUTLET WITH AC-POWER.
- PRESS THE ON/ STANDBY KEY TO SWITCH "ON" THE UNIT.
- THIS UNIT IS DESIGNED TO OPERATE WITHOUT EVER BEING TOTALLY POWERED "OFF". IT WILL EITHER BE "ON" OR "STANDBY MODE".
- WHEN IN STANDBY MODE, YOU CAN USE THE ON/ STANDBY KEY TO SWITCH "ON" THE UNIT.
- TO CONSERVE ELECTRICITY, PLEASE SWITCH THE UNIT TO "STANDBY MODE" WHEN NOT LISTENING TO RADIO OR CD MUSIC.

CONNECTION OF SPEAKER BOXES

- UNWRAP THE SPEAKER-CORDS OF BOTH SPEAKER-BOXES AND INSERT THE LEFT/RIGHT PLUGS INTO SOCKETS IN THE REAR OF MAIN UNIT.
- PLACE THE SPEAKER BOXES AS FAR APART AS POSSIBLE FOR BEST SOUND EFFECT.

HEADPHONE JACK

- THIS UNIT IS EQUIPPED WITH A STEREO HEADPHONE JACK (3.5MM DIAMETER) WHICH ACCEPTS MOST STANDARD EARPHONES & HEADPHONES (NOT INCLUDED).
- WHEN THE PLUG OF A STANDARD STEREO HEADPHONE (OR EARPHONE) IS INSERTED INTO THIS JACK, THE SPEAKERS WILL AUTOMATICALLY BE DISABLED.
- WHEN THE HEADPHONE/EARPHONE IS DISCONNECTED, THE SPEAKERS WILL BE RE-ACTIVATED.

INTELLIGENT POWER SAVING SYSTEM

 
- THIS SET HAS A BUILT-IN POWER SAVING SYSTEM WHICH WILL AUTOMATICALLY PUT THE SET INTO A "STANDBY MODE" TO REDUCE POWER CONSUMPTION WHEN IT DETECTS THAT THE SET IS NOT IN USE.
- THIS AUTOMATIC SWITCHING TO "STANDBY MODE" WILL HAPPEN APPROXIMATELY 10-15 MINUTES AFTER THE FOLLOWING CIRCUMSTANCES:
 - (A) "CD" MODE: CD PLAYBACK HAS STOPPED (eg. AT THE END OF A DISC).
 - (B) "AUX" MODE: NO INPUT SIGNAL IS DETECTED AT THE AUX INPUT JACK.
 - (C) "USB" MODE: USB PLAYBACK HAS STOPPED.
- TO RE-ACTIVATE THE UNIT AFTER IT HAS AUTOMATICALLY SWITCHED TO "STANDBY MODE", SIMPLY PRESS THE "ON/ STANDBY" KEY TO SWITCH ON THE UNIT.

E-4

DIGITAL CLOCK FUNCTION


HOW TO SET CORRECT TIME:

- THE SET HAS A BUILT-IN DIGITAL CLOCK, WHICH IS DISPLAYED WHEN THE UNIT IS IN "STANDBY MODE" OR WHEN YOU PRESS & HOLD [MEM./PROG.] KEY FOR TWO SECONDS DURING CD OR RADIO OPERATION.
- TO SET THE CORRECT TIME, FOLLOW THIS PROCEDURE:

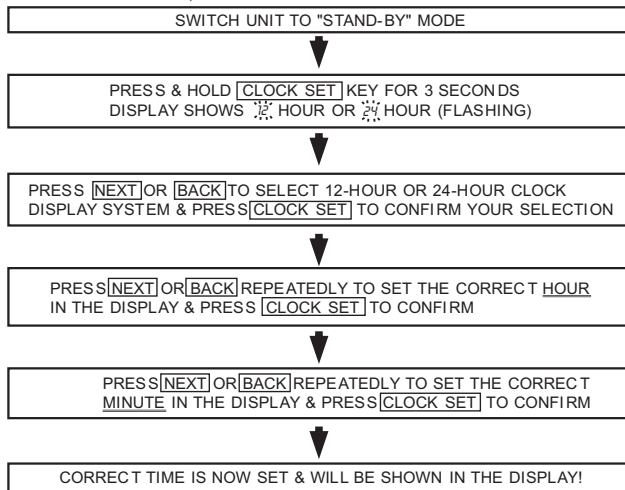

AUTOMATIC POWER OFF SLEEP FUNCTION

 - THIS SET HAS A SPECIAL SLEEP TIMER FUNCTION WHICH CAN AUTOMATICALLY SWITCH OFF THE UNIT. THIS IS USEFUL FOR SLEEPING TO MUSIC AT NIGHT.
- AT ANY TIME WHILE THE UNIT IS OPERATING, PRESS AND HOLD 2 SECONDS [SLEEP] KEY REPEATEDLY TO CHOOSE THE AUTOMATIC OFF TIME.



(*OFF MEANS SLEEP TIMER IS DEACTIVATED)

E-5

ALARM FUNCTION

- THIS SET HAS A TIMER FUNCTION TO ENABLE YOU TO PROGRAM THE UNIT TO AUTOMATICALLY SWITCH "ON" AT PRESET TIMES. THIS IS USEFUL AS A MORNING ALARM CLOCK :

HOW TO SET ALARM

SWITCH UNIT TO "STAND-BY" MODE.

1. PRESS AND HOLD [ALARM SET] KEY . THE [ALARM] SYMBOL APPEARS IN THE DISPLAY.
2. PRESS [NEXT] OR [BACK] TO ADJUST THE HOUR OF THE DESIRED "ON" TIME AND THEN PRESS [ALARM SET] KEY TO CONFIRM.
3. PRESS NEXT OR BACK TO ADJUST THE MINUTES OF THE DESIRED "ON" TIME AND THEN [ALARM SET] TO CONFIRM.
4. NOW THE DISPLAY WILL INDICATE THE "WAKE UP MODE" (RADIO/ CD/ USB/ BUZZ). PRESS NEXT TO CHOOSE THE DESIRED MODE & PRESS [ALARM SET] TO CONFIRM.
5. THE DISPLAY THEN SHOWS THE "WAKE UP VOLUME LEVEL" (LOUDNESS). PRESS BACK OR NEXT TO DECREASE OR INCREASE THE VOLUME LEVEL TO BE USED FOR THE MUSIC TO BE PLAYED WHEN THE TIMER SWITCHES ON THE UNIT AT THE PRE-SET TIME.
6. PRESS [ALARM SET] TO CONFIRM.
7. FINALLY THE UNIT WILL RETURN TO THE NORMAL DISPLAY, EXCEPT THAT THE [ALARM] SYMBOL WILL BE SHOWN, TO INDICATE THAT YOU HAVE PROGRAMMED A ON ALARM SETTING.
8. IN CASE YOU WISH TO DISABLE THE TIMER, PRESS THE [ALARM SET] KEY ONCE, & THE [ALARM] SYMBOL WILL DISAPPEARS.
9. THE ALARM WAKE UP TIMER WILL AUTOMATICALLY TUNE OFF AFTER AROUND AN HOUR.
10. AT ANY TIME DURING ALARM WAKE UP, SIMPLY PRESS THE [STANDBY] KEY TO STOP ALARM.

(NOTE : THE AUTOMATIC ON TIMER WILL SWITCH ON THE UNIT AS IF YOU HAVE MANUALLY PRESSED THE "ON/OFF" KEY. IF YOU HAVE SELECTED "WAKE TO RADIO", THE EXACT PRESET RADIO BAND & STATION WILL BECOME ACTIVATED WHEN POWER SWITCHES ON).

SNOOZE FUNCTION

- WHENEVER THE ALARM (TUNER (RADIO)/ CD/ USB) COMES ON, IT CAN BE TEMPORARILY SUSPENDED FOR A SHORT PERIOD OF 9 MINUTES, BY PRESSING THE "SNOOZE" KEY ONCE.
- THE ALARM (TUNER (RADIO)/ CD/ USB) WILL THEN AUTOMATICALLY COME ON AGAIN AFTER THE 9 MINUTES "SNOOZE" PERIOD HAS ENDED.
- THE PROCEDURE CAN BE REPEATED TO APPROXIMATELY AN HOUR.

ELECTRONIC VOLUME CONTROL

- THIS UNIT USES AN ELECTRONIC VOLUME CONTROL (PUSH BUTTON TYPE) .
- TO INCREASE OR DECREASE THE LOUDNESS OF UNIT, PRESS THE VOLUME UP (VOLUME +) OR VOLUME DOWN (VOLUME -) KEYS RESPECTIVELY.
- RELEASE THE KEY WHEN VOLUME LEVEL IS AT THE DESIRED LOUDNESS.
- SOMETIMES, ESPECIALLY DURING LISTENING TO THE RADIO, YOU MAY NOTICE A "CLICK-CLICK-CLICK" (REPEATING) SOUND WHEN YOU ARE INCREASING OR DECREASING THE VOLUME. THIS IS A NORMAL CONDITION & THE SOUND WILL DISAPPEAR WHEN YOU RELEASE THE VOLUME KEY (WHEN YOU REACH THE DESIRED VOLUME LEVEL).

E-6

OPERATION OF RADIO

- PRESS THE "ON/STANDBY" KEY ONCE TO SWITCH ON THE UNIT.
- PRESS THE [FUNCTION] KEY REPEATEDLY UNTIL THE DISPLAY SHOWS "FM".
- TO IMPROVE FM-RADIO RECEPTION, FULLY EXTEND THE FM-ANTENNA WIRE AND ADJUST IT'S POSITION.
- USE THE "PLAY/ PAUSE" KEY TO SELECT THE DESIRED MODE (FM MONO/STEREO). IN SOME CASES, WHERE RECEPTION IS POOR, IT MAY BE ADVISABLE TO SELECT "MONO" MODE, TO IMPROVE CLARITY OF THE RADIO SIGNAL.

MANUAL FREQUENCY ADJUSTMENT (SCAN MODE)

- PRESS (AND IMMEDIATELY RELEASE) THE [NEXT] KEY OR [BACK] KEY TO "SCAN" (MANUALLY ADJUST) THE RADIO FREQUENCY "UP" OR "DOWN" BY 1-STEP AT A TIME.
- THE RADIO DIGITAL DISPLAY WILL INDICATE THE EXACT FREQUENCY AT EACH STEP'S POSITION.
- WHEN A DESIRED FREQUENCY OR STATION IS REACHED. IT CAN BE SAVED INTO ONE OF THE "MEMORY" POSITIONS. (SEE "RADIO MEMORY" SECTION).

AUTOMATIC FREQUENCY ADJUSTMENT (SEEK MODE)

- PRESS AND HOLD (FOR 2 SECONDS) THE [NEXT] OR [BACK] KEYS TO "SEEK" (AUTOMATICALLY ADJUST) THE RADIO FREQUENCY "UP" OR "DOWN" TO THE NEXT AVAILABLE RADIO STATION.
- THE RADIO DIGITAL DISPLAY WILL INDICATE THE EXACT FREQUENCY OF THE NEXT STATION THAT IS FOUND.
- WHEN A DESIRED STATION IS REACHED. IT CAN BE SAVED INTO ONE OF THE "MEMORY" POSITIONS. (SEE "RADIO MEMORY" SECTION).

RADIO MEMORY (STATION PRESET MEMORY STORAGE)

- AT ANY TIME, THE CURRENTLY DISPLAYED STATION OR FREQUENCY CAN BE STORED INTO ONE OF THE MEMORY POSITION.
- PRESS [MEM./PROG.] KEY ONCE.
- PRESS [NEXT] OR [BACK] KEY TO SELECT DESIRED MEMORY POSITION. (THERE ARE 30 MEMORY POSITIONS).
- PRESS [MEM./PROG.] KEY ONCE TO SAVE THE SELECTED STATION INTO THE SELECTED MEMORY POSITION.
- TO RECALL ANY SAVED MEMORY, SIMPLY PRESS THE [FM RECALL] KEY, THE SAVED RADIO-BAND WILL BE RECALLED.
- TO CLEAR THE MEMORY OF ANY POSITION, SIMPLY SAVE A NEW STATION TO THE SAME MEMORY POSITION.

INSERTION & REMOVAL OF DISCS

- WHEN OPENING THE CD-DOOR, ALWAYS ENSURE THE DISC IS NOT IN MOTION (NOT SPINNING) WHEN YOU OPEN THE CD-DOOR. ALWAYS PRESS "STOP" BUTTON TO STOP THE DISC SPINNING FIRST.
- PLACE A CD INTO THE COMPARTMENT WITH THE LABEL-SIDE (PRINTED SIDE OF DISC) FACING UPWARDS. PRESS DOWN IN THE CENTER PART OF DISC UNTIL THE DISC "LOCKS" ONTO THE CENTER SPINDLE.
- WHEN THE CD HAS BEEN PLACED ONTO THE CENTER SPINDLE, GENTLY LOWER THE CD-DOOR DOWNWARDS UNTIL IT LOCKS SHUT.
- THE CD IS NOW READY TO BE PLAYED.

- TO REMOVE A DISC, FOLLOW THE SAME PROCEDURE AS DESCRIBED ABOVE, EXCEPT TO REMOVE THE CD INSTEAD OF INSERTING IT INTO THE COMPARTMENT, BY PLACING ONE FINGER AT THE MIDDLE OF DISC (CENTER SPINDLE) & THE OTHER AT THE EDGE OF THE DISC & GENTLY PULLING UPWARDS.
- IMPORTANT : ALWAYS HOLD A CD BY ITS EDGES. AVOID GETTING ANY FINGER PRINTS, SMUDGES OR DIRT ONTO THE SURFACE OF A DISC. IN CASE THIS HAPPENS, USE A SPECIAL CD-CLEANING CLOTH OR CLEANING KIT TO REMOVE THE DIRT OR SMUDGES.

NORMAL CD OPERATION

- PRESS "ON/STANDBY" KEY TO SWITCH ON THE UNIT.
- INSERT A CD AS DESCRIBED.
- PRESS THE "FUNCTION" KEY REPEATEDLY UNTIL THE DISPLAY SHOWS "CD"
- THE DISK WILL START SPINNING & THE FIRST SONG (TRACK) WILL START PLAYING. THE DISPLAY WILL INDICATE THE CURRENT TRACK NO.
- AT ANY ANYTIME DURING PLAYBACK, PRESS THE [PLAY] KEY TO PAUSE OPERATION OF THE UNIT. PRESS [PLAY] KEY TO RESUME OPERATION AT THE SAME TRACK & POSITION.
- AT ANYTIME DURING PLAYBACK, PRESS THE [STOP] KEY TO STOP OPERATION OF THE SET. THIS WILL RESET THE SET TO THE FIRST TRACK (IF YOU PRESS PLAY AFTER STOP, THE FIRST TRACK WILL ALWAYS START PLAYING).
- AT ANYTIME DURING PLAYBACK, PRESS AND RELEASE THE [NEXT] OR [BACK] KEYS TO SKIP FORWARD OR BACKWARDS BY ONE TRACK, AS DESIRED.
- ANY ANYTIME DURING PLAYBACK, PRESS AND HOLD THE [NEXT] OR [BACK] KEYS TO FAST-FORWARD (CUE) OR FAST-REVERSE (REVIEW) THE SPECIFIC TRACK, WHICH IS CURRENTLY PLAYING.

PROGRAMMING THE CD-PLAYER

- THE CD PLAYER CAN BE PROGRAMMED TO PLAY ANY SEQUENCE OF UPTO 20 TRACKS FOR REGULAR CD-AUDIO DISCS & 99 TRACK FOR MP3, AS DESIRED.
- ALWAYS PRESS THE STOP [■] KNOB BEFORE STARTING THE PROGRAMMING.
- PRESS THE [MEM./PROG.] KEY, THE DISPLAY WILL SHOW A [MEMORY] SYMBOL AND THE DISPLAY WILL SHOW " P01 ", TO INDICATE THAT THE SET IS NOW IN "MEMORY PROGRAMMING MODE", AT MEMORY POSITION NO. 1.
- PRESS THE NEXT/BACK KEYS [◀] OR [▶] TO SELECT THE TRACK (SONG) NUMBER YOU WISH TO BE STORED IN THE FIRST MEMORY (PROGRAM) POSITION, AND PRESS THE [MEM./PROG.] KEY TO CONFIRM YOUR SELECTION.
- WHEN YOU PRESS [MEM./PROG.] KEY THE DISPLAY WILL ADVANCE TO THE NEXT MEMORY POSITION NUMBER (EG. " P02 " FOR 2ND POSITION).
- REPEAT THE PREVIOUS 2 STEPS, EACH TIME SELECTING ANY TRACK NUMBER OF YOUR CHOICE TO BE STORED IN THE SUCCESSIVE MEMORY (PROGRAM) POSITIONS.
- AFTER EACH TRACK NUMBER, REMEMBER TO PRESS THE [MEM./PROG.] KEY.
- AFTER A MAXIMUM OF 99 SONGS (OR LESS) HAVE BEEN SELECTED AS DESCRIBED ABOVE, PRESS THE PROGRAM KNOB.
- ALSO, THE [MEMORY] SYMBOL WILL REMAIN "ON" TO INDICATE THAT YOU HAVE SAVED A PROGRAM-MEMORY (SEQUENCE).
- PRESSING PLAY [▶] WILL NOW PLAY BACK THE "SAVED SEQUENCE" IN THE PROGRAM MEMORY.
- PRESSING NEXT/ BACK WILL MOVE TO THE NEXT OR PREVIOUS SONG IN THE SAVED SEQUENCE.
- TO CLEAR (CANCEL) THE ENTIRE PROGRAM WHICH IS STORED IN THE MEMORY, SIMPLY PRESS "STOP" [■] TWICE, OR SWITCH "OFF" THE SET.

HOW TO PLAY MP3 DISCS

- INSERT A MP3 DISC INTO THE PLAYER AND CLOSE THE CD DOOR.
- PRESS "ON/ STANDBY" KEY TO SWITCH ON THE UNIT.
- PRESS THE "FUNCTION" LEY REPEATEDLY UNTIL THE DISPLAY SHOW "CD".
- THE DISK WILL SPIN AND PERFORM A FULL CHECK OF THE DISC TO COUNT THE TOTAL NUMBER OF SONGS. THEN PLAYBACK OF THE FIRST SONG (TRACK) WILL BEGIN AND THE DISPLAY WILL INDICATE THE CURRENT TRACK NO: (001).
- IF YOUR DISC HAS "FOLDER" (SEE BELOW) THE DISPLAY WILL SHOW THE FOLDER NUMBER (eg. F01, etc..) EVERY 5 SECONDS.
- AT ANY TIME DURING PLAYBACK, PRESS AND RELEASE **[◀◀]** OR **[▶▶]** TO SKIP BACKWARDS OR FORWARDS BY ONE TRACK.
- MP3 DISCS OFTEN CONTAIN GROUPS OF SONGS OR SEVERAL "FOLDER" (SUB DIRECTORIES), YOU CAN USE THE **+10/ FOLDER** KEY TO QUICKLY JUMP TO A PARTICULAR SONG.
 - PRESS AND RELEASE THE **+10/ FOLDER** KEY = SKIP +10
 - PRESS AND HOLD THE **+10/ FOLDER** KEY = REPEATEDLY TO CHOOSE THE FOLDER
- EACH TIME YOU PRESS THE **+10/ FOLDER** , THE PLAYER JUMPS TO THE FIRST SONG IN THE NEXT FOLDER. (THE DISPLAY WILL ALTERNATE BETWEEN THE SONG NUMBER & THE FOLDER NUMBER EVERY 5 SECONDS).
- (NOTE: THE "FOLDER" FUNCTION ONLY WORKS ON MP3-DISCS WHICH HAVE FOLDERS.

USB-DRIVE MP3 PLAYBACK

- THIS UNIT IS EQUIPPED WITH A USB SOCKET WHICH CAN ACCEPT AND PLAY MP3 FILES STORED ON STANDARD USB FLASH DRIVES (ALSO KNOWN AS "PEN DRIVES") WHICH ARE FOR MEMORY STORAGE. (COMPATIBLE WITH USB VERSION 1.1 & 2.0).
- TO UTILIZE THIS FACILITY, FIRST INSERT EITHER A USB-DRIVE INTO THE SLOT (PORT).
- PRESS THE FUNCTION KEY REPEATEDLY UNTIL THE DISPLAY SHOWS "USB".
- AFTER ABOUT 5-10 SECONDS THE DISPLAY WILL INDICATE THE NUMBER OF MP3 SONGS FOUND ON THE USB-DRIVE , AND ALSO THE NUMBER OF FOLDERS ON THE DEVICE.
- PRESS THE **+10/ FOLDER** KEY REPEATEDLY TO SELECT THE DESIRED FOLDER NUMBER.
- PRESS **[NEXT]** OR **[BACK]** TO SKIP FORWARD OR BACKWARDS TO SELECT THE DESIRED MP3 FILE IN THE SELECTED FOLDER.
- PRESS **[PLAY/PAUSE]** TO START PLAY BACK OF THE SELECTED SONG.
- ALL FUNCTIONS FOR USB-DRIVE ARE EXACTLY THE SAME AS IN CD-MP3 MODE (AS PREVIOUSLY DESCRIBED).

NOTE:

ALTHOUGH THIS PRODUCT IS FULLY COMPATIBLE WITH USB 1.1 & 2.0 STANDARDS, A SMALL PERCENTAGE (ABOUT 5%) OF USB FLASH DRIVES MIGHT NOT BE READABLE, DUE TO THOSE USB-DRIVE MANUFACTURERS NON-COMPLIANCE WITH THE FULL (OFFICIAL) USB 1.1 / 2.0 STANDARDS.

 



THE READING TIME FOR A USB-DRIVE VARIES DEPENDING ON THE SPEED OF THE MEMORY DEVICE AND THE NUMBER OF SONGS AND FOLDERS. IN SOME CASES THE READING TIME MAY BE AS LONG AS 60 SECONDS.

IMPORTANT

ALWAYS SWITCH OFF THE UNIT OR CHANGE MODE TO "CD" OR "RADIO" BEFORE REMOVING A USB FLASH DRIVE, TO PREVENT DAMAGE TO YOUR USB DEVICE.

REPEAT PLAYBACK FUNCTION

- AT ANYTIME DURING PLAYBACK, PRESS **[P-MODE]** KEY REPEATEDLY TO SELECT:

-  = TO REPEAT THE CURRENT TRACK
-  ALL = TO REPEAT ALL TRACKS (FULL CD)
-  FOLDER = TO REPEAT ALL SONGS FROM CURRENTLY SELECTED FOLDER(DIRECTORY)
-  = TO PLAY SONGS IN A RANDOM ORDER (SHUFFLE)

USING THE AUDIO LINE IN CONNECTION (AUX-INPUT)

- YOU CAN CONNECT THE AUDIO OUTPUT OF AN EXTERNAL DEVICE SUCH AS A MP3 PLAYER TO THIS UNIT, TO LISTEN TO THE SOUND OF THAT DEVICE THROUGH THE HIGH QUALITY AMPLIFIER OF THIS MUSIC SYSTEM.
- TO CONNECT THE EXTERNAL DEVICE PLEASE USE THE STANDARD STEREO HEADPHONE (3.5MM TO 3.5MM PLUGS) CABLE TO CONNECT THE "HEADPHONE-OUT OR AUDIO LINE-OUT" OF THE DEVICE TO THE AUX-INPUT SOCKET OF THIS UNIT.
- PRESS THE FUNCTION KEY TO SELECT "AUX" MODE.
- MAKE SURE THAT THE SPEAKERS ARE CONNECTED TO THE MAIN UNIT.
- SWITCH ON THE POWER OF THE MAIN UNIT AND THE EXTERNAL DEVICE (eg. MP3-PLAYER).
- START PLAYBACK OF THE EXTERNAL DEVICE AND ADJUST THE VOLUME CONTROL OF THE MAIN UNIT TO THE DESIRED LEVEL.
- REMEMBER TO SWITCH OFF THE POWER OF THE MUSIC SYSTEM (MAIN UNIT) WHEN YOU ARE FINISHED USING THE EXTERNAL DEVICE.

SPECIFICATIONS

POWER SUPPLY : AC 100V-240V ~ , 50/60Hz
POWER CONSUMPTION : 15W
SPEAKER : 2.5" x 2
FREQUENCY : FM 87.5- 108 MHz

1 Year Guarantee from Shine-Mart Ltd, Trademark owners of Duronic Products.

NOTE: THESE STATEMENTS DO NOT AFFECT YOUR STATUTORY RIGHTS AS A CONSUMER

This product has been manufactured under the strictest or quality control procedures, and using the highest quality of materials, to ensure excellent performance and reliability. It will give very good and long lasting service, provided it is properly used and maintained.

The product is guaranteed for 1 years from the date of original purchase. If any defect arises due to a faulty materials or poor workmanship, the faulty product must be returned to the original place of purchase. Refund or replacement is at the discretion of that company.

Duronic Products are offered with a 1 year guarantee under the following conditions:

1. The product must be returned to the retailer with original proof of purchase.
2. The product must be installed and used in accordance with the instructions contained in this operating manual.
3. It must be used only for domestic purposes.
4. It does not cover wear and tear, malicious damage, misuse, neglect, inexpert repairs or consumable parts.
5. Shine-Mart Ltd has no responsibilities for accidental or consequential loss or damage.
6. Shine-Mart Ltd are not liable to carry out any type of servicing work, under the guarantee
7. Valid in the UK only



This product is fitted with BS:1363 plug and 3AMP fuse
Imported by Shine-Mart Ltd, RM3 8SB

Information on waste Disposal for Consumers of Electrical & Electronic Equipment.



This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment, (WEEE).

Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If customers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.