

Battery Charger Supplemental Instruction.

To charge/recharge the battery:

1. Remove the battery from the drive end housing of the reel.
2. Attach the red alligator clip of the charger to the **red terminal (+)** of the battery.
3. Attach the black alligator clip of the charger to the **black terminal (-)** of the battery.
4. Plug the charger into a standard 115/120-volt wall outlet.
5. The charger is equipped with a charge indicator light that will change color from orange to green when the battery is fully charged.
6. Excessive overcharging or undercharging may damage the battery and limit its life.

