
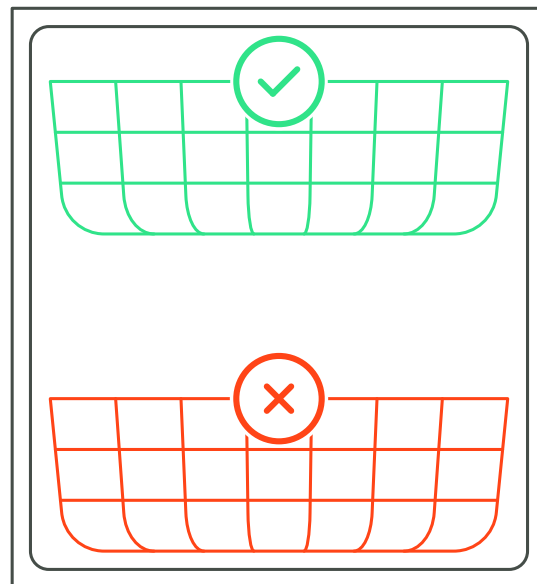


## HOW TO CLEAN YOUR SMART COOKER

Clean up is as easy as cooking your meal. Your lid, inner pot, gasket, steam basket, steam rack, and condensation cup are all top-rack dishwasher safe. We recommend that you remove the gasket from your lid before cleaning to ensure it gets squeaky clean.

**NOTE:** Please be sure the below parts are placed on the top rack of the dishwasher before running the cycle.

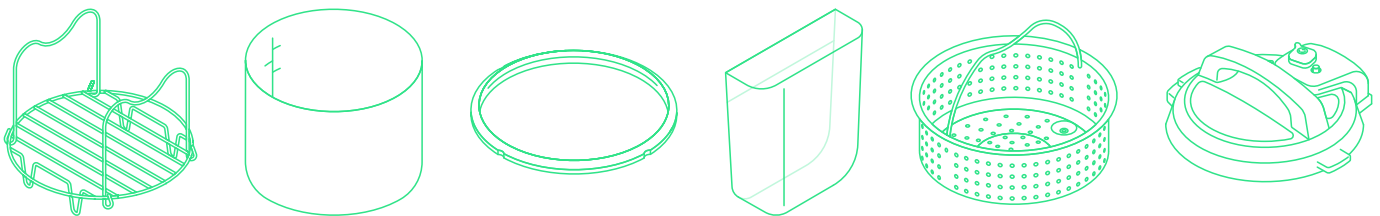

To clean the exterior of your Smart Cooker, we recommend wiping it down with a damp cloth!