 


Instruction Manual

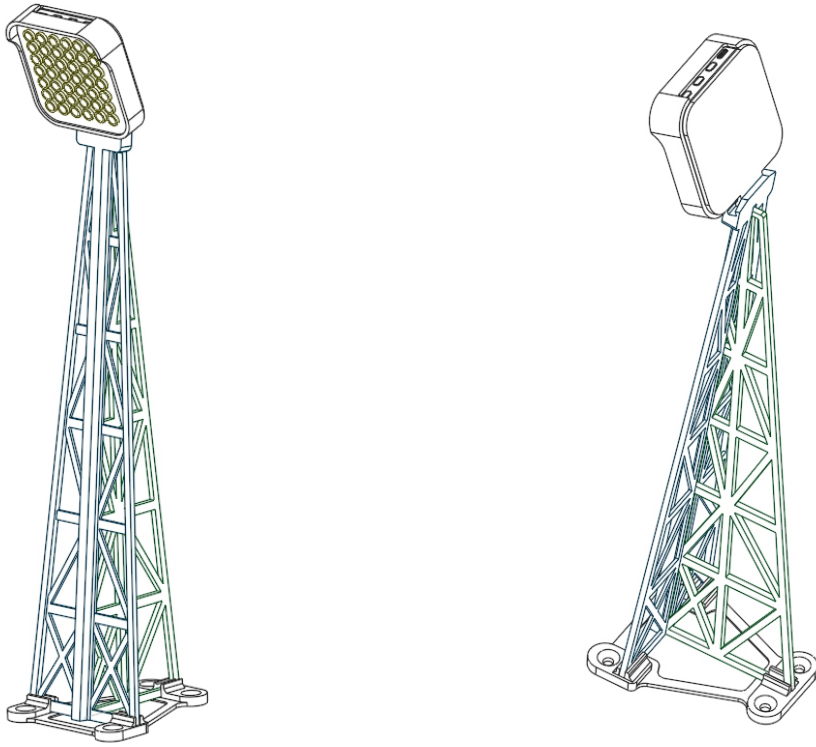 


Floodlight FX-42


Pack Contents

- 1. Led holder
- 2. Led head
- 3. Ring for Led and Facade
- 4. Facade
- 5. Floodlight construction parts

Features

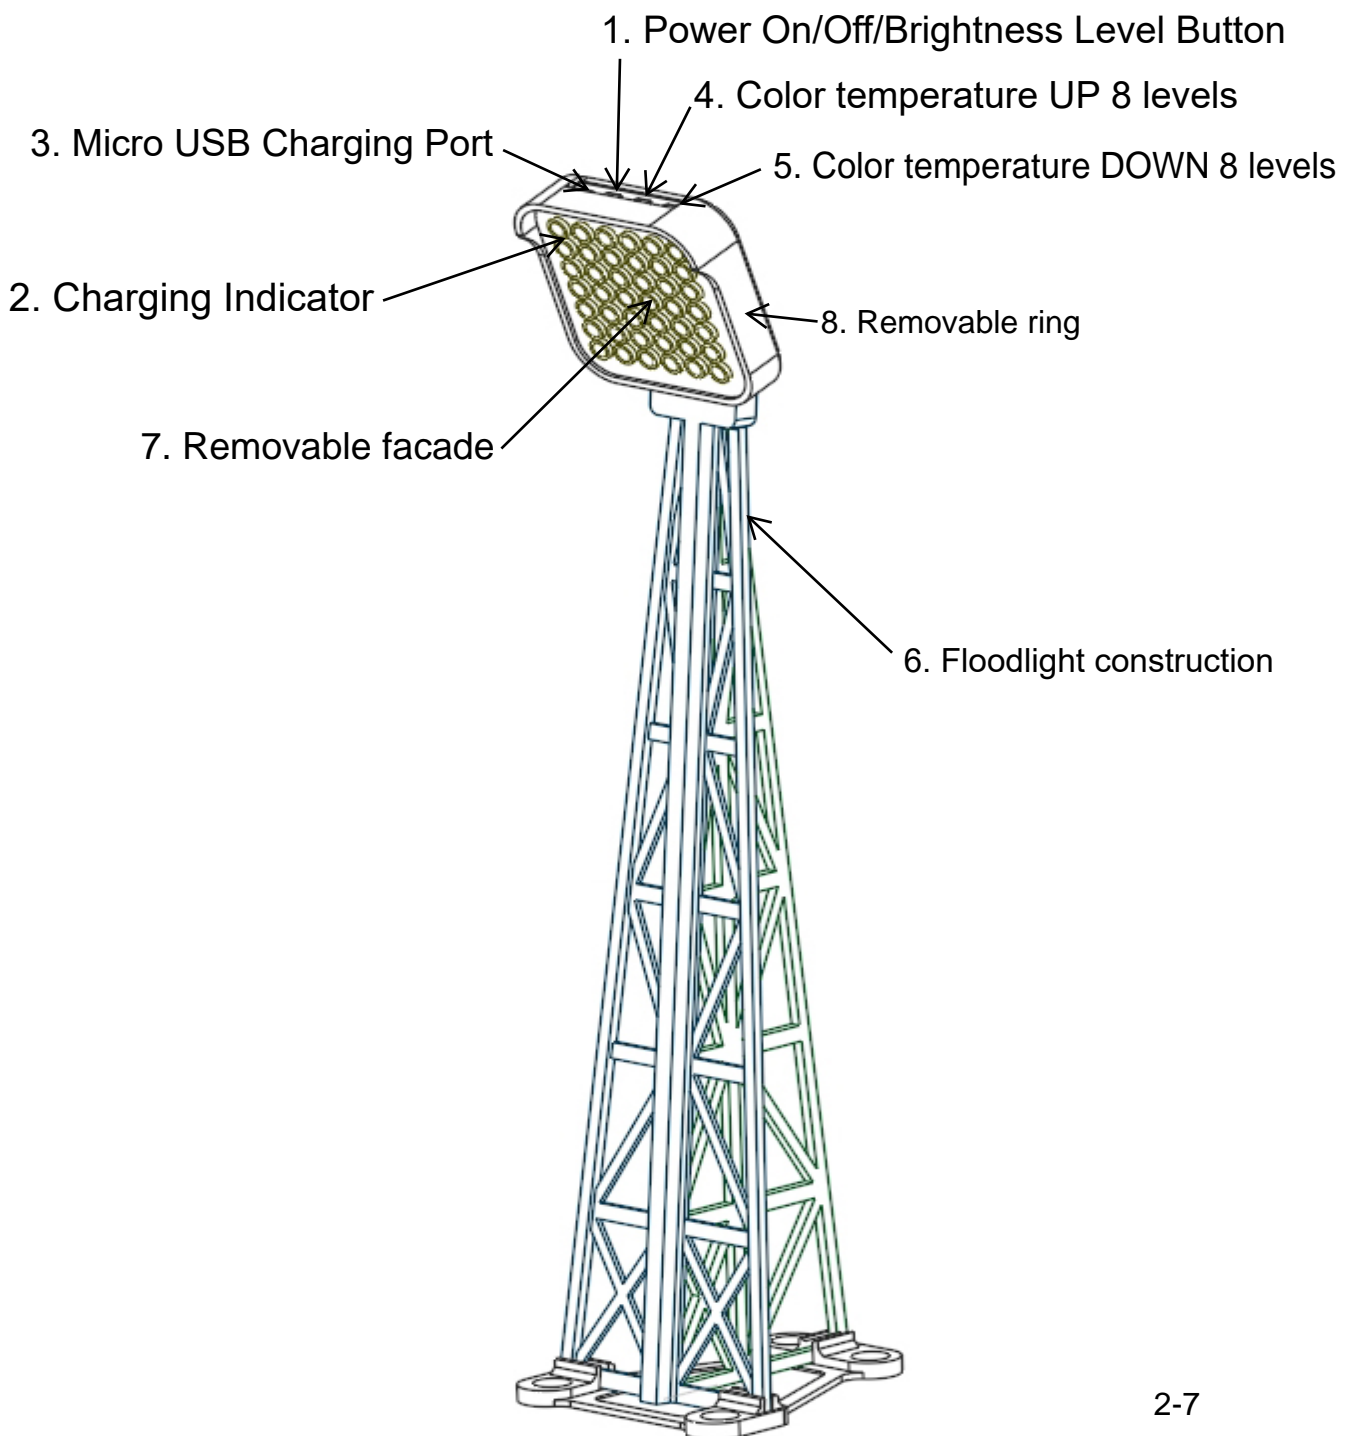

Charging

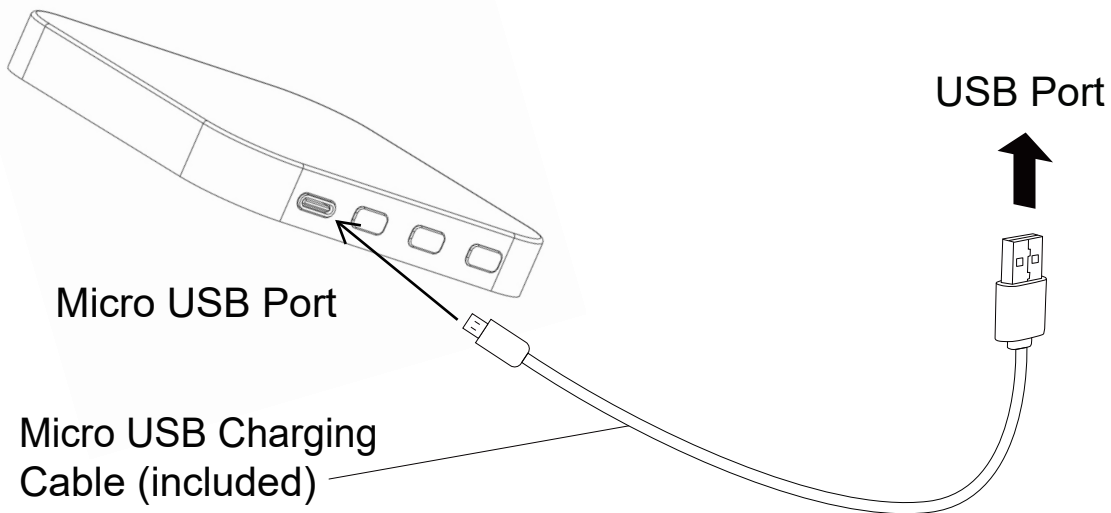 

1. Please charge your Floodlight when:
 - a. Power button is pressed and the light does not turn on.
 - b. Light emitted noticeably decreases during use.

Charging Instructions:

- a. Connect the Micro USB end of charging cable to the charging port on Floodlight.
- b. Connect the USB end of charging cable to a USB power port.
- c. When charging, the charging indicator light will illuminate in red.
Once fully charged, the red led light will turn green.

Product Specifications

LED Quantity: 42 pieces

Max Power: About 2W

Charging Voltage: DC5V

Continuous Light Max Brightness 35 min

 
 
 
Continuous Light Min Brightness 60 min

Battery: 300mAh - 3.7V

Installation and Usage Instructions

1. Decide when / if you want use the facade. With facade the Floodlight will give light only for decoration.
Leave the facade off when you want maximum illumination.
2. Put the LED head on to the holder, the magnetic ring will keep the head in its place.
3. Press On/Off Button for 3 seconds to turn on light.
4. The FX-42 has 3 brightness levels. To switch between the brightness levels use the On/Off Button.
 - a. Pressing this button once will turn on the floodlight to the first brightness level.
 - b. Pressing this button a second time will change the brightness to the second brightness level.
 - c. Pressing this button a third time will change the light to the third brightness level.
 - d. Pressing this button for three seconds will turn the light off.

Installation and usage facade

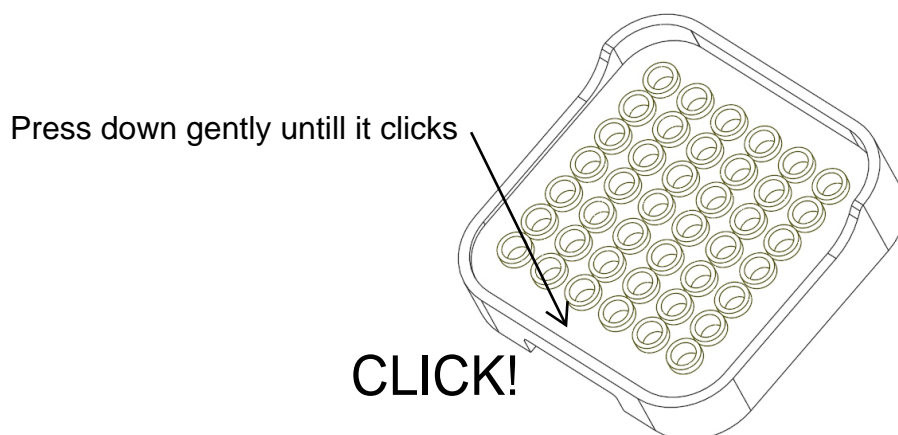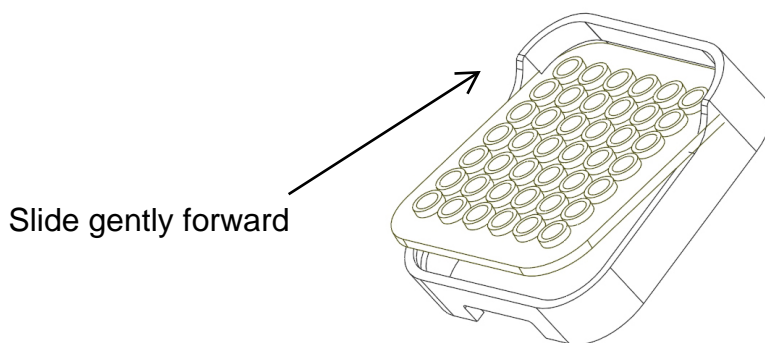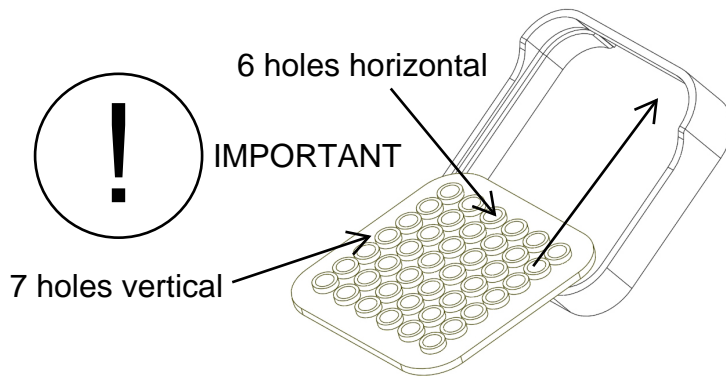

Please be aware: 3D printed items can break more easily than mold injected parts!

Warning

- Read manual carefully before using this product.
- Keep manual for future use of product.
- Ensure LED head is secured properly to the holder before using.
- Do not expose to water or use/store in a damp environment.
- Turn off when not in use.
- Clean by using a soft, dry cloth.
- Keep out of reach of children.

Warranty does not apply:

- to cosmetic damage;
- to damage caused by consumables used in connection with the product (such as batteries);
- where the product has not been used in accordance with all provided instructions;
- to damage arising from fair wear and tear;
- where the product has not been subject to reasonable use;
- where the product has been intentionally or negligently damaged; and/or
- if the customer has attempted to repair the product.

To make a claim under this warranty, please contact us:
subbuteostadium@outlook.com