



X107

MECHANOID

G A M I N G M E C H A N I C A L K E Y B O A R D

**USER'S
MANUAL**

Table of contents:

| | |
|----------------------------|----|
| Introduction | 2 |
| Setup and Operations | 2 |
| Product Overview | 3 |
| Button Functions | 4 |
| Specifications | 12 |
| Warnings | 13 |
| Problem solving | 13 |



Introduction

Thank you for choosing TBI Pro X107 Mechanoid gaming keyboard. This keyboard will surely give you a delightful and professional experience in running PC games. This manual contains instructions and illustrations to help you get the most of the keyboard. It is recommended that you read this manual before using it.

Package contents

1x USB computer keyboard

1x Palm Rest

1x User's Manual



 
Setup and operations

No additional software installation is necessary for your X107 Mechanoid Gaming Keyboard. This keyboard uses the Plug-and-Play functionality, so it is ready for use as soon as you plug it into a USB-compatible computer.

Your keyboard does not require any additional drivers. Always wait a few seconds after connecting to the computer to ensure that the connection has been established successfully. Your computer will automatically sync with your keyboard.



Product overview

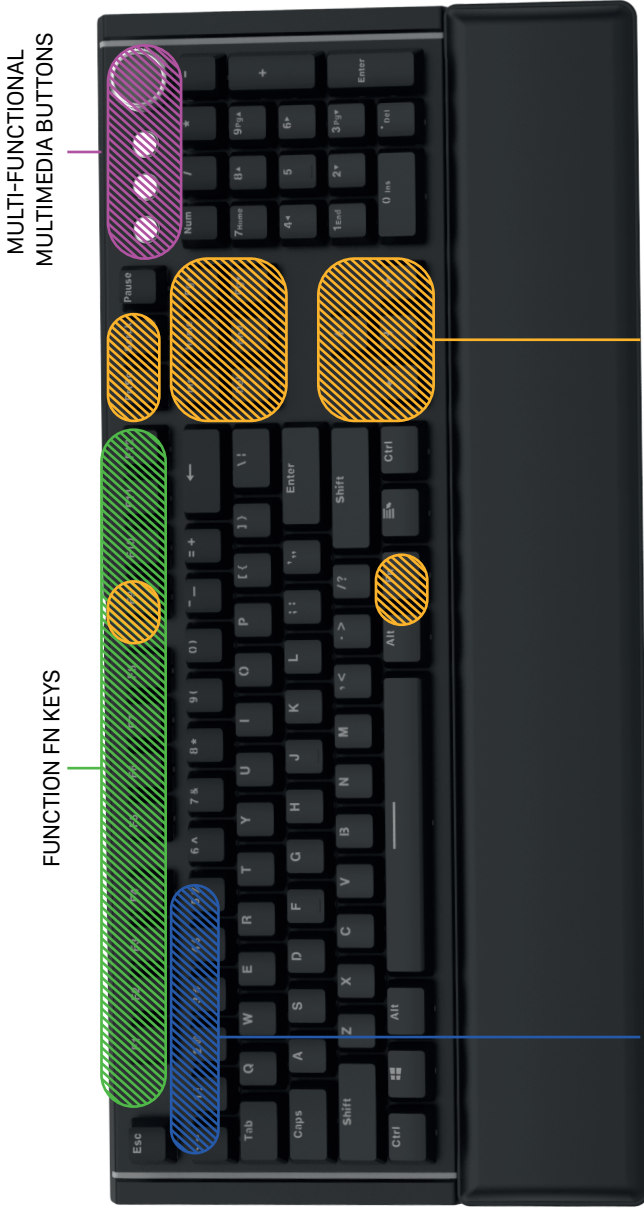

CUSTOMIZED BACKLIGHT MODES

RGB BACKLIGHT EFFECT AREA



 
Button Functions

The backlight functions as shown below:


KEYBOARD RGB BACKLIGHT CONTROL




RGB Backlight Effect Area




Switch backlight modes for keys

 


Increase backlight brightness

 


Decrease backlight brightness

 


Change backlight color
(forward)

 


Change backlight color
(backward)

 


Change backlight direction
(left)

 

Change backlight direction
(right)

 


Increase color flow rate

 


Decrease color flow rate

 
RGB Sidebar backlight




Switch backlight modes for sidebar

 

Change backlight color for sidebar

 


 Additional modes for sidebar backlight (forward)



Additional modes for sidebar backlight (backward)

 Customize backlight Effect Mode




Customize Backlight Editing Mode


Press FN+1 to customize backlight for CM1. Then press FN+Esc to enter recording mode, indicators (Caps, Win, ScrLk and Num) will be flashing for hint. Now you can press the keys you want to light up. The backlight color of each key will change in loop within 7 colors. Press FN+Esc to save the recording.

Remark:

 - CM2-CM5 work similarly to CM1e
- Caps Lock, Num Lock, Scroll Lock and Windows lock are not recordable



Customized backlight mode 4

 

Customized backlight mode 5

4 SEPARATE MULTIMEDIA KEYS AND FUNCTION KEYS

Multimedia Keys



 
Play/Pause
(Pauses/continues
the current track)



Previous
(Skips to previous
track)



Next
(Skips to next
track)


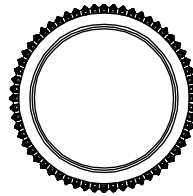


Volume
control knob


Turn knob to the left to decrease sound volume; turn to the right to increase it.

If you press the control knob, the sound will be muted. Press knob again to unmute.

  
Function (FN) Key

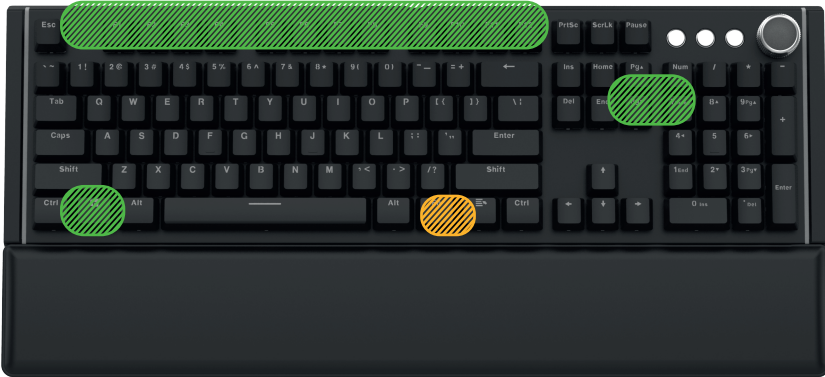

 
My computer
(Opens "My computer" window)



 
Web
(Opens your default Internet browser)




E-mail
(Opens E-mail service)

 

 
Calculator
(Opens the calculator program)




Stop
(Stops playing current track)

 


Previous
(skips to previous track)

 

 
Play/Pause
(Pauses/continues current track)




Next
(Skips to next track)

 


Volume Down
(Decreases volume level)

 


Volume Up
(Increases volume level)

 


Mute
(Disable/Enable sound)

 

Lock/unlock FN

 

Lock/unlock Win

 

Reset function

100% KEYS ANTI-GHOSTING MATRIX

TBI PRO X107 Mechanoid keyboard has no restrictions on the number of keys pressed simultaneously and processed by the computer. This means that each key, when pressed, is analyzed individually by the keyboard, and this process of receiving, processing, and transmitting a signal to the computer in no way interferes with signals simultaneously processed when you press any number of other keys. Such keyboards are also called "non-blocking", because you will never "confuse" the keyboard regardless of how many keys you press at once.

MECHANICAL TACTILE CLICKY

It is a professional backlit gaming mechanical keyboard for gaming and office, which boasts keycaps with an audible and pleasant pressing sound, and wear-resistant laser-engraved keys. The high-quality ABS keycaps are extremely durable with average expected lifespan of 100 keystrokes. This is a real mechanical keyboard and a perfect gaming accessory. Each button is adjusted precisely to provide quick and sensitive feedback with a soft touch.



Specifications

| | |
|------------------------------|---------------------|
| Type | Mechanical Keyboard |
| Top Case | Aluminum |
| Interface | USB |
| Keycaps Life Time | Keycaps Life Tim |
| Keycap Travel | 100 million times |
| Material | ABS + Aluminum |
| Cable Length | 5.9ft |
| Size | 18 x 5.5 x 1.5 in |
| Size (with palm rest) | 18 x 8.4 x 1.5 in |



Warnings

Never try to disassemble or modify the keyboard in any way or use it with incompatible computers. Doing so will void any warranty and may lead to irreversible damage to the device.



Problem Solving

Causes of problems and solutions.

One of the most well-known problems sounds like this:

THE KEYBOARD HAS STOPPED WORKING COMPLETELY OR PARTIALLY

Carefully inspect the USB connector. The fact is that the connector may be bent and, accordingly, it must be leveled, otherwise it will not work.

The next possible option is a kind of failure that occurred in the operating system. For such cases, there are two solutions to the problem. Disconnect the plug for a few seconds and reinsert it. If it does not help, you can restart the computer. After restarting the PC, the device starts working in 90% of cases.

It is recommended to try to connect the keyboard to another USB port and test its performance. Ideally, the performance of the keyboard is better to check on another PC or laptop.

THE RIGHT SIDE OF THE GADGET, WHERE THE NUMBERS ARE LOCATED, DOES NOT WORK

In fact, this side is connected on demand with the Num Lock button, which is located above the numbers. It is indicated by the corresponding “Num Lock” indicator above the Num Pad. This is done in order to not accidentally click number keys.

KEYS ARE PRESSED WITH DIFFICULTY

Sometimes various crumbs and other small items fall onto the keyboard. To get rid of them, the keyboard must be turned over and then purged with a keyboard cleaner. By the way, large crumbs can get under one of the keys and it will cease to function. In this case, it is enough to remove only one key, which, fortunately, is done very easily.

THE NEW COMPUTER DOES NOT SEE THE KEYBOARD

If you have just purchased a computer and have not used it yet, try logging in to the BIOS – perhaps keyboard support is disabled. In the BIOS menu, you need to find the point called USB Keyboard Support and change it from the Disabled to Enabled position.



Maintaining the keyboard

Dirty keyboard can be a source of many intestinal and other diseases. Based on the abovementioned, you should take care of the keyboard. Keyboard cleaning should be done using following tools:

1. Compressed air

A can of compressed air can be purchased at a hardware store. It just blows all the crumbs from your keyboard.

2. Microfiber cloth

Microfiber cloth is designed to wipe the dirt and dust in a much better way than with a napkin or the edge of a t-shirt. Clean the keyboard from time to time with it. Microfiber cloth can be found in any optics store.

3. A vacuum cleaner

From time to time, do a general cleaning of the workplace with a vacuum cleaner.

Remember: turn off the keyboard before before cleaning!



Operating tips regarding your keyboard

DO NOT EAT OVER THE KEYBOARD

Crumbs on the keyboard (between the keys) are also a common case that leads to the failure of the keyboard. The worst case is liquid spilled on the keyboard (tea, coffee, juice, etc.). In this case the probability of survival for your keyboard is really slim. The key advice is simply not to eat at the computer. No matter how neatly you do it, a cookie crumb or a drop of cola will still get on your keyboard.

TAKE CARE OF YOUR KEYBOARD

Do not hit the keys with all your might, no matter how exciting the computer game you play and how you hurry with typing. The speed of operation of the keyboard in no way depends on the strength of pressing its keys. It only breaks faster.

Once a week or two (depending on the intensity of use), clean your keyboard. It is better to care for the keyboard regularly than to think about how to fix the problems that arise.

If you have any questions, please

CONTACT US:



+1 800-674-9229
(Free to Call & Text)



support@tbi-pro.com
(Available 24/7)



Scan QR code
with camera to
Email US