
FLYSKY NOBLE NB4 FIRMWARE 2.0.93 MINI-Z RECEIVER UPDATE

Connect receiver CH4 signal to 'BIND' point (this is the receiver's mandatory update interface).

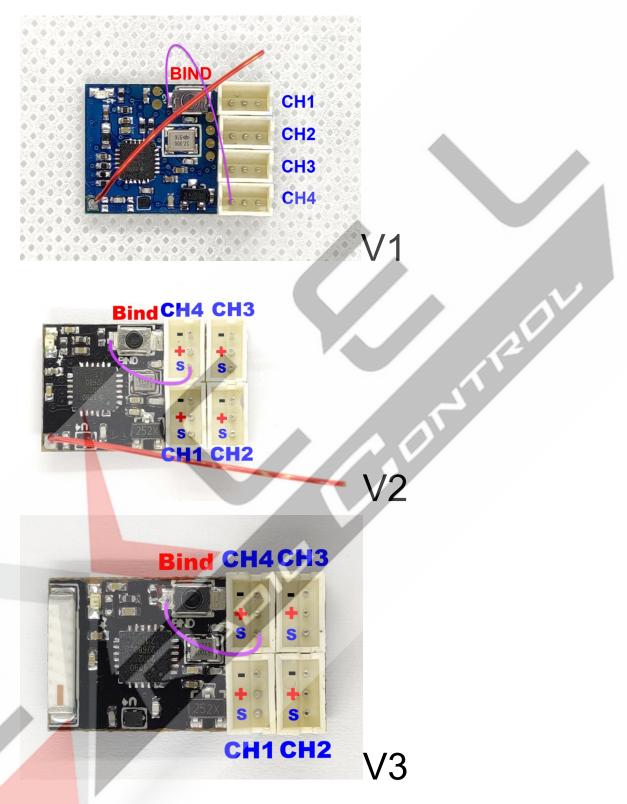

Power on the receiver, the receiver led will repeat 'flashing three times and lights out once'. On transmitter select 'RX SET' – 'Update Receiver', choose FGr4S/FGr4P, click 'Update'. The transmitter and receiver need the re-bind after the update is completed.