

EasyShoe Versa Grip Light Frequently Asked Questions

Q How is the Versa Grip sized?

A The Versa Grip comes in sizes that correspond to the widest part of the horse's hoof. Each Versa Grip shoe is 4mm different in size. Quickly measure a horse's hoof at the widest point and order a shoe that is slightly larger than the hoof measurement. For example, if your horse's hoof measures 132mm at the widest point, order a 134mm.

Q Are the shoes Front Pattern and Hind Pattern specific?

A Yes. The Versa Grip comes in front and hind patterns. The front and hind patterns allow for a better fit without modification.

Q How is the EasyShoe Versa Grip applied?

A The EasyShoe Versa Grip line can be applied with nails, glue, or casting.

Q What size nail and style nail do you recommend for application?

A E4 Slim for sizes (114-134) E5 Slim sizes for sizes (138-154).

Q How should the nails be applied?

A Even though this is a non-traditional shoe, its application is traditional. The nail holes may appear perpendicular to the correct orientation of the nail, but there is no need to apply the nails any differently from a traditional, steel or aluminum shoe.

Q How is the shoe shaped?

A The EasyShoe Versa Grip is not shaped by traditional means. The hoof shape is traced on the shoe and excess material is cut or sanded away for an exact fit. The EasyShoe Versa Grip can be narrowed with a hammer or opened with a shoe spreader. Although the shoe can be shaped, we anticipate most farriers will simply drop it on and shave away excess urethane material. There are only 4mm between each shoe size, which makes urethane removal quick and easy. The goal is to fit each hoof with little to no modification required to save farriers time and money.

Q Can a farrier nail through the urethane or should the urethane be predrilled?

A No predrilling needed on 5 of the 6 nail locations on the Versa Grip. 5 of the 6 nailing locations are open and for nailing. We did sneak an extra nail location in behind the clip that will need to be drilled if you choose to nail in that location.

Q How much material can be removed when shaping and can you grind away metal?

A Roughly 3mm of material can be removed from each side (6mm total). Removing 6mm will remove both urethane and metal. This is not an issue because the shoe is designed to have both urethane and metal removed. Sides will be smooth to the touch with no sharp edges. With 6mm removed, the nailing slots are still long enough for nailing.

Q The nailing slots are “open.” What does this mean?

A On traditional iron shoes the nailing location is roughly 10mm from the outside of the shoe. These locations are not always in the best location for the hoof. The EasyShoe Versa Grip has an open nailing position that allows the farrier to place the nail in the precise location.

Q What is the difference between the EasyShoe Versa Grip, EasyShoe Performance N/G and the EasyShoe Flex?

A The EasyShoe Performance N/G is the most flexible, The EasyShoe Flex offers the most hoof support and at the same time offers flexibility. The Versa Grip is rigid in the front half of the shoe and flexible in the rear. The Versa Grip is designed to drop on the hoof with the least amount of modification.

Q Can the EasyShoe Versa Grip be reset?

A Yes. The wide web design offers exceptional wear and resets are expected.

Q Can studs be used in the EasyShoe Versa Grip?


A Yes. EasyCare Quick Studs can be applied for added traction. The EasyShoe Versa Grip will come with and without threaded inserts.

Q Can I adjust breakover?

A Yes, it's easy to rasp or grind away material for a custom breakover.

How to Properly Measure Your Horse's Hoof

We cannot over stress the importance of resizing! You wouldn't go for a jog in ill-fitting sneakers, so why would you expect your horse to do the same?

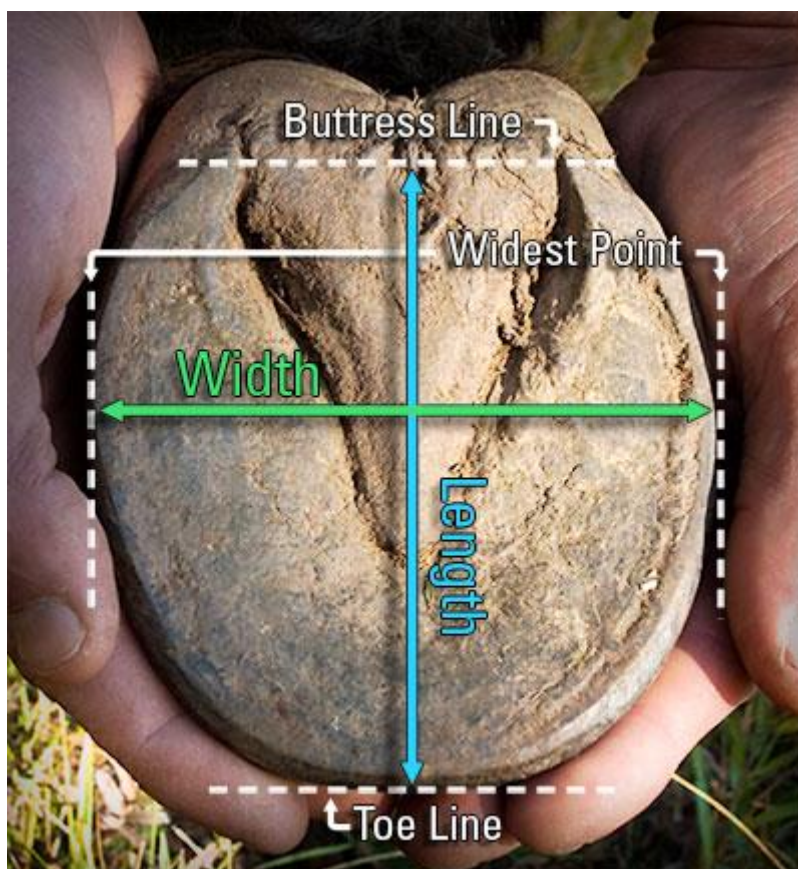

1. After a fresh trim, measure the width of the hoof across the bottom at the widest point.
 2. Measure the length of the hoof from the toe to the buttress line of the heel. The buttress line is the farthest weight bearing point of the heel where the hoof wall ends. Do not include the heel bulbs in the measurement.
 3. Compare your measurement with the appropriate size chart. Please note that each boot style has its own unique size chart.
 4. Ideally, the length and width measurement will fit into the same size. If the length and width measurements indicate different sizes, select the larger size. If the hoof measurements fall closely to the maximum length or width, we recommend choosing the next size up. If the width and length measurements are different by more than one size, your selected boot style is not recommended. * Be sure to check your measurements against an alternative boot in the EasyCare line—another style may accommodate your horse's hoof shape better.
- *Note: If you are fitting an Easyboot Glue-On or Glove, width and length must fall into the same size category.